


CBP INSTALLATION INSTRUCTIONS

CBP606006	60"*60"	1/4" (6mm)
CBP607006	60"*70"	1/4" (6mm)
CBP607606	60"*76"	1/4" (6mm)


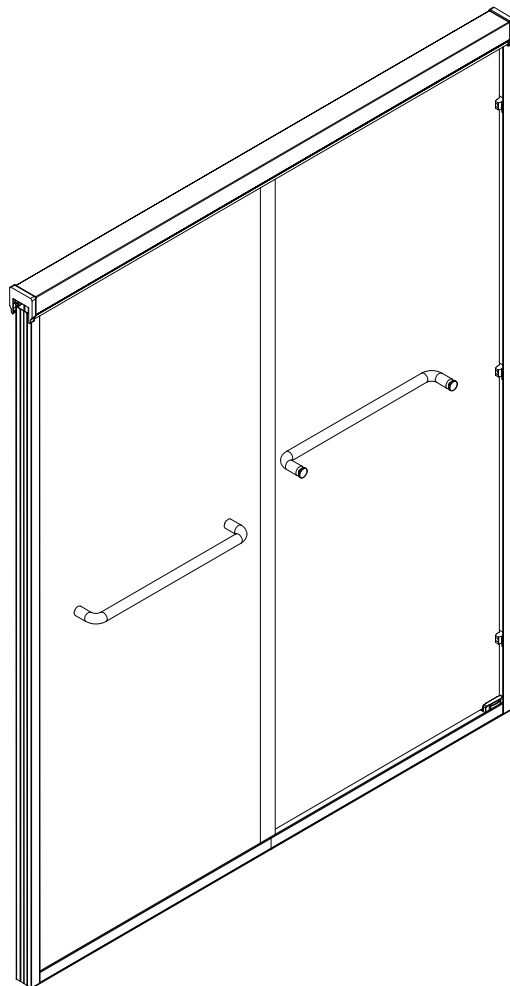


SAFETY PRECAUTIONS

This Installation Guide uses the following symbols to indicate important information. Always observe the instructions indicated by these symbols.


WARNING

Instructions that, if ignored, could result in death or serious personal injury caused by incorrect handling or installation of the product. These instructions must be observed for safe installation.

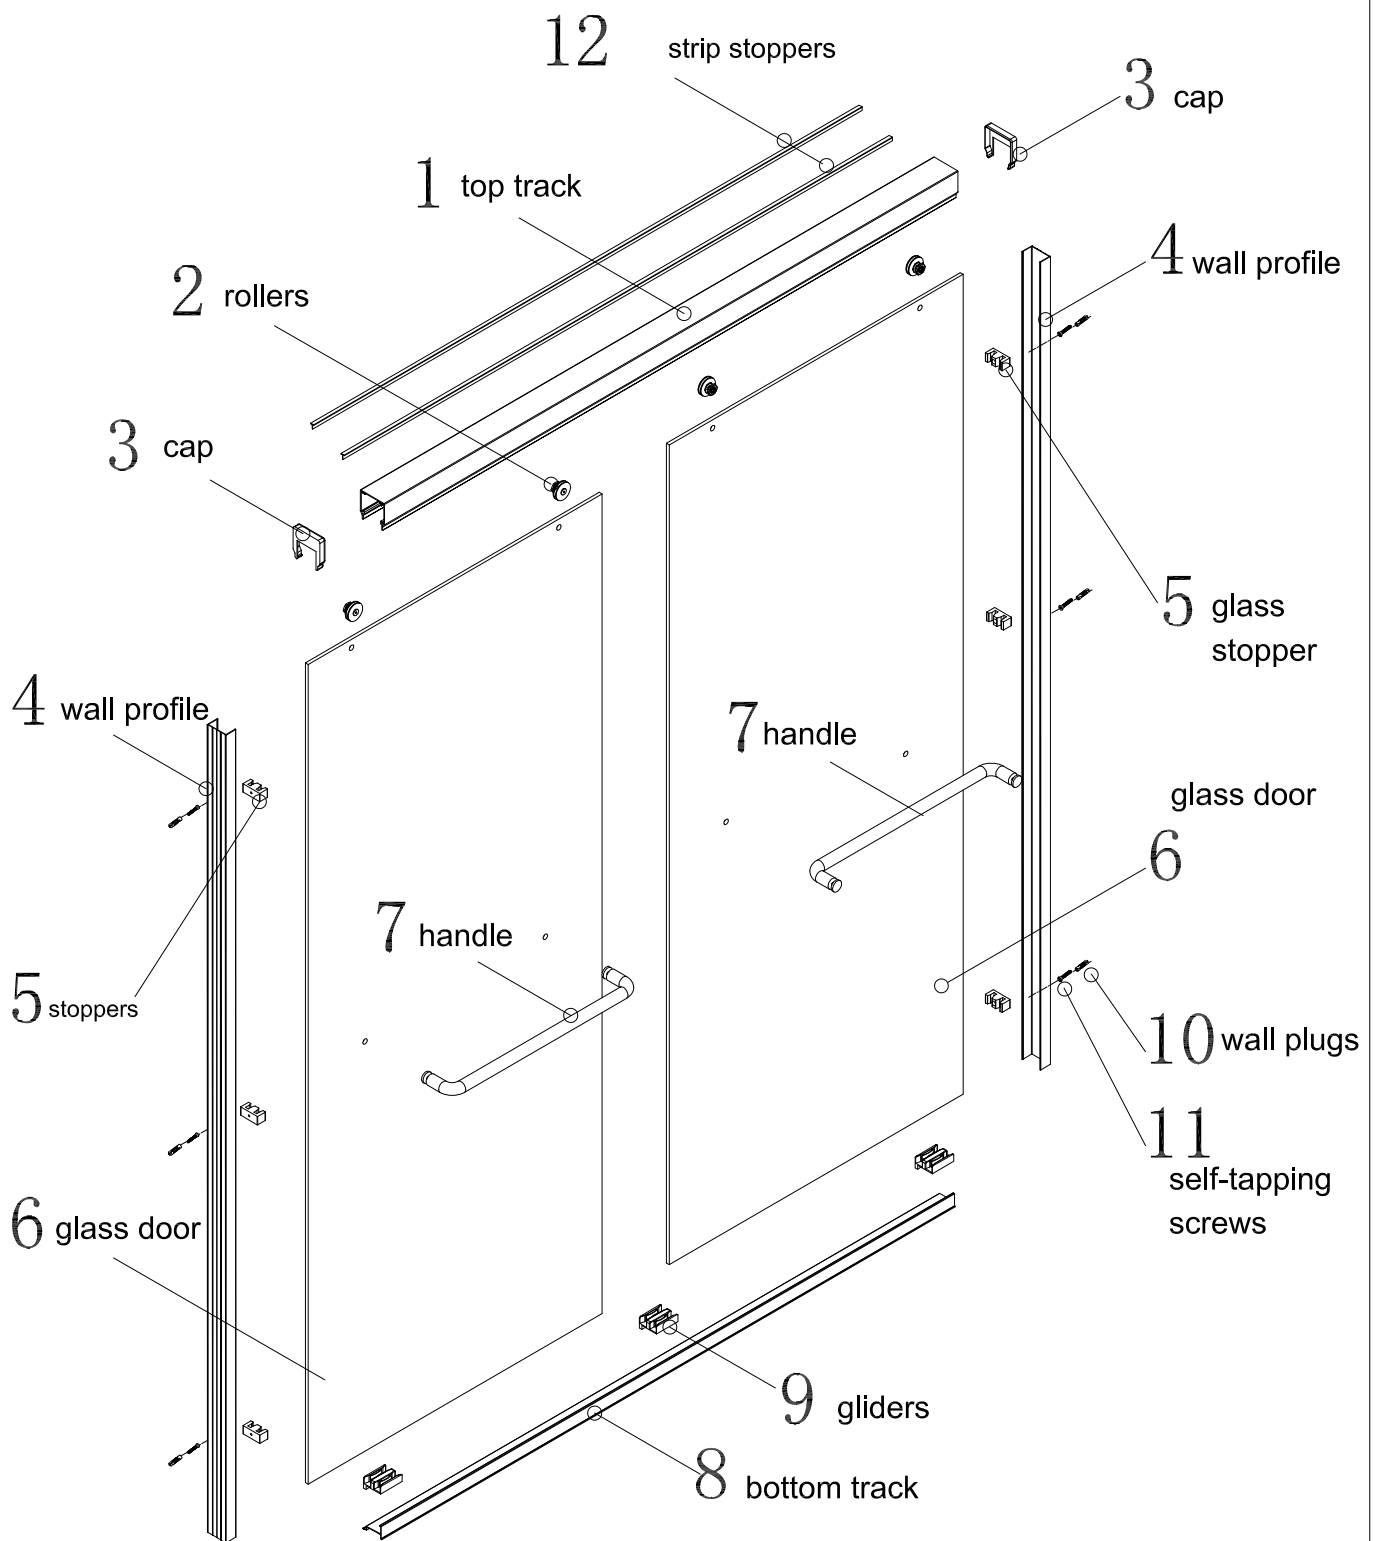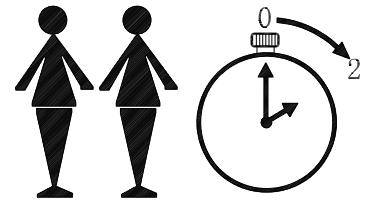













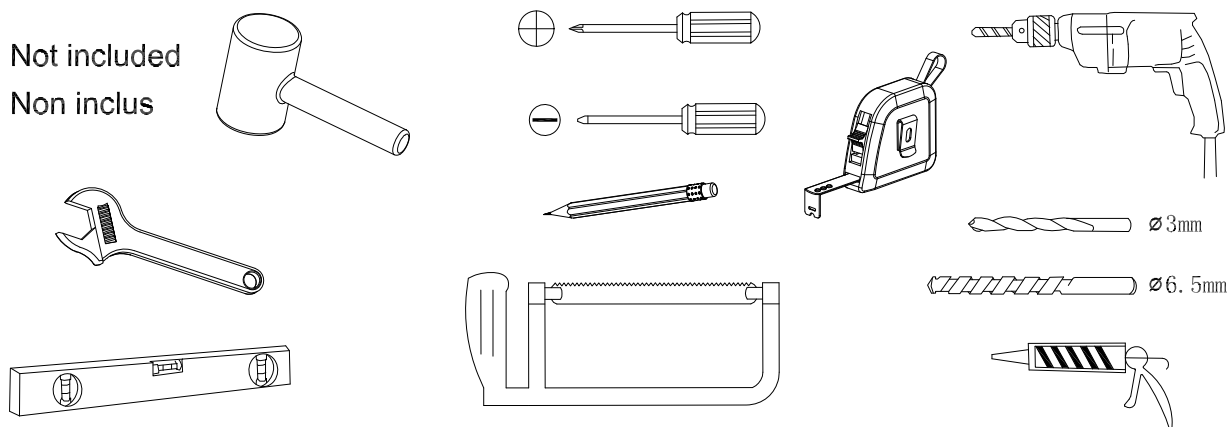
■ Not included

■ Non inclus





PARTS LIST

Number	Name	Picture	Quantity	Number	Name	Picture	Quantity
1	top track		1	9	gliders		3
2	rollers		4	10	wall plugs		6
3	caps		2	11	self tapping screws		6
4	wall profiles		2	12	strip stoppers		2
5	stoppers		6	13	allen key		2
6	glass door		2	14			
7	handles		2	15			
8	bottom track		1	16			

Step 1: Move the bottom track to the installation position.


Step 2: Insert the two wall profiles into each end of the bottom track respectively.

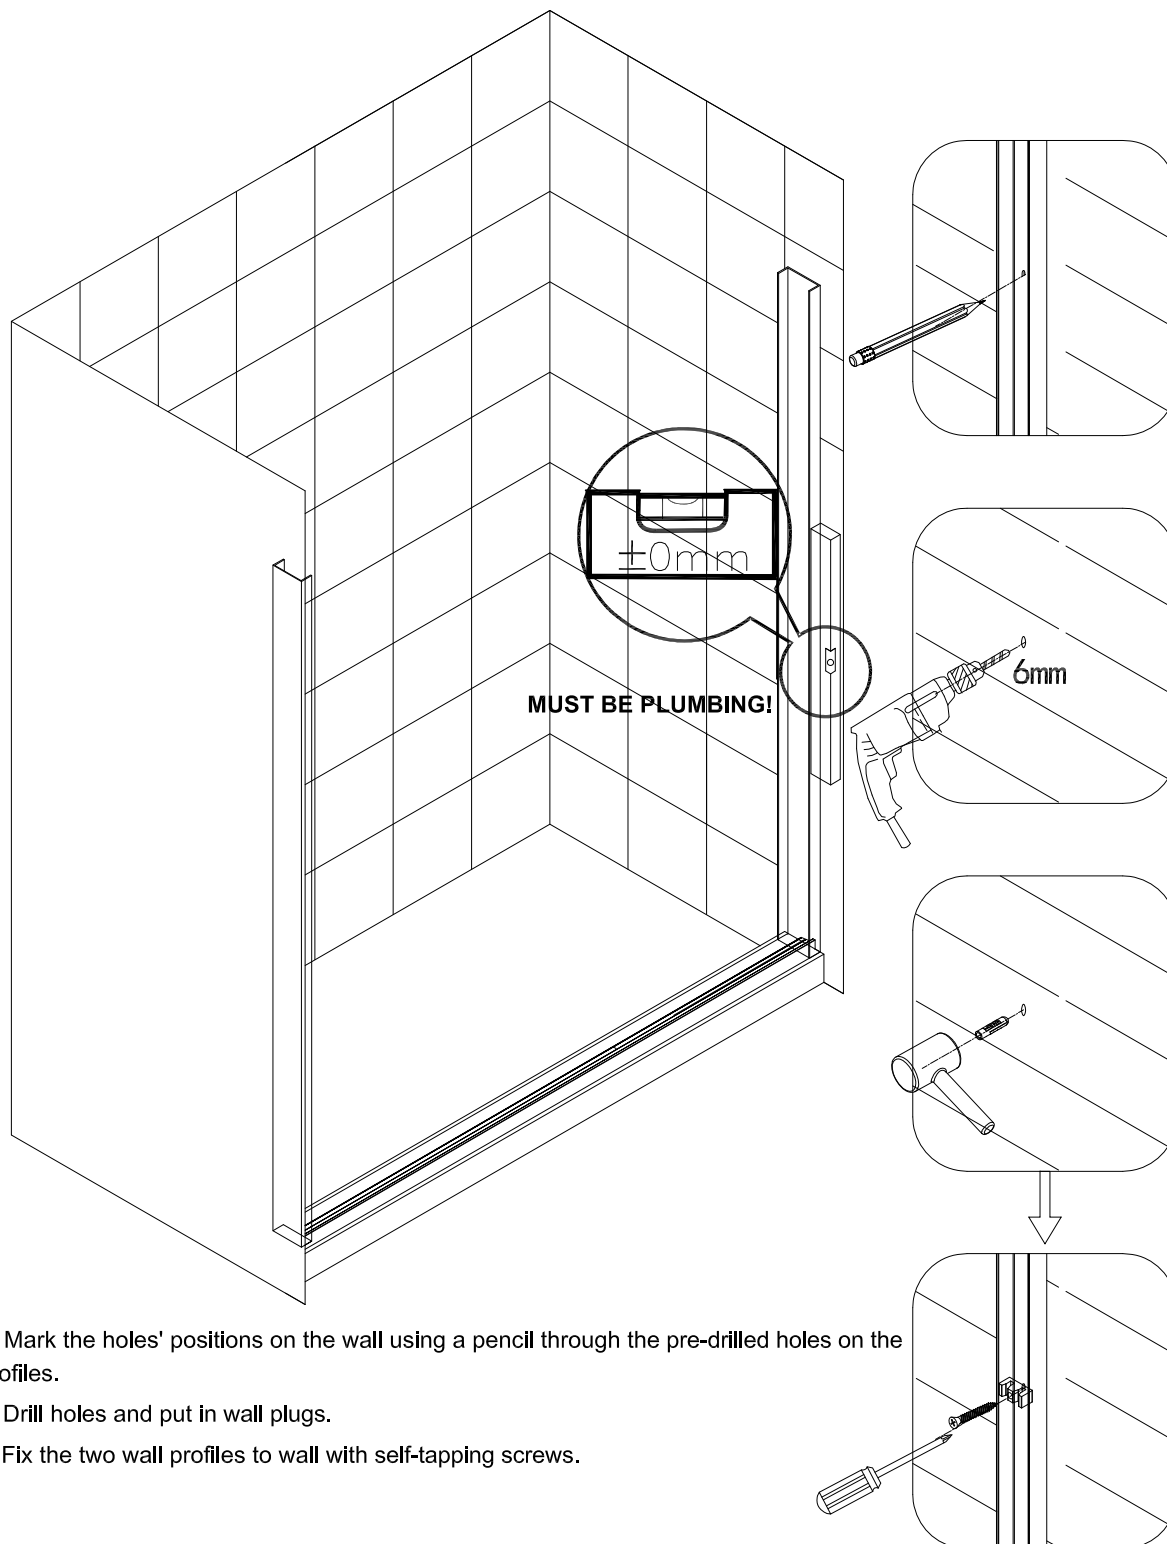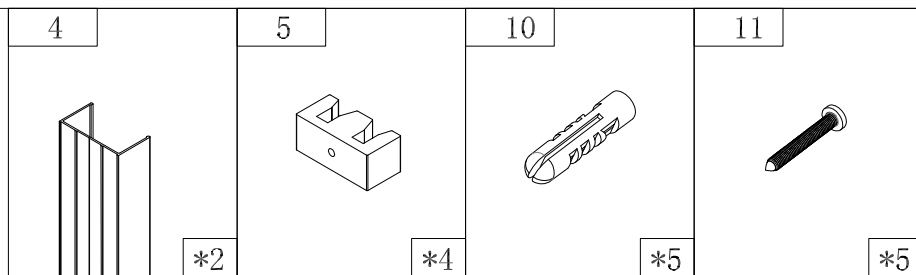


Step3: Mark the holes' positions on the wall using a pencil through the pre-drilled holes on the wall profiles.

Step4: Drill holes and put in wall plugs.

Step5: Fix the two wall profiles to wall with self-tapping screws.




Step6: Fit the two caps to each end of the top track. Then insert the top track into the wall profiles.


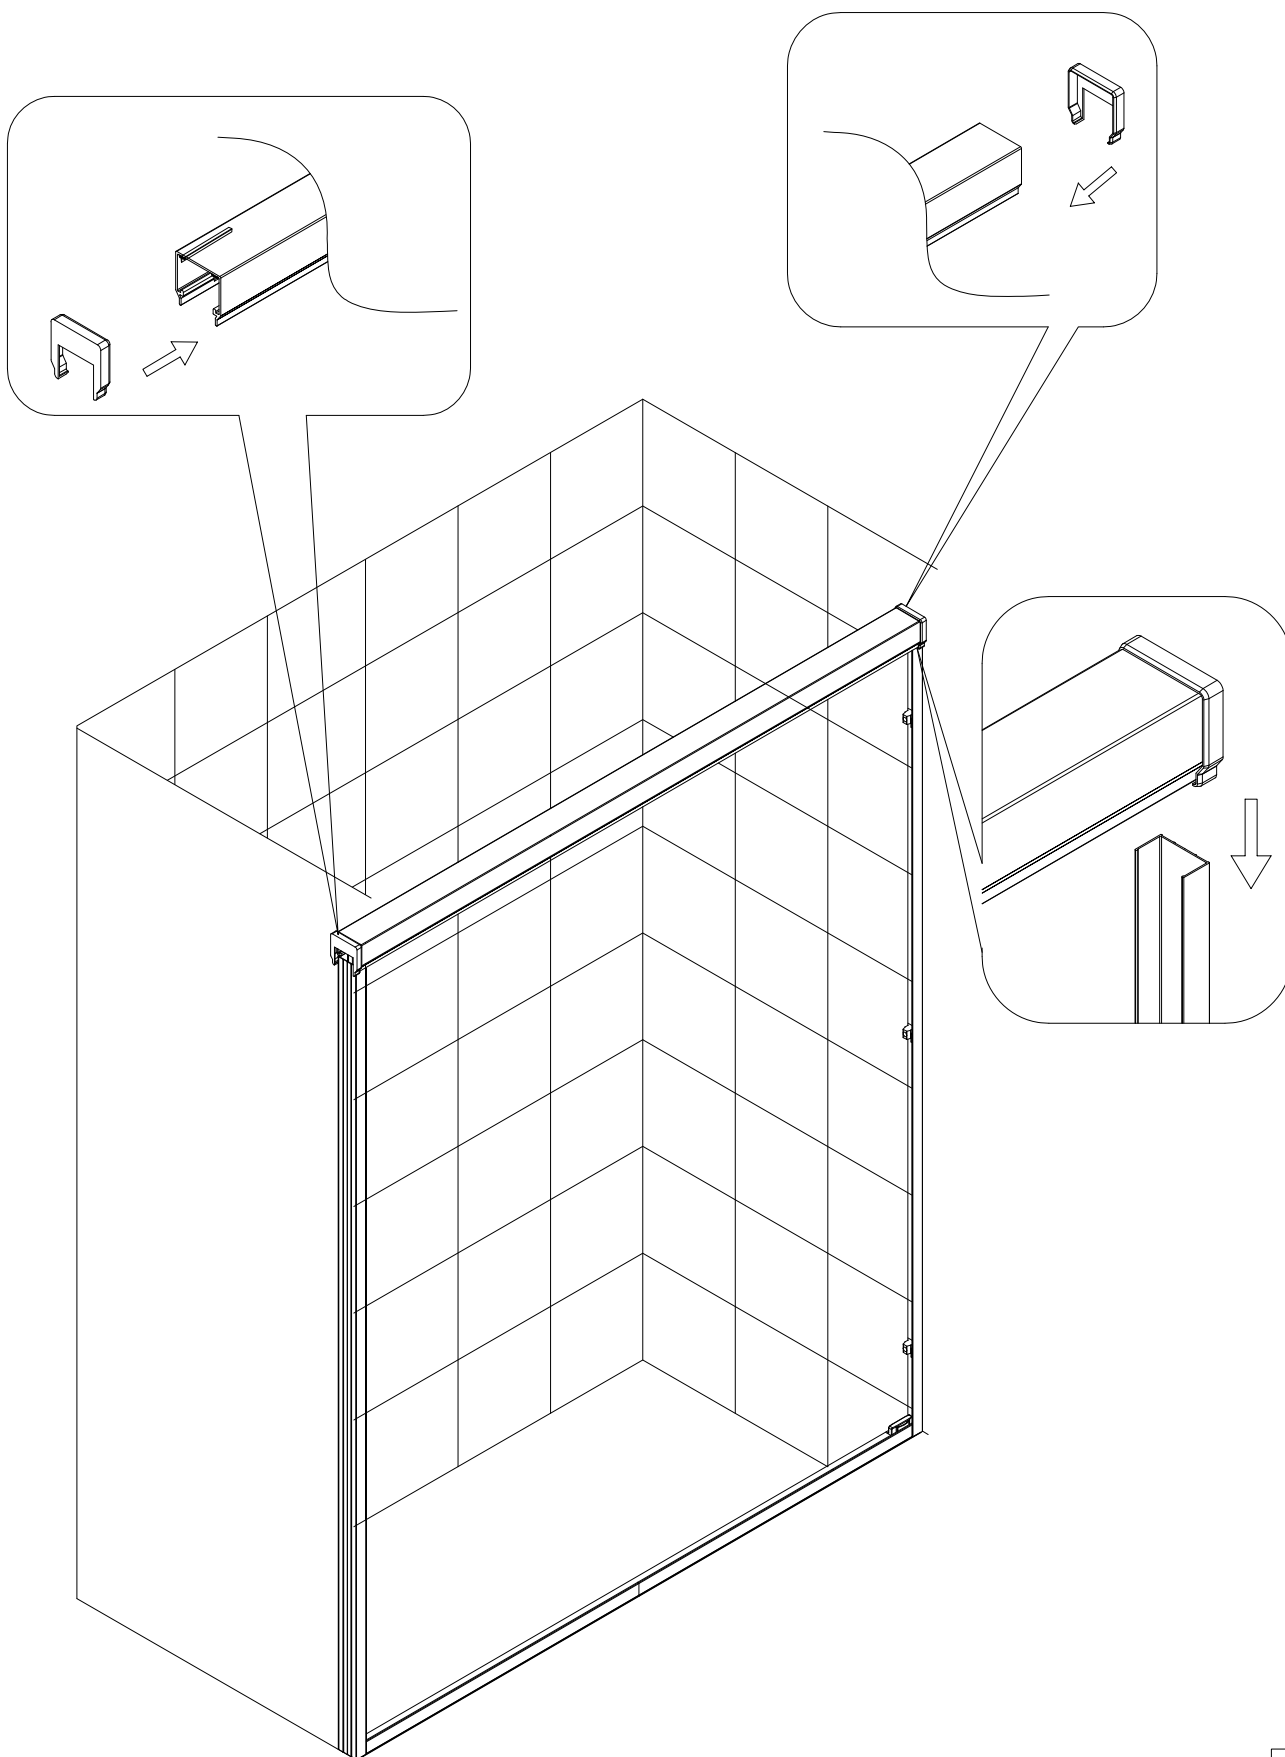


Step7: Assemble the rollers to the two doors.




Step8: Take one of the doors and tilt it then slide the first roller into the track from the gap on the stopper, then slide the other roller into the track. Put the other door into the top track in the same way.

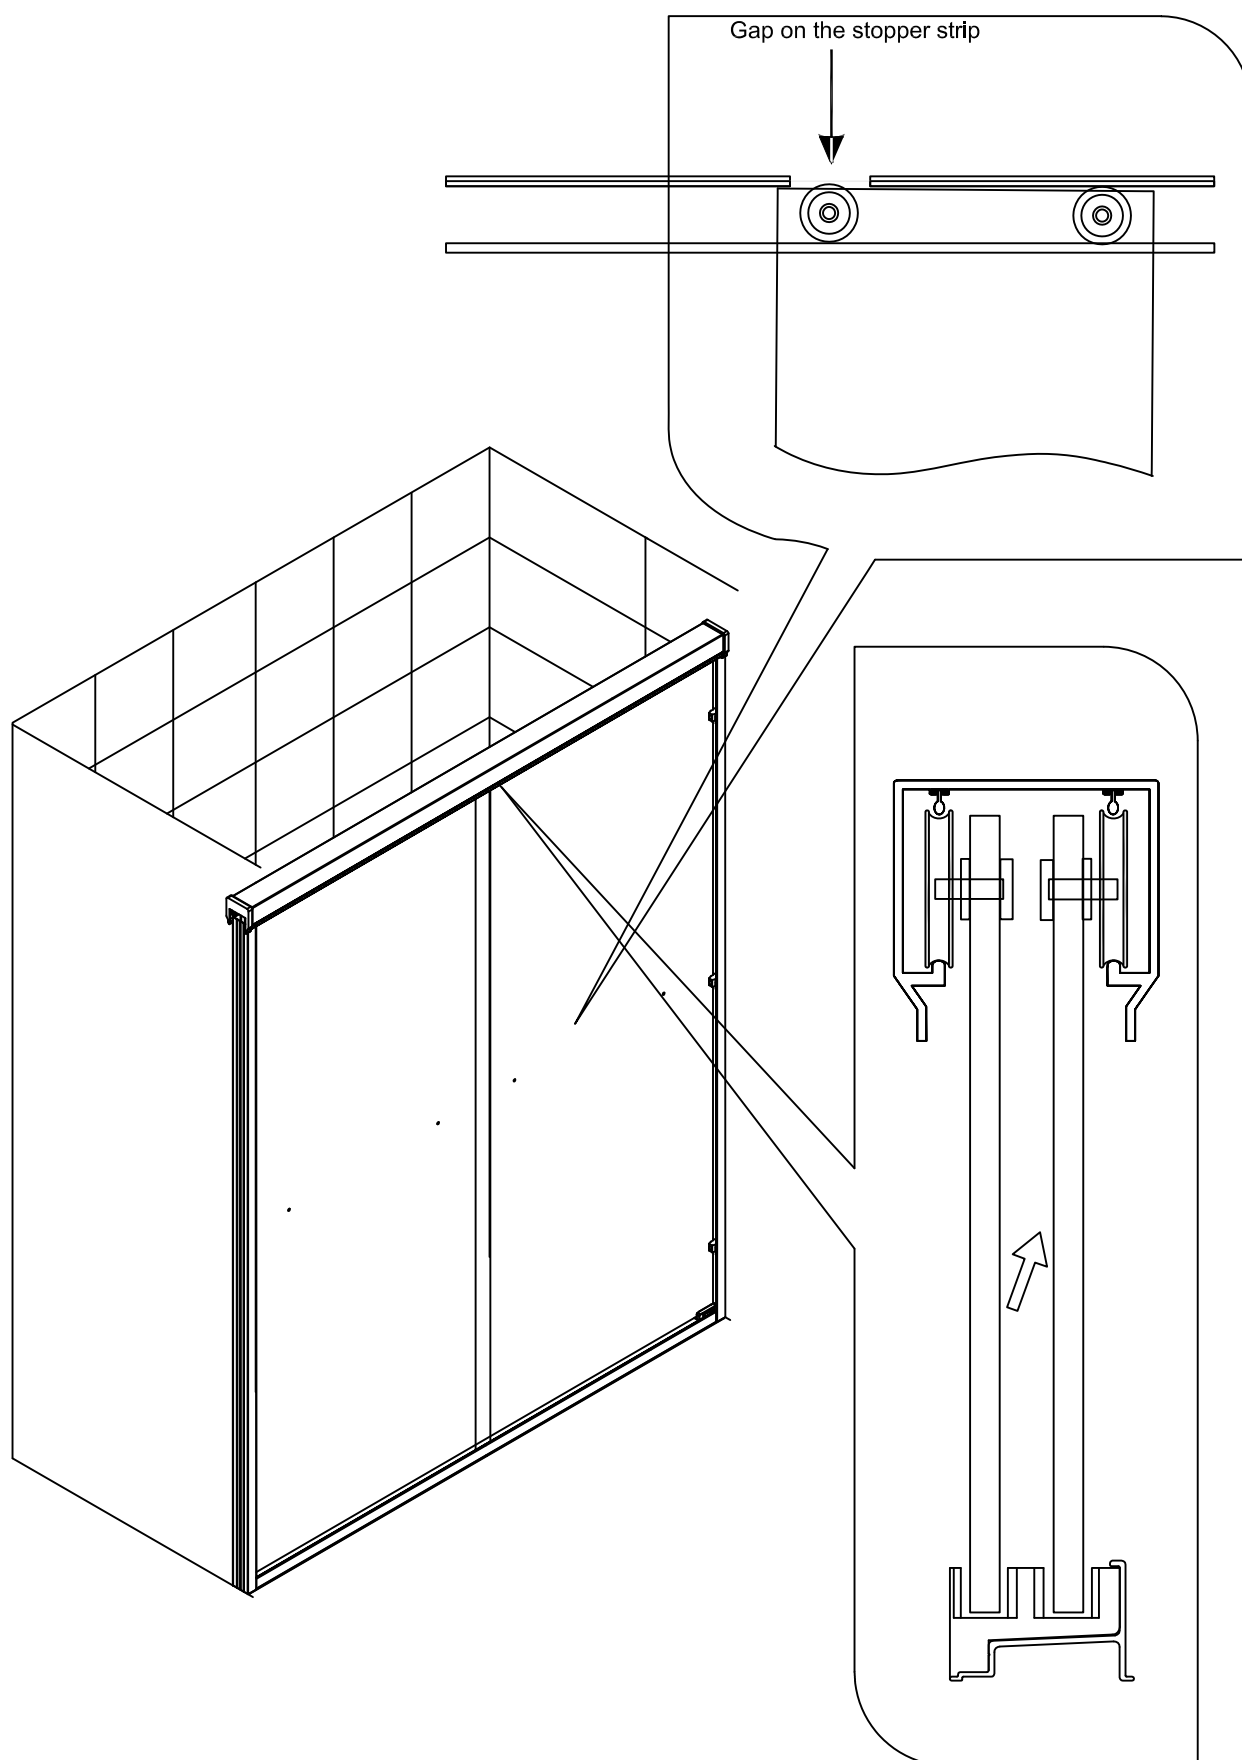

Step9: Fit the handles onto the doors.

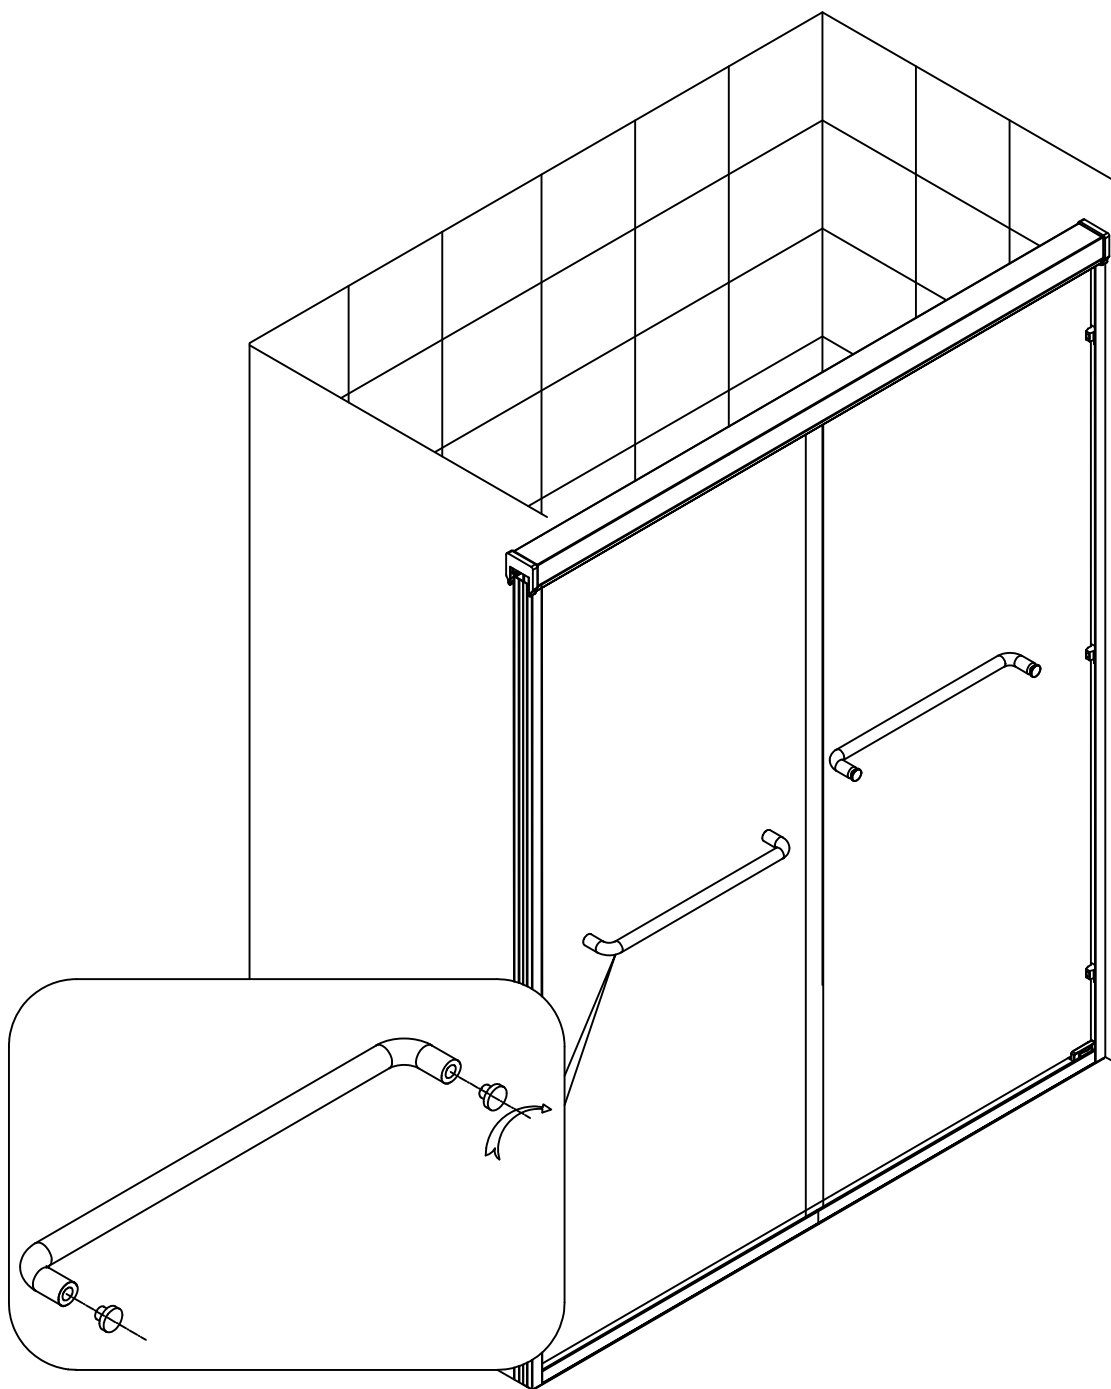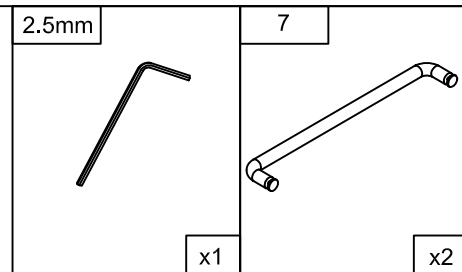

Step10: Apply silicone along and between the bottom track and the floor/basin, the wall profiles and the wall outside only.

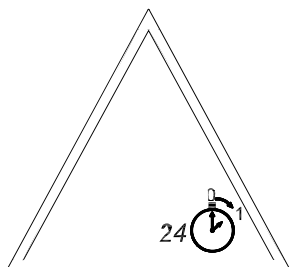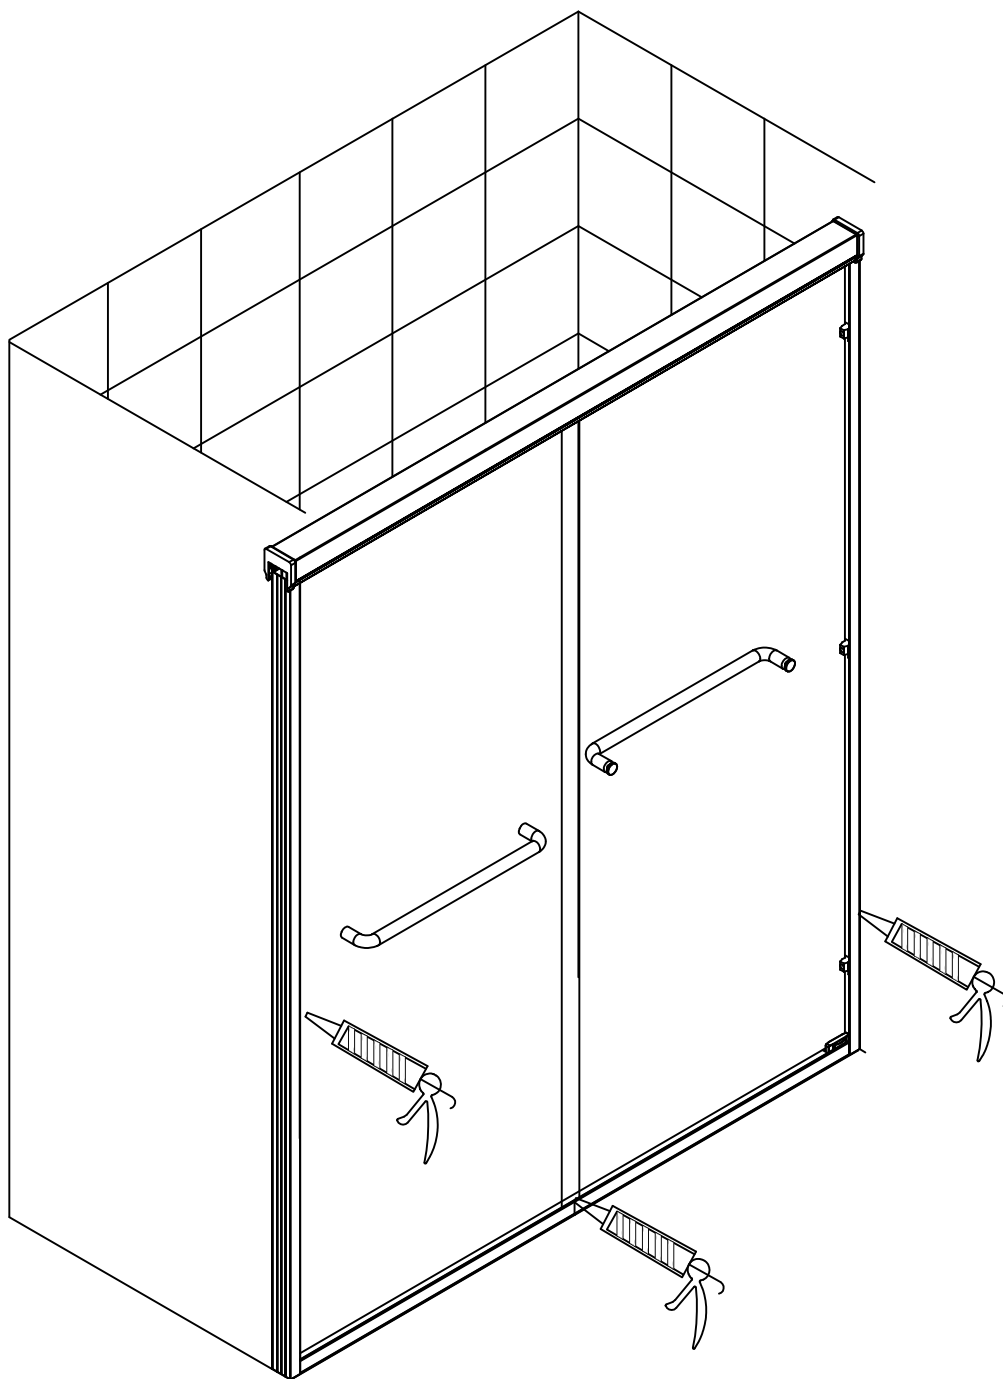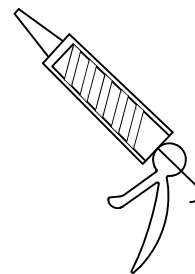

Important:
Please do not use the shower door within 24 hours!