


Eco Foldable Collection Wall Kits Installation Instructions

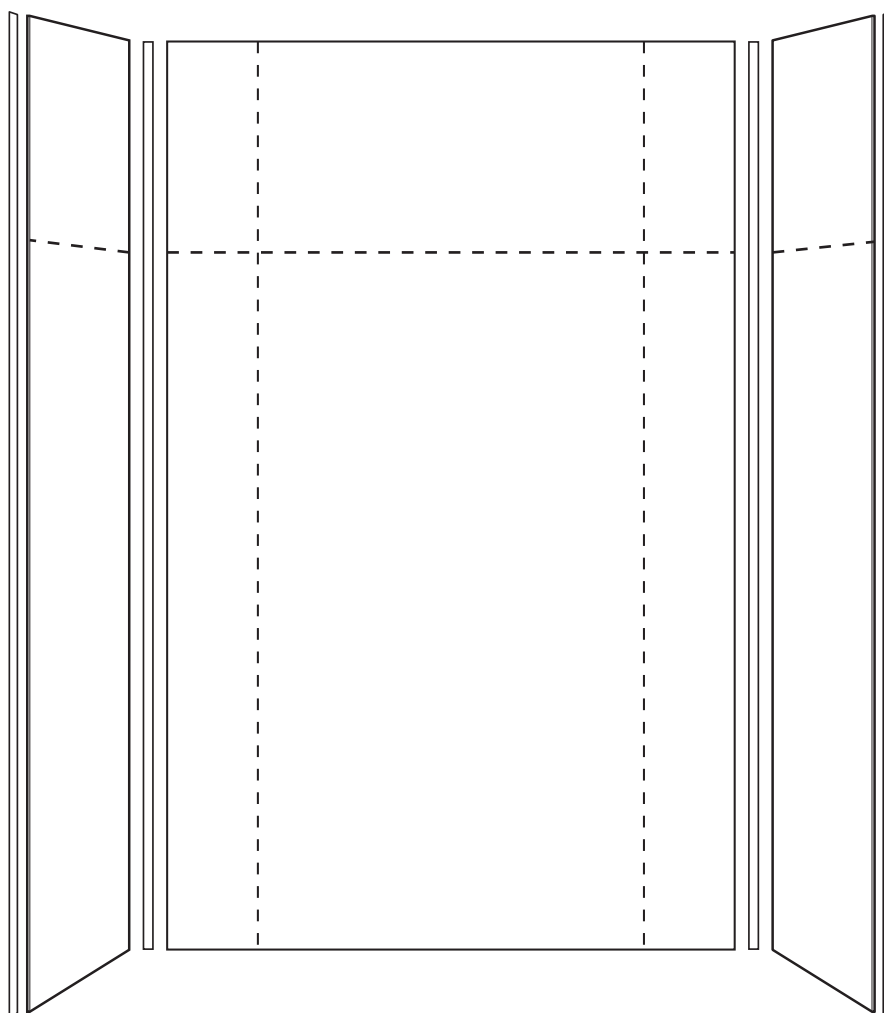

READ AND UNDERSTAND BEFORE INSTALLING

Eco Foldable Collection Shower Wall Kit Installation Instructions

The **ECO FOLDABLE WALL KIT** has been designed using 4 foldable wall panels, 2 inside corner trim pieces and 2 outside edge trim pieces.

This attractive wall set can be ordered and installed using one accent panel and two matching side panels or with 3 panels of the same color. Whichever you choose, the installation remains the same.


ECO FOLDABLE KITS INCLUDE

- 1- 38.625" back panel
- 2-48" side panels
- 2 aluminum inside corner trim pieces
- 2 aluminum outside edge trim pieces



INSTALLATION INSTRUCTIONS

Before installation, make sure the panels are oriented correctly, following the reference image provided. The **red** adhesive dots on the panels should align with the **red** dots in this drawing.

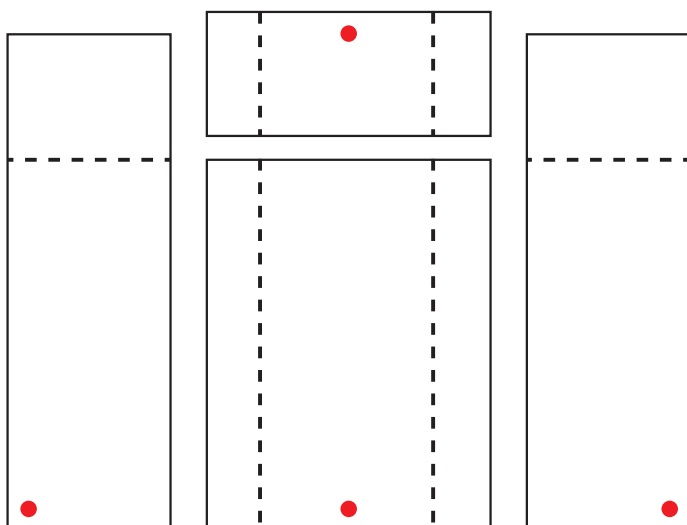

- 1 Install your backer board and prep walls for installation. (*extra waterproofing corners and seam protection recommended*).
- 2 Install back panels **CENTERED** on backwall. (We recommended adhesive 5900 Hybrid for best results).
- 3 Cut each side panel approximately 10" (using a straight edge and a circular saw).
- 4 Make sure that the factory edge of each side panel will be installed against the factory edge of centered panel. (this ensures a smooth transition between the panels and provides a tight true transition).
- 5 Install provided corner and end trim pieces, using the 5900 Hybrid, or a 100% silicone adhesive.
- 6 Caulk corner trim using color matched adhesive.