
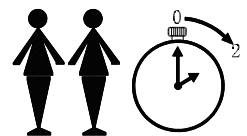


INSTRUCTION MANUAL

FBPT By-Pass Shower Door

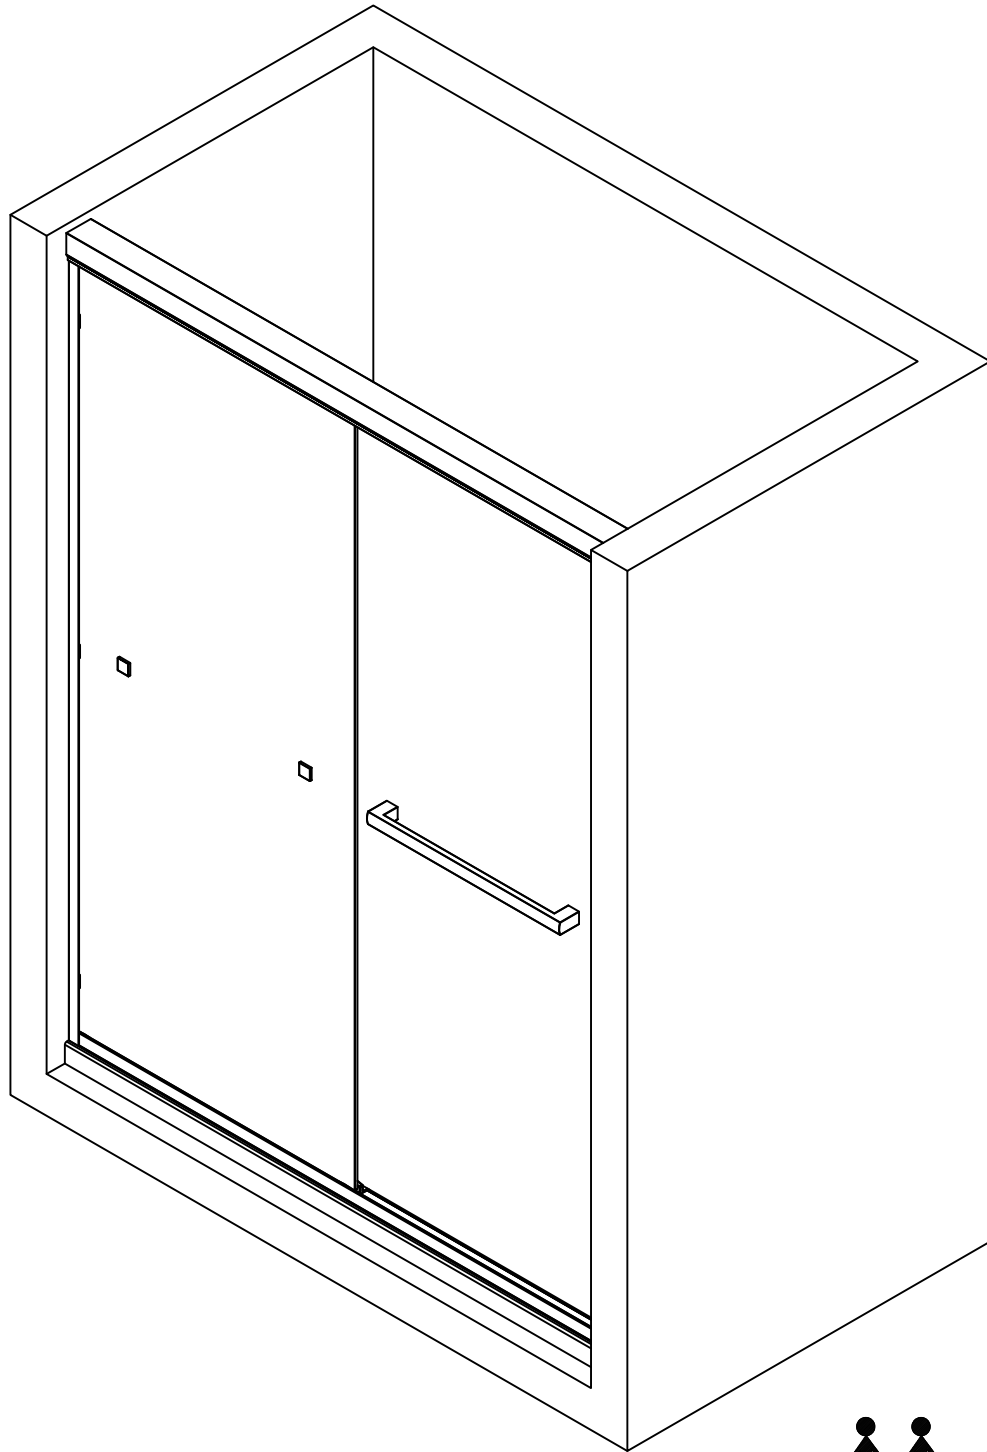

2 PEOPLE REQUIRED

Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- . Read this manual carefully and completely before proceeding.
- . It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- . If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- . Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.


NOTICE












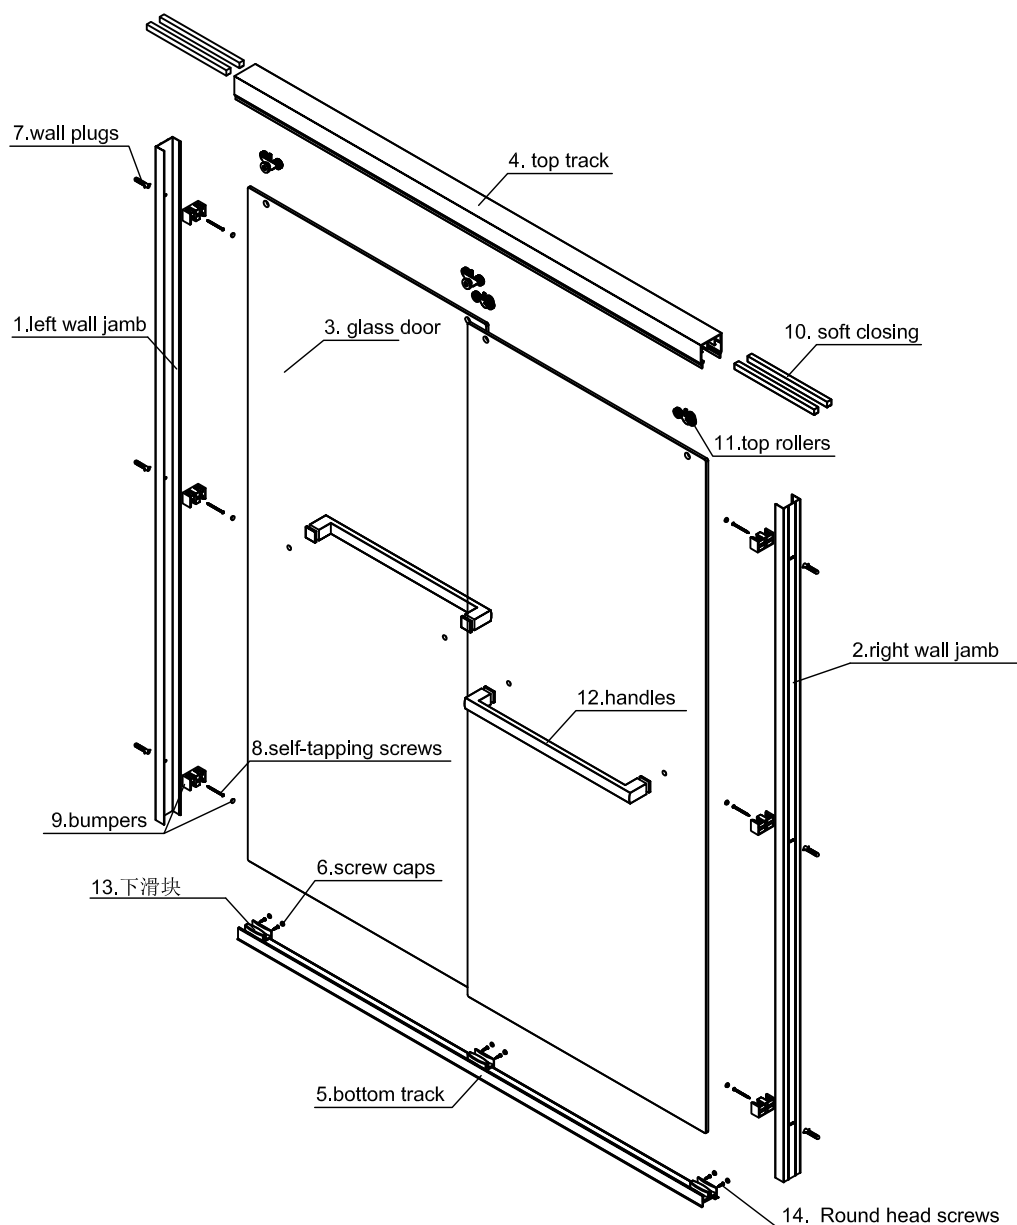




- . Caulking: no sealant is required inside the shower, unless otherwise stated.
- . Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR

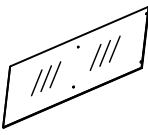
- . Never use scouring powder pads or sharp instruments on metal pieces of glass panels.
An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and metal parts looking new.
- . We recommend wiping the glass panels with a squeegee after each use.










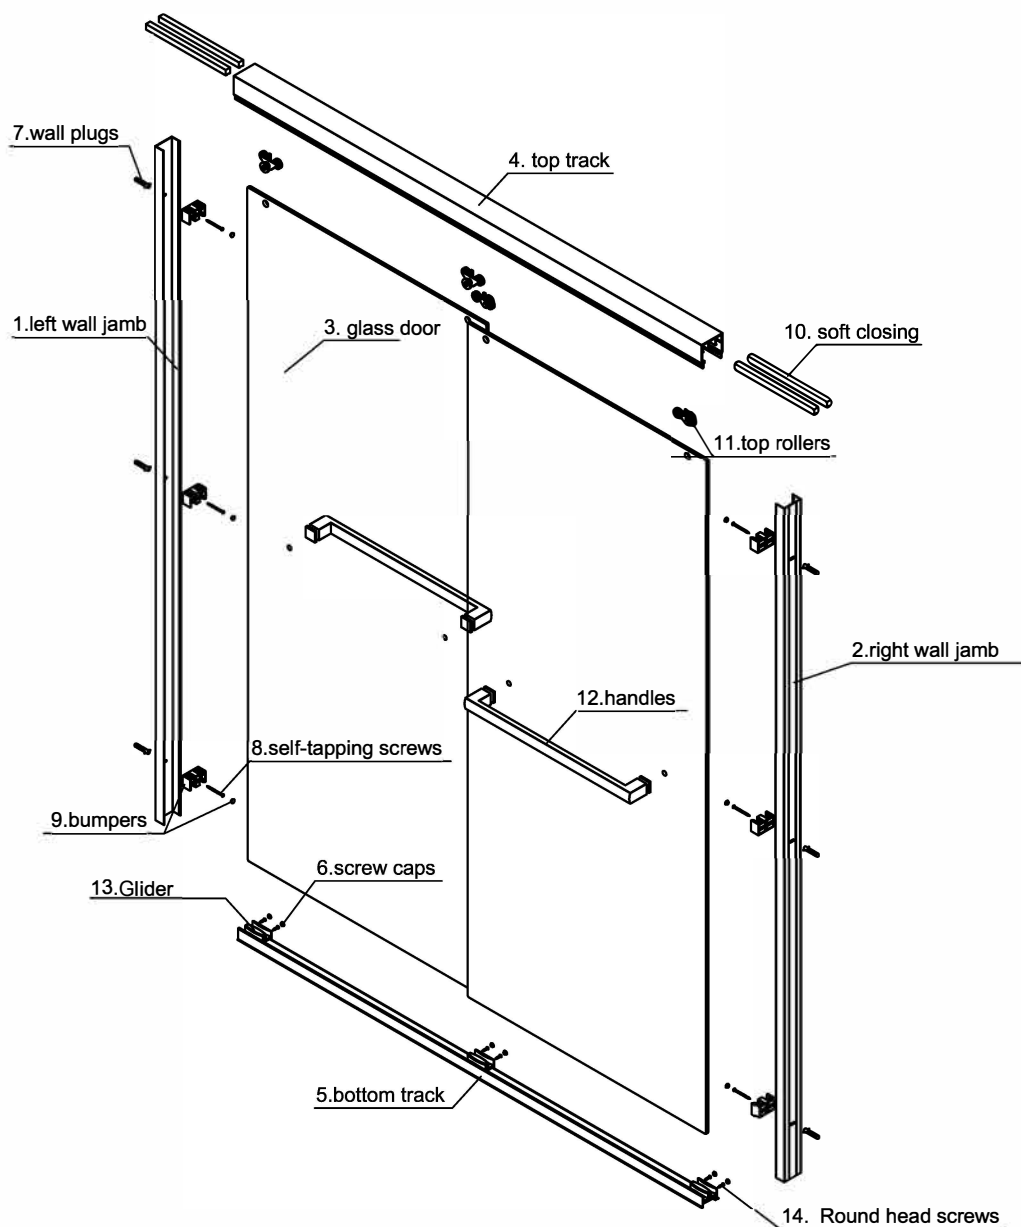






PARTS LISTING

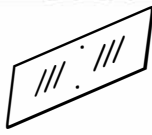


No.	Description	Qty	Drawing	No.	Description	Qty	Drawing	No.	Description	Qty	Drawing
1	Left wall jamb	1		5	Bottom track	1		11	Rollers	4	
2	Right wall jamb	1		6	Screw caps	6		12	Handles	2	
3	Glass door	2		7	Wall plugs-Φ6	6		13	Gliders	3	
				8	Self-tapping screws (ST4*50mm)	6		14	ST4*10mm screws	6	
4	Top track	1		9	Bumpers	6		15	Allen key	2	
				10	Softclosing	4		16	Softclosing locator	1	


PARTS LISTING




No.	Description	Qty	Drawing	No.	Description	Qty	Drawing	No.	Description	Qty	Drawing
1	Left wall jamb	1		5	Bottom track	1		11	Rollers	4	
2	Right wall jamb	1		6	Screw caps	6		12	Handles	2	
3	Glass door	2		7	Wall plugs-Φ6	6		13	Gliders	3	
				8	Self-tapping screws (ST4*50mm)	6		14	ST4*10mm screws	6	
4	Top track	1		9	Bumpers	6		15	Allen key	2	
				10	Softclosing	4		16	Softclosing locator	1	

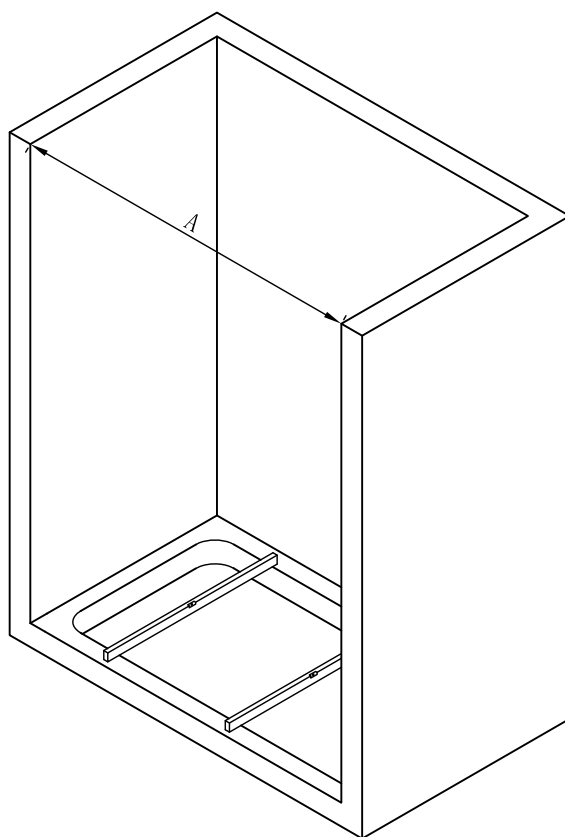

Step 1. Put the basin in the installation position adjust it to be 100% level.

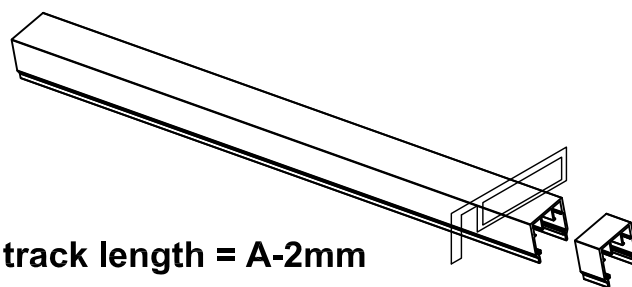


Top track length = A-2mm



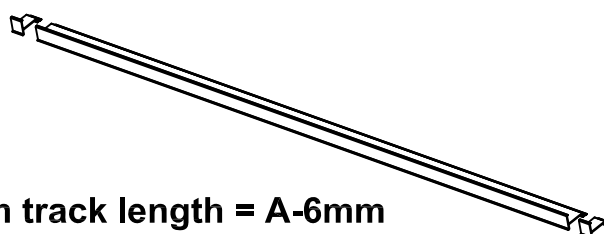


Bottom track length = A-6mm


Step 2. Cut top and bottom track to be the correct length according to above instructions.

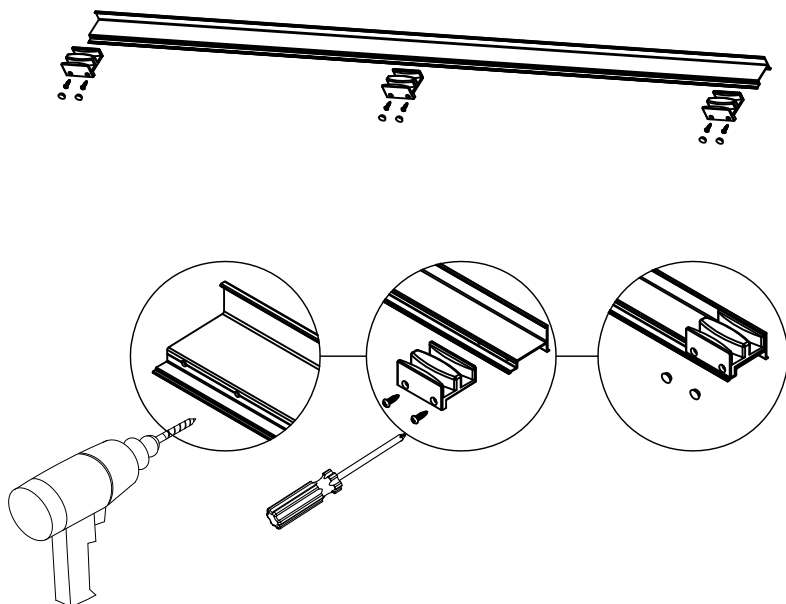


Step 3. Drill Ø3.2 holes onto the bottom track each end and the middle as above drawings. Fix bottom gliders onto the bottom track.

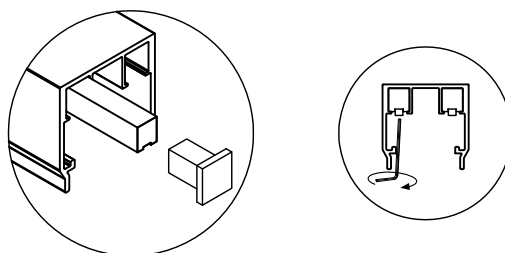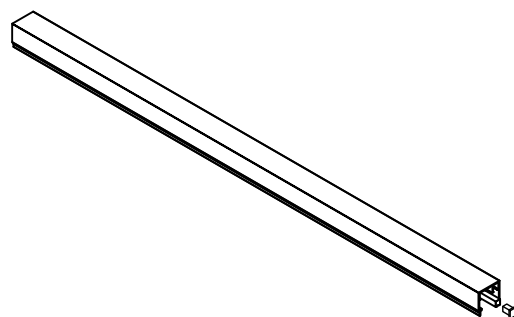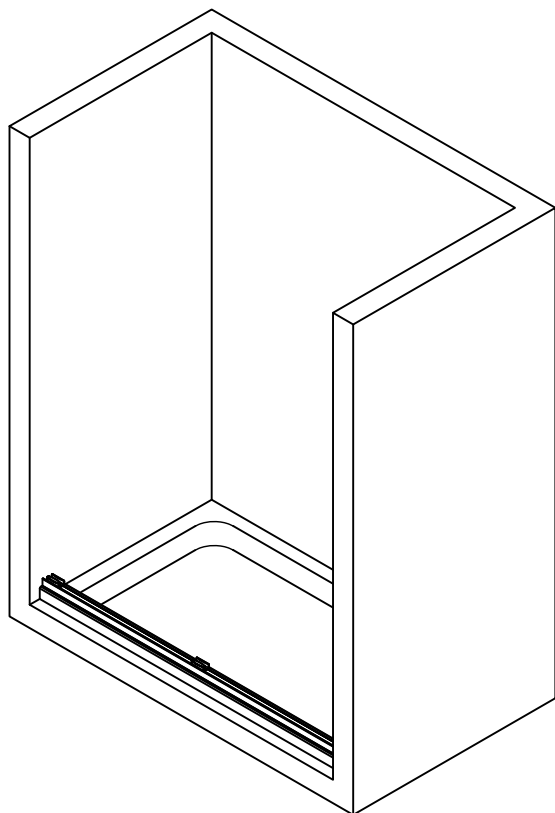


Step 4. Put the assembled bottom track to the installation position. Inset the soft closing dampers onto the top track using the soft closing locator to locate the position correctly. Fix them using a 2.5 Allen key. See above drawings.

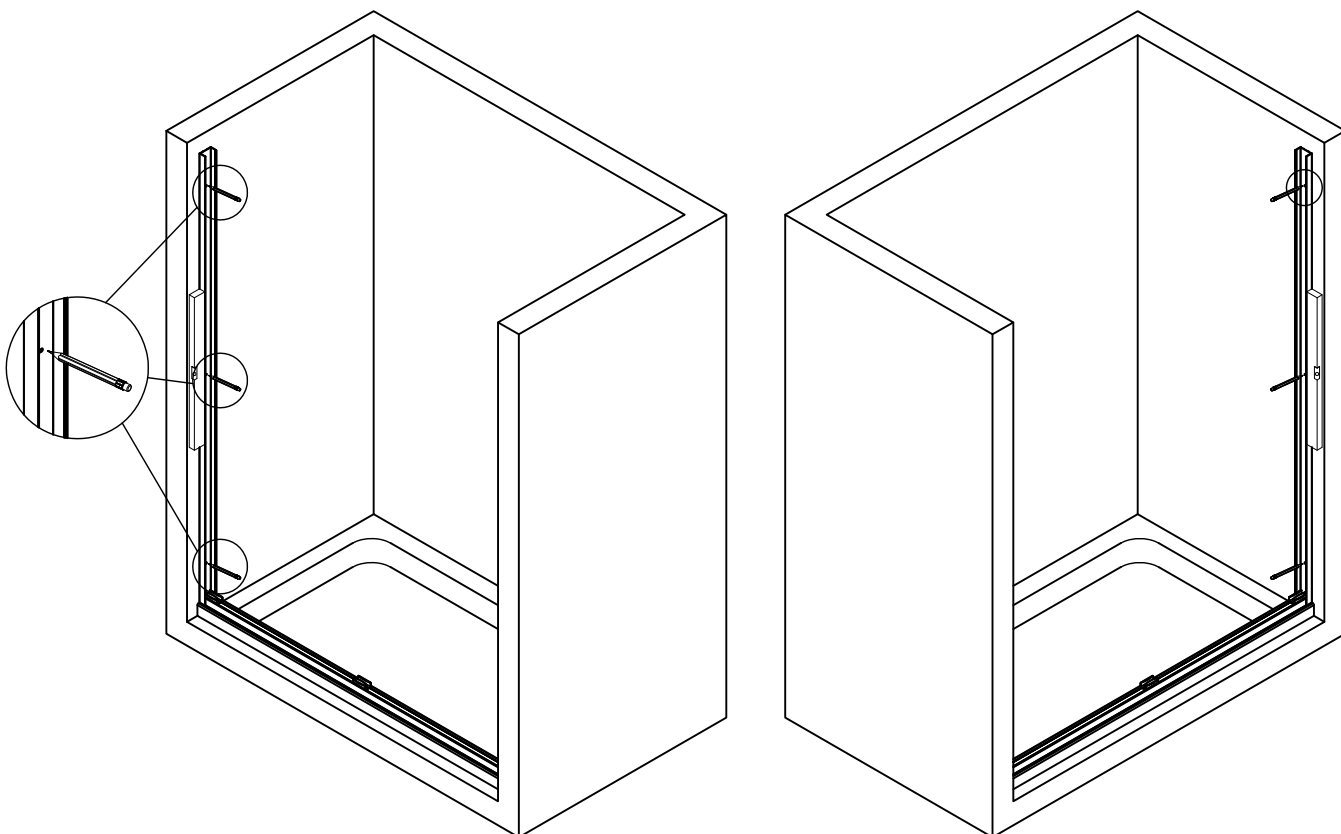


Step 5. Clip the two wall jambs onto each end of the bottom track. Adjust the wall jambs to make them 100% plumbing. Make holes positions onto wall through holes on the wall jambs. See above drawings.

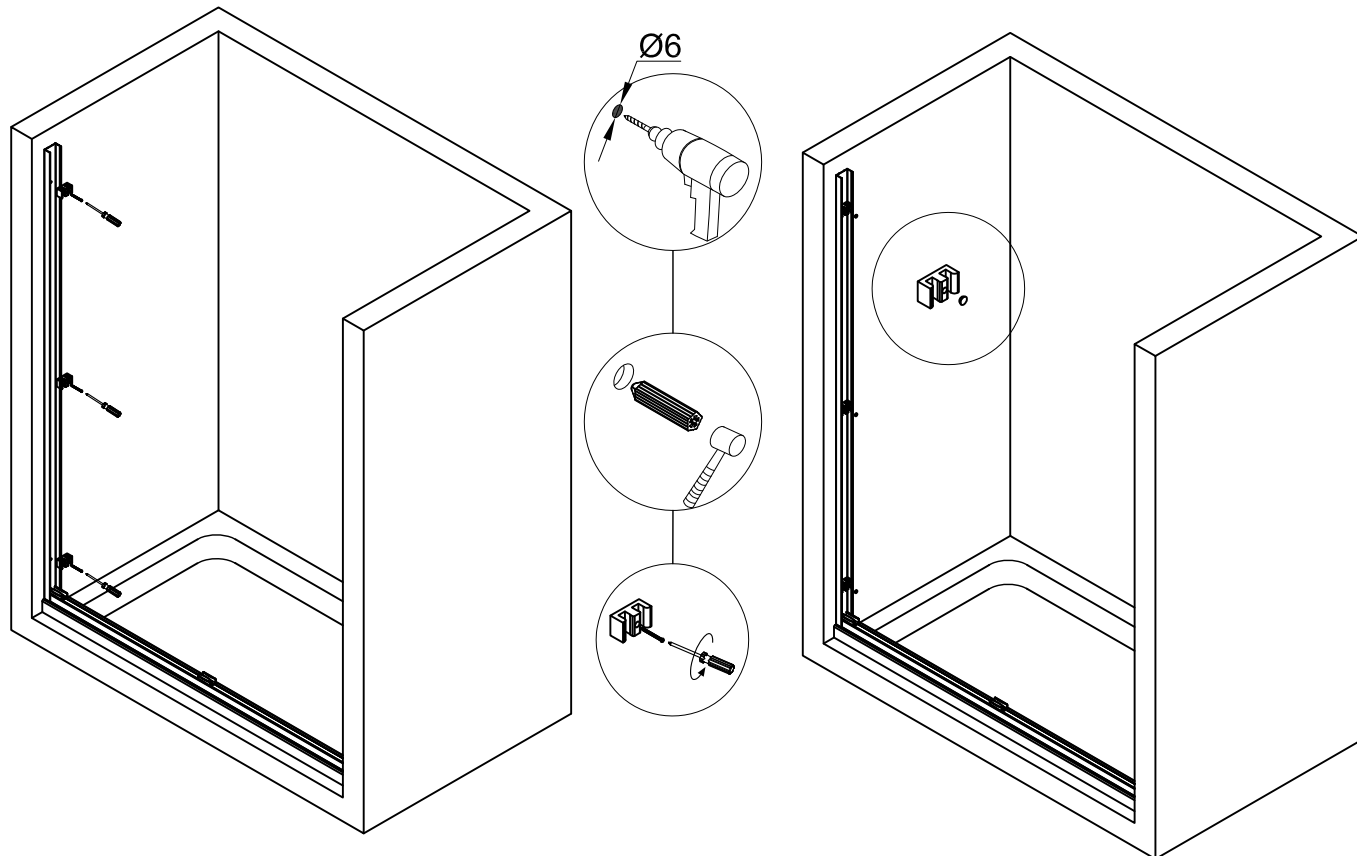


Step 6. Take wall jambs away, drill holes onto where marked on the wall, and put in wall plugs. Fix wall jambs to wall and glass stoppers onto wall jambs.

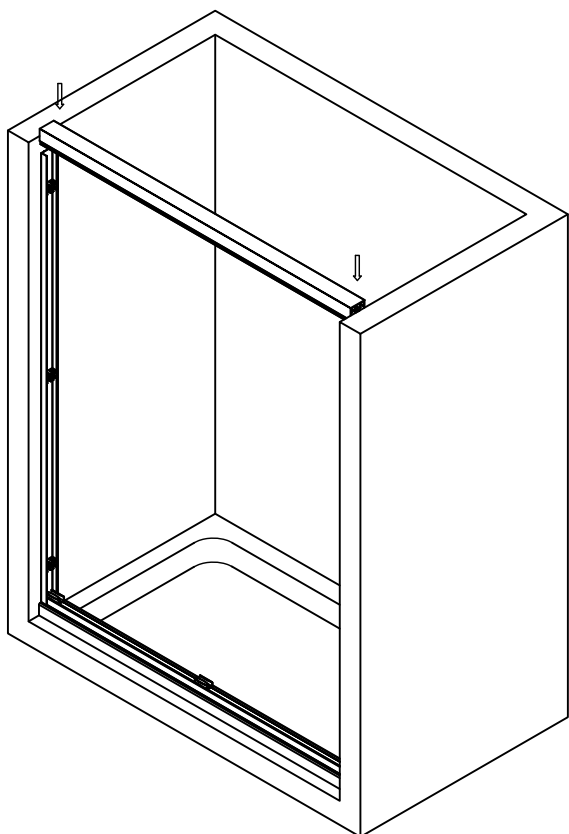

Step 7. Clip the top track onto the top of wall jambs.


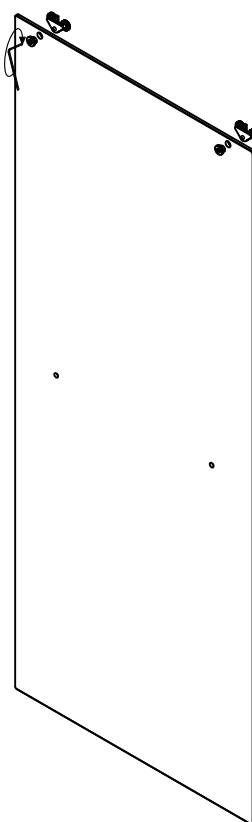


Step 8. Fix rollers onto glass door using 3.0 Allen key.


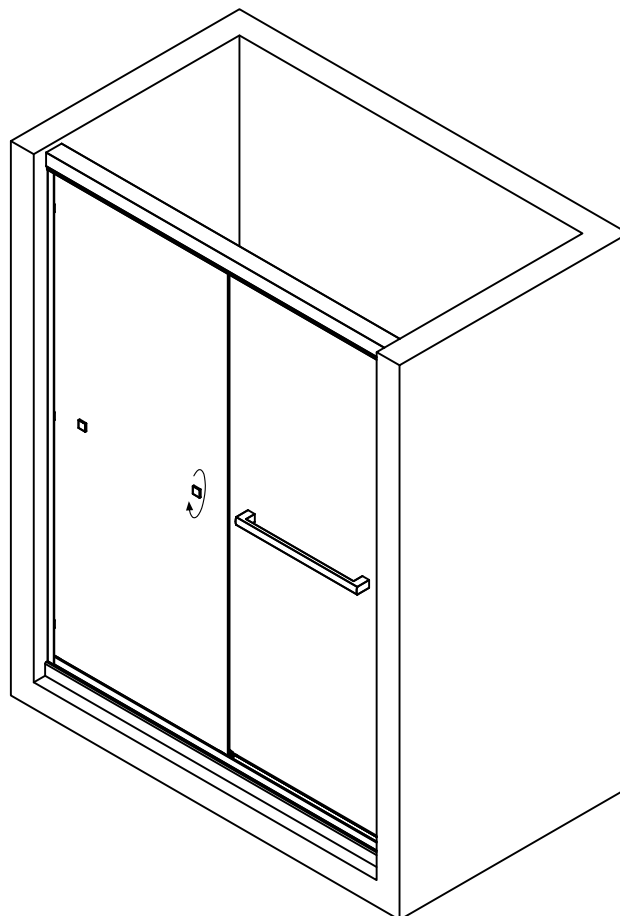


Step 9. Hang the glass doors onto the top track.

Step 10. Fix handles onto the glass doors.

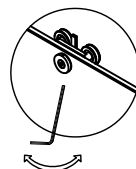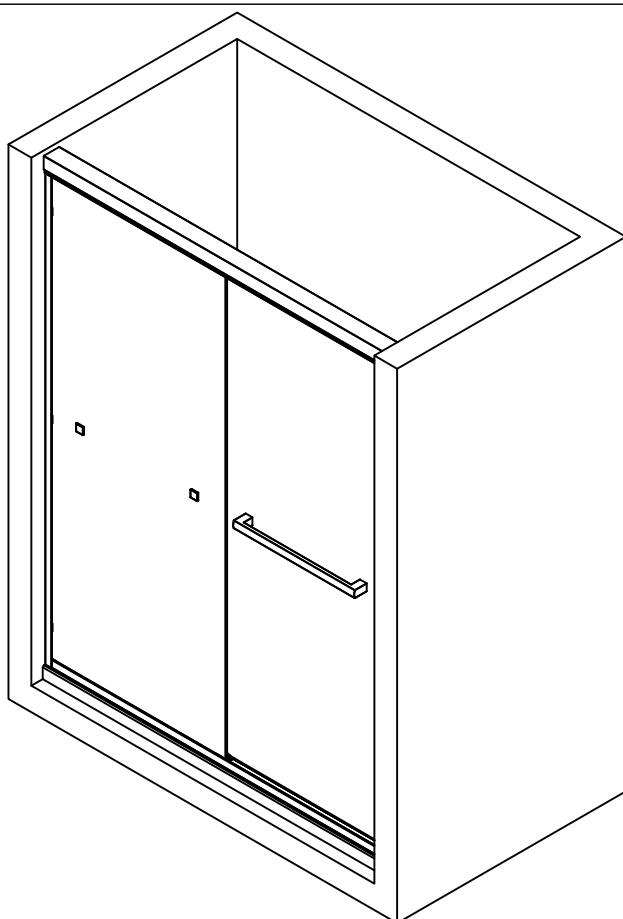

Step 11. Adjust the glass door's height using a 2.5 Allen key to make the glass doors can close squarely.

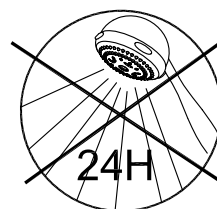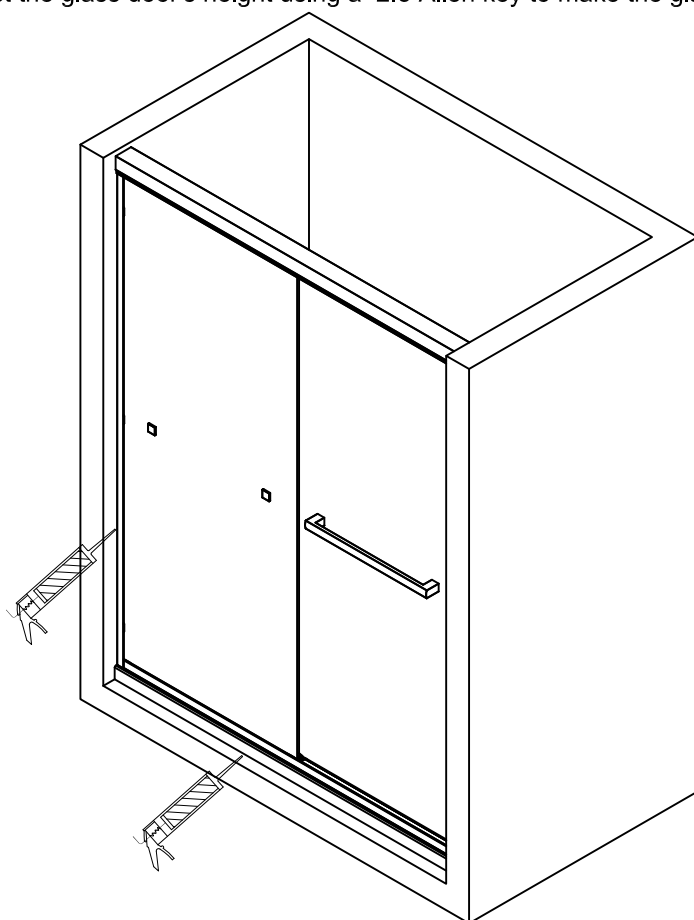

Step 12. Apply silicone along between shower door and wall, bottom track and basin outside only.