


**1.Insert flow restricter into base of hand piece.**



**2. Screw on the hose tightly and test for leakage.**

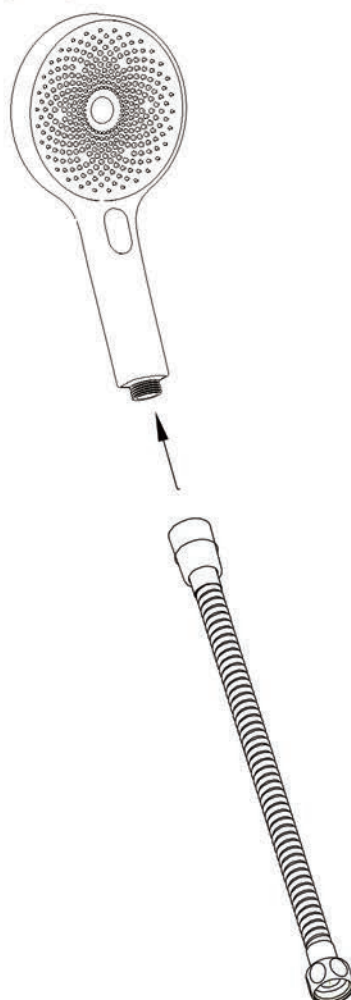

**Note: For low water pressure areas, please remove flow restricter.**