


1. Insert flow restrictor into base of hand piece.



2. Screw on the hose tightly and test for leakage.

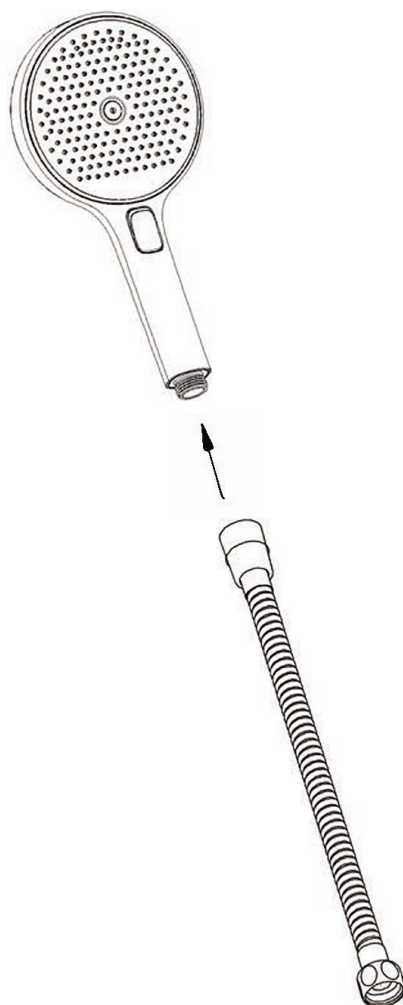

Note: For low water pressure areas, please remove flow restrictor.