


Installation instructions for:
SMMHSS3FR

1.Insert flow restricter into base of hand piece.



2. Screw on the hose tightly and test for leakage.

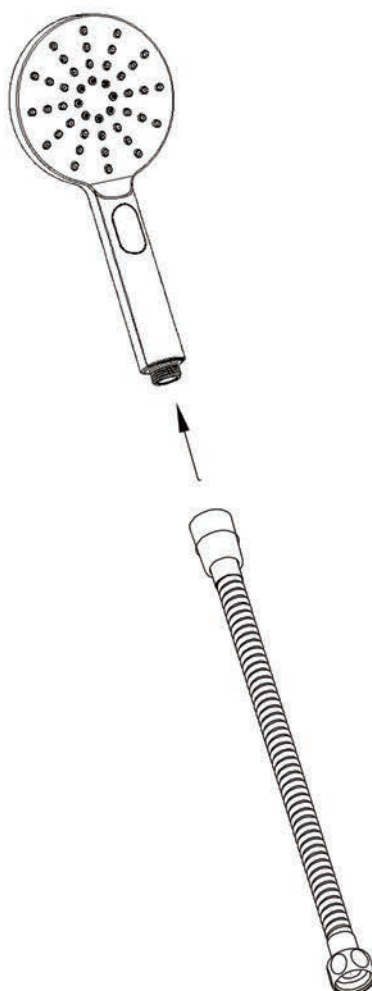

Note: For low water pressure areas, please remove flow restricter.