


Shower Door

For 3/8 inch(10mm) / 5/16 inch(8mm) Glass

INSTALLATION GUIDE

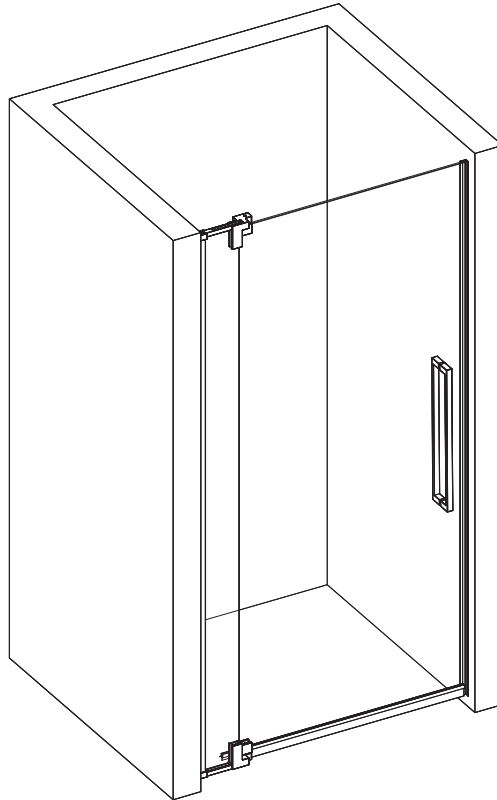

Type A

Left hand door installation shown

CAUTION: To reduce the risk of breakage, keep corner protectors on glass while installing.

Consult your local plumbing codes prior to installation.

IMPORTANT: To complete an entire door installation, you will need the following:

1. One carton containing Door panel / Inline panel / Hardware kit with door handle

TABLE OF CONTENT

TABLE OF CONTENT.....	2
SAFETY INFORMATION.....	3
CARE AND MAINTENANCE.....	3
PACKAGECONTENT - DOOR WITH 1 PANEL.....	4
PART LIST - DOOR WITH 1 PANEL.....	6
MODELS TO USE L BRACKET OR SUPPORT BAR - DOOR WITH 1 PANEL.....	7
REVERSIBLE DESIGN - DOOR WITH 1 PANEL.....	8
TOOLS REQUIRED - BOTH DOOR TYPES.....	9
INSTALLATION STEPS - DOOR WITH 1 PANEL.....	10
PACKAGE CONTENT - DOOR WITH 2 PANELS.....	21
PART LIST - DOOR WITH 2 PANELS.....	23
MODELS TO USE L BRACKET OR SUPPORT BAR - DOOR WITH 2 PANELS.....	24
REVERSIBLE DESIGN - DOOR WITH 2 PANELS.....	25
INSTALLATION STEPS - DOOR WITH 2 PANELS.....	26



SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always read and follow all the steps in the installation instructions.
- Inspect all contents and glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Handle the tempered glass with caution! Improperly handling the glass can cause it to break suddenly in small pieces (never in pointed fragments).
- Always take all precautions not to touch the tempered glass with any tools during the installation, or after installed.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage; if there is damage to the unit prior to installation, please contact customer service
- Install the shower on a floor that is level and able to accommodate the weight of the unit and an occupant.
- Consult local building codes and compliance standards prior to installation and ensure conformity.
- After installation, and from time to time, check the glass for fit and finish to ensure that nothing has come loose since installation.
- Keep this installation manual for future reference.

NOTICE

- Any modification or alteration from what is specified in this instruction manual will void any and all warranty on this product.
- The distributor is not responsible for any damage to the unit or personal property caused by improper installation. If you disregard instructional warnings, you will void your warranty and possibly deal with water damage.
- Consult the distributor's website for any additional information or question on this product's installation.

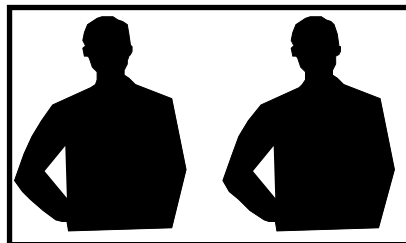


- You will need at least two people to install this unit properly.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.
- Estimated Assembly Time: 2 hours













CARE AND MAINTENANCE

- For the daily maintenance, use a wet cloth and a soft liquid cleaner.
- Never use abrasive cleaners containing some acetone, chlorine or strong bleach, scrapers, metallic brushes, nor other objects or the products which can graze or tarnish surfaces.
- Check every 4 months and re-tighten them if necessary.

PACKAGE CONTENT

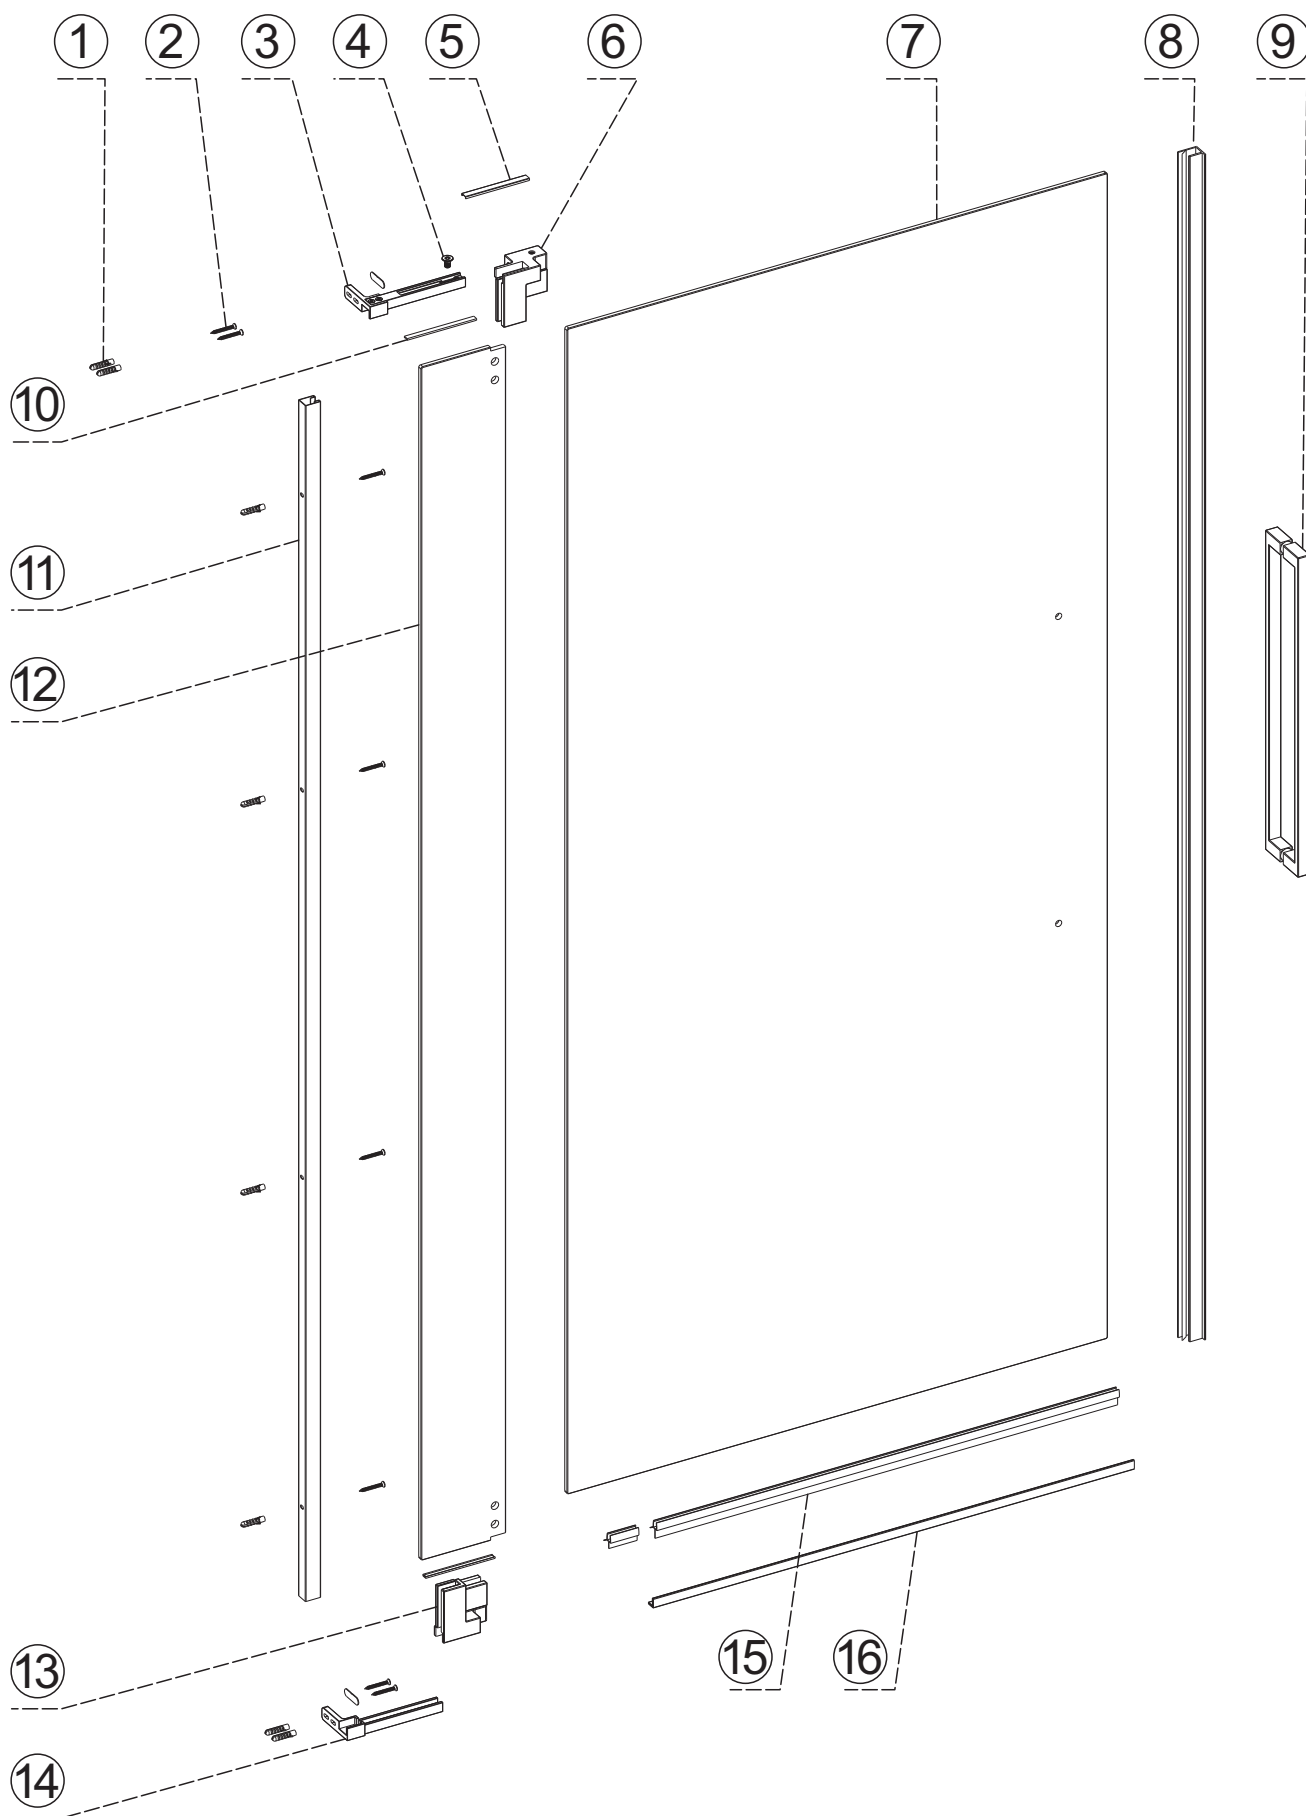

PACKAGE CONTENT

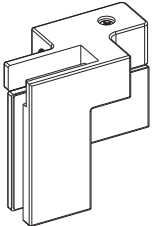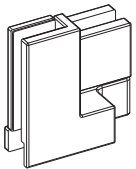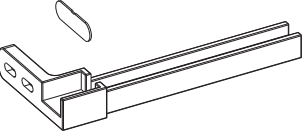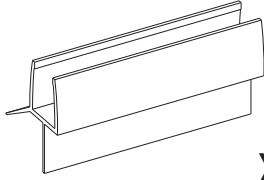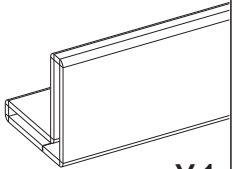①  X8	② ST4X35  X8	③  X1	④  X1
⑤  X1	⑥  X1	⑦  X1	⑧  X1
⑨  X1	⑩  X1	⑪  X1	⑫  X1
⑬  X1	⑭  X1	⑮  X1	⑯  X1


PART LIST

Part number	Description	Quantity	Code
1	Wall Anchor	8	
2	ST4x35 Countersunk Screw	8	
3	7 shape support bar	1	
4	M5x8 Countersunk Screw	1	
5	Stainless steel decorative cover	1	
6	Top Hinge	1	
7	Door Panel	1	
8	Hinge Side Vinyl Seal	1	
9	Handle	1	
10	PVC glass spacer	1	
11	Wall profile	1	
12	Hinge fixed glass	1	
13	Bottom Hinge	1	
14	7 shape support bar	1	
15	Bottom Sweep Vinyl Seal	1	
16	Water-dam	1	
XX indicate hardware finish: PC = Polished Chrome; BS = Brushed Stainless; MB = Matte Black; CB = Champagne Bronze			

MODELS TO USE L BRACKET OR SUPPORT BAR


Type	Overall Size	Door Panel	Inline Panel	L Bracket or Support Bar needed(Y)or not(N)	Reference Graph
	33"-36"	27-5/8"-30-5/8"	5-3/8"	N	A1

Note: All size are nominal size.

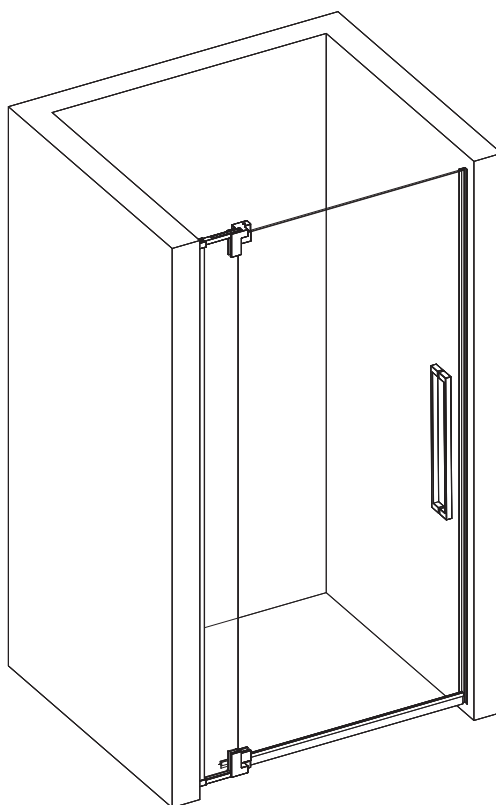


A1

REVERSIBLE DESIGN

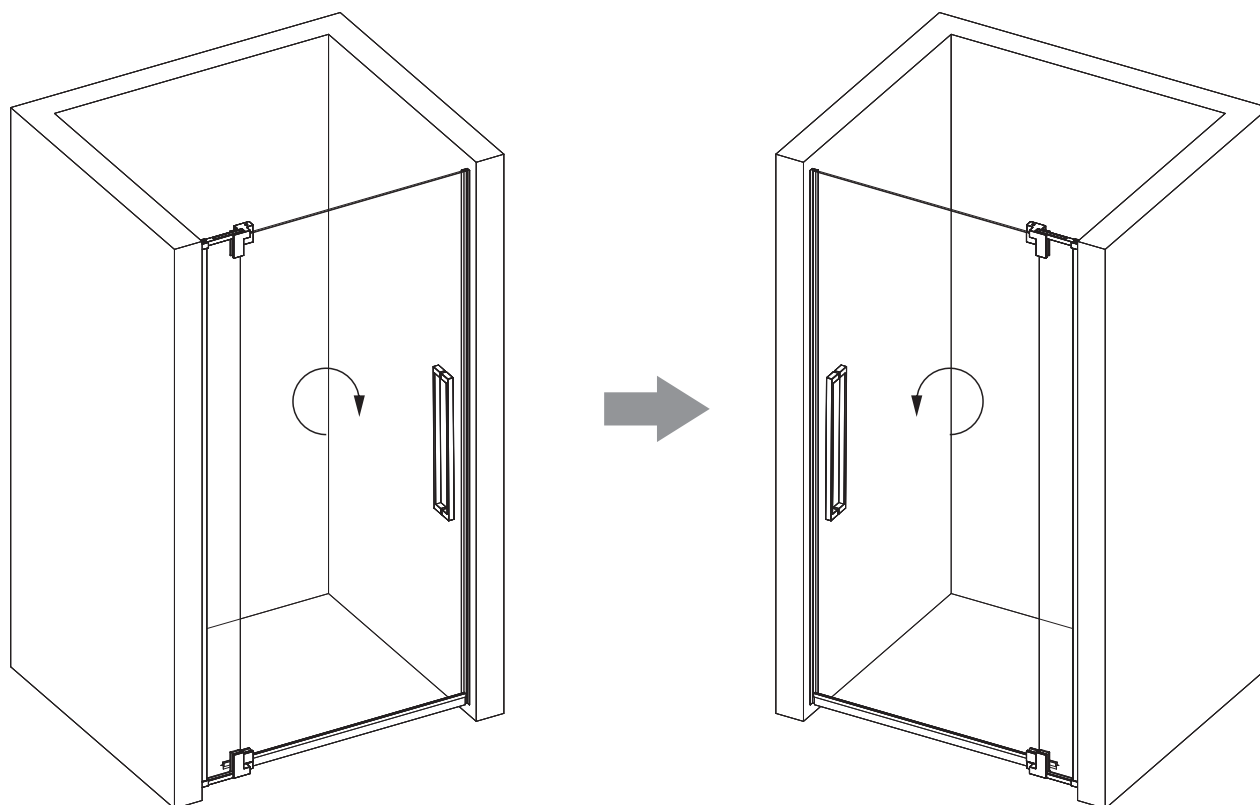


The doors are reversible for left or right-hand door installation. This manual will show the right hand door installation. For a left hand door installation, simply begin on the opposite wall and reverse the orientation of parts as necessary.

TOOLS REQUIRED (Supplied)

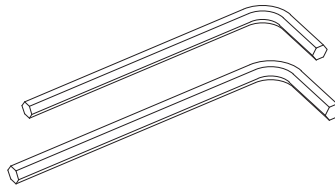


2.5mm&4mm&5mm


TOOLS REQUIRED (Not Supplied)

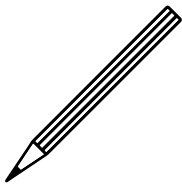


Pencil

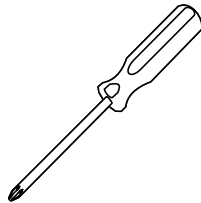


Screwdriver

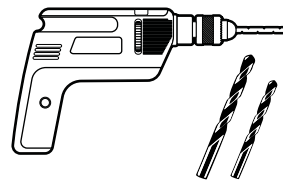

Drill and drill bits
ø 8/25"[8mm]
ø 6/25"[6mm]
ø 1/8"[3mm]




Cutter




Measuring tape



Level

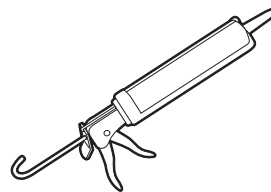

Silicone

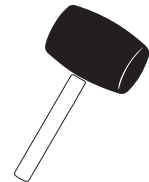


Rubber mallet



Safety gloves




Safety glasses



Hacksaw



Masking tape




Wooden Spacer



Professional-grade
Glass suction cup

INSTALLATION STEPS

1. Measure the finished opening width at the bottom and the model height. Use these dimensions as "**W1**"(**TOP**) and "**W2**"(**bottom**). Compare W1 and W2, use the smaller number as finished opening size. Verify that the model size ordered will fit the finished opening before beginning installation.

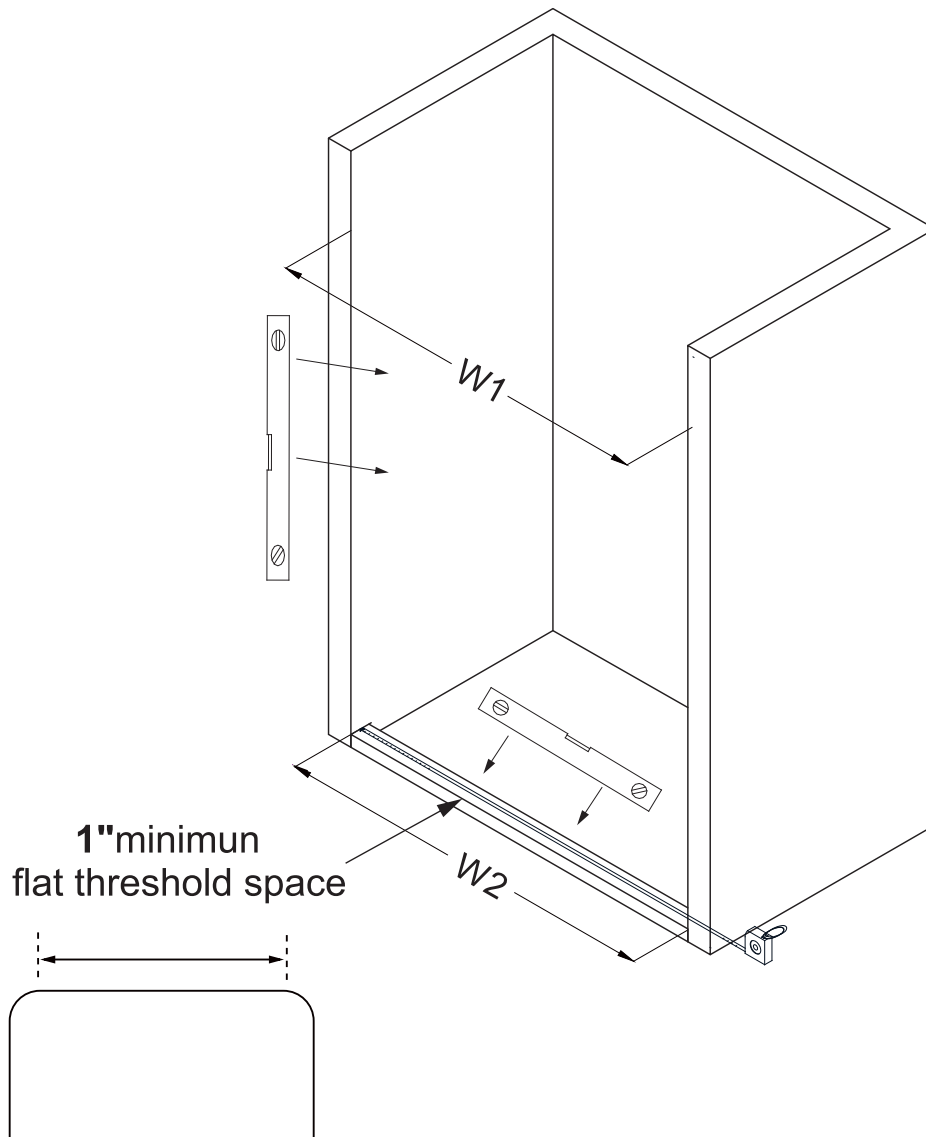

! WARNING!

This door requires a minimum 1" flat threshold space for installation


! WARNING!

Threshold must be level. The door may not function properly if the threshold is out-of-level.











! WARNING!

This door has limited out of plumb adjustment. Each inline panel can be adjusted up to 1/2" for out of plumb. Out of plumb adjustments greater than 1/2" may cause the door not to function properly.




NOTE:
Placement of surfaces

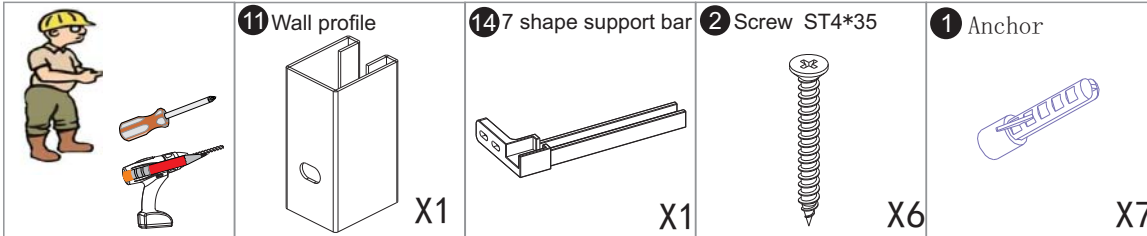


Step 1

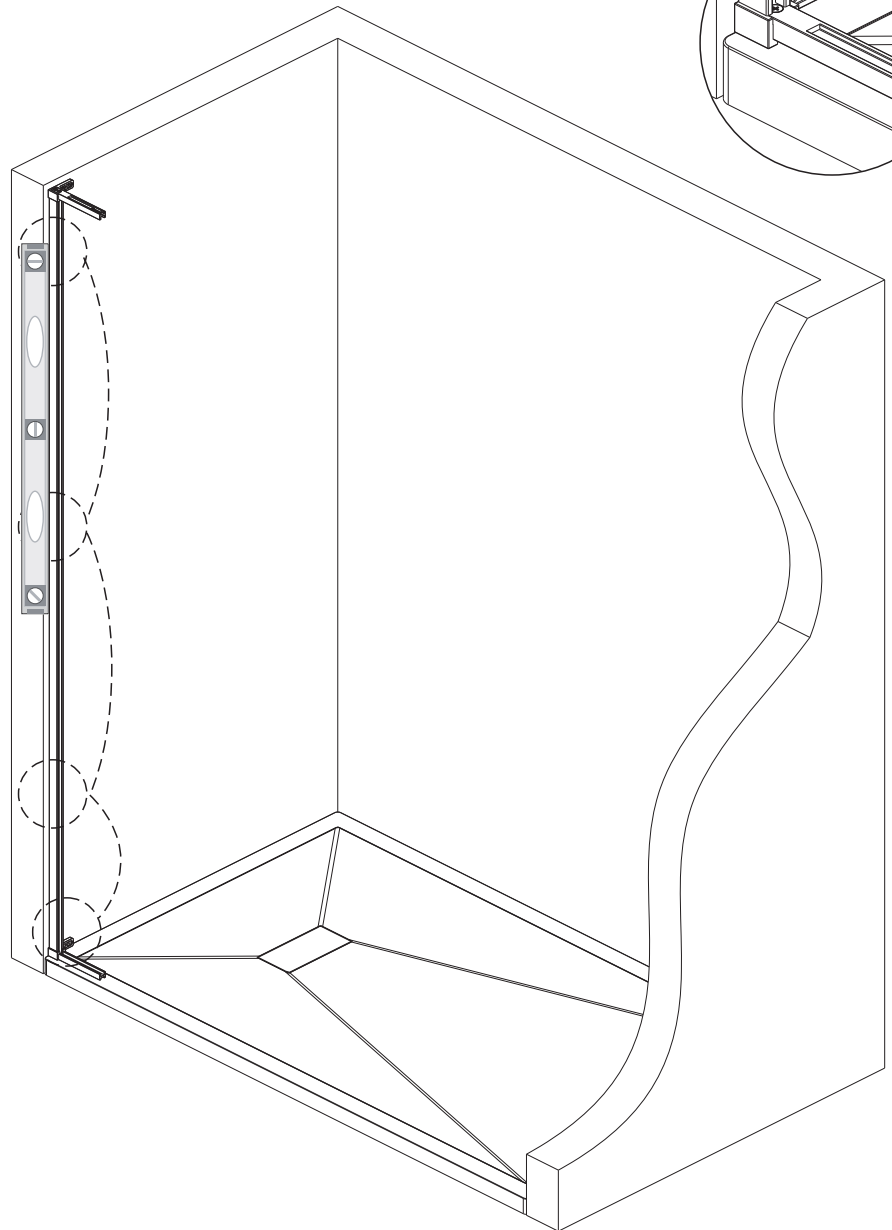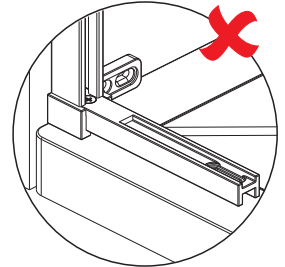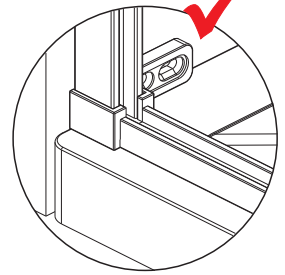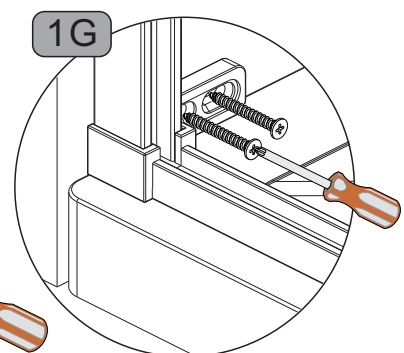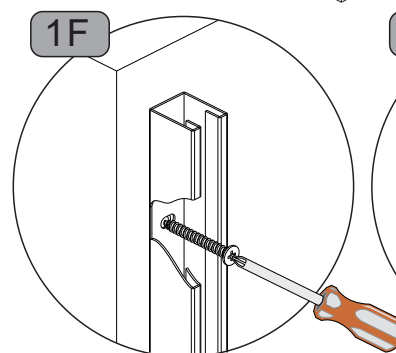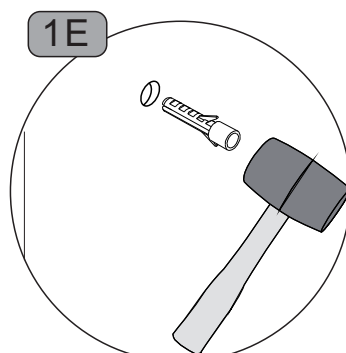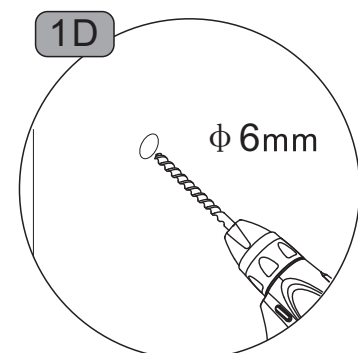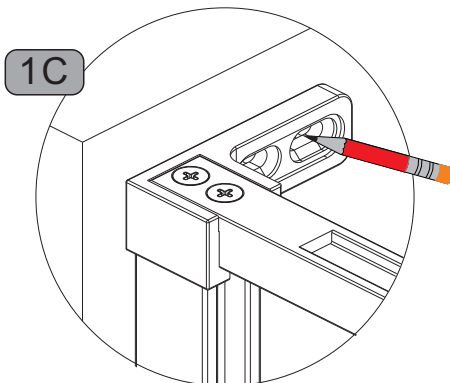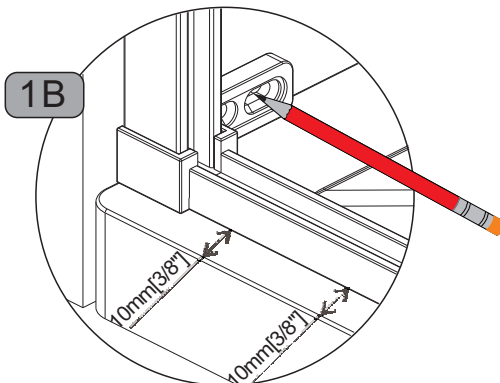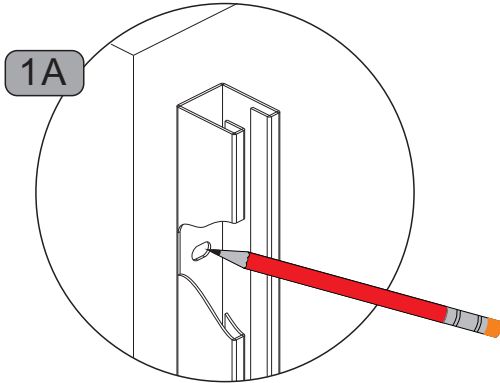


◆ Installation Steps



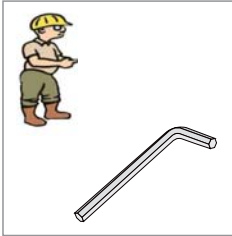
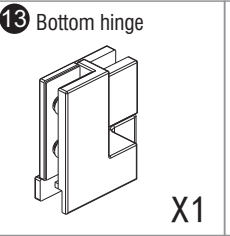
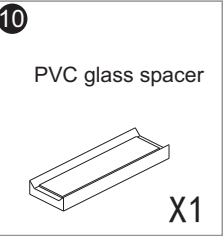
	6 Top hinge  X1	12 Hinge fixed glass  X1	13 Bottom hinge  X1	10 PVC glass spacer  X1
--	---	--	--	---


Step 2

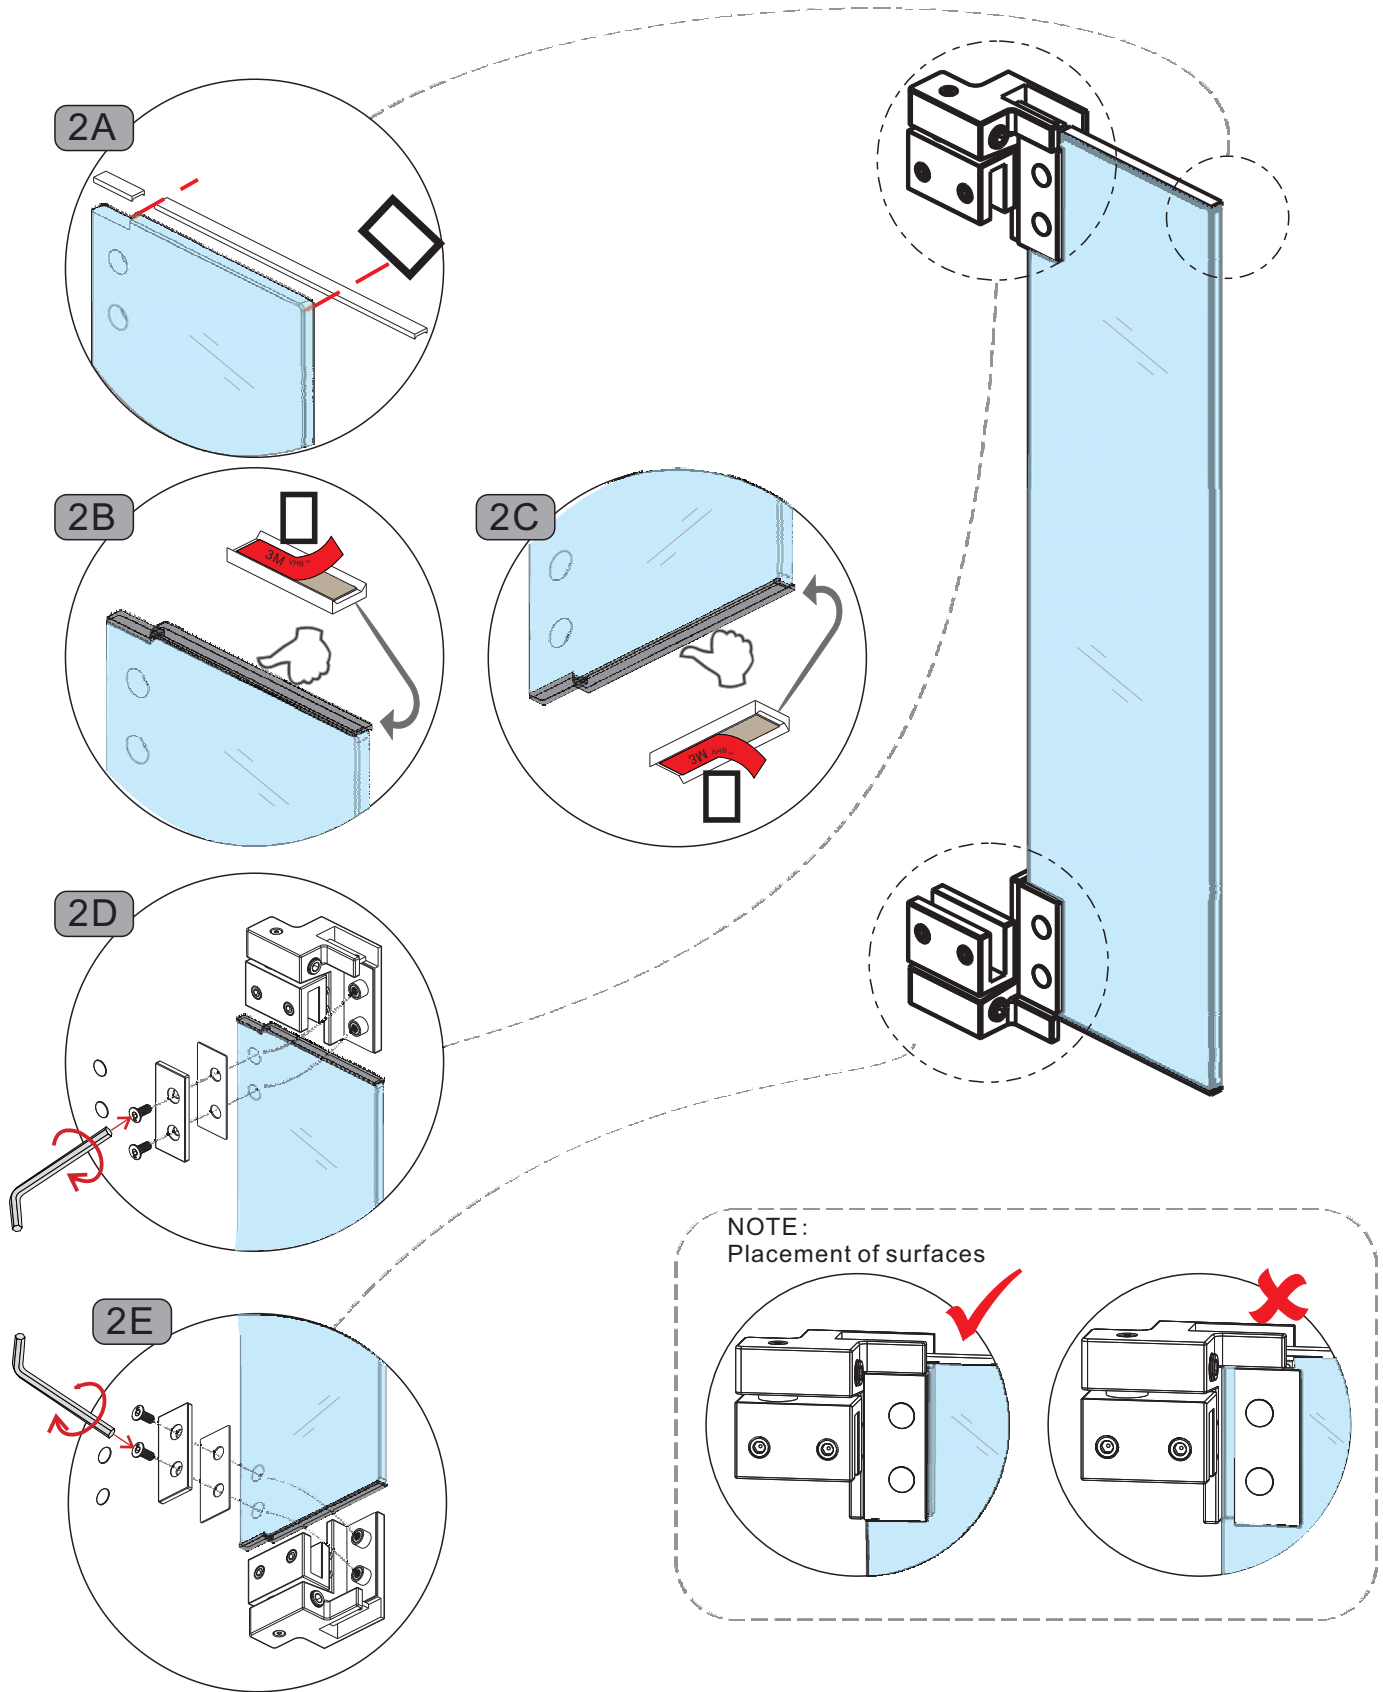




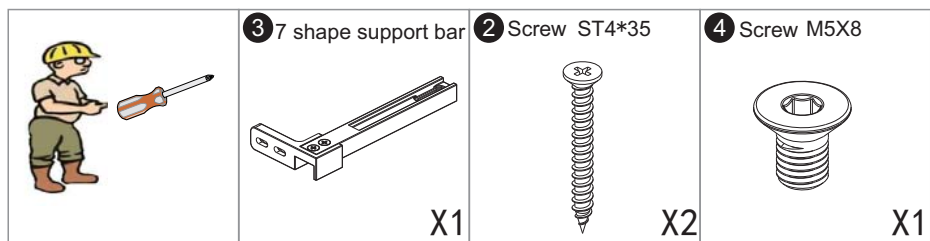



Step 3

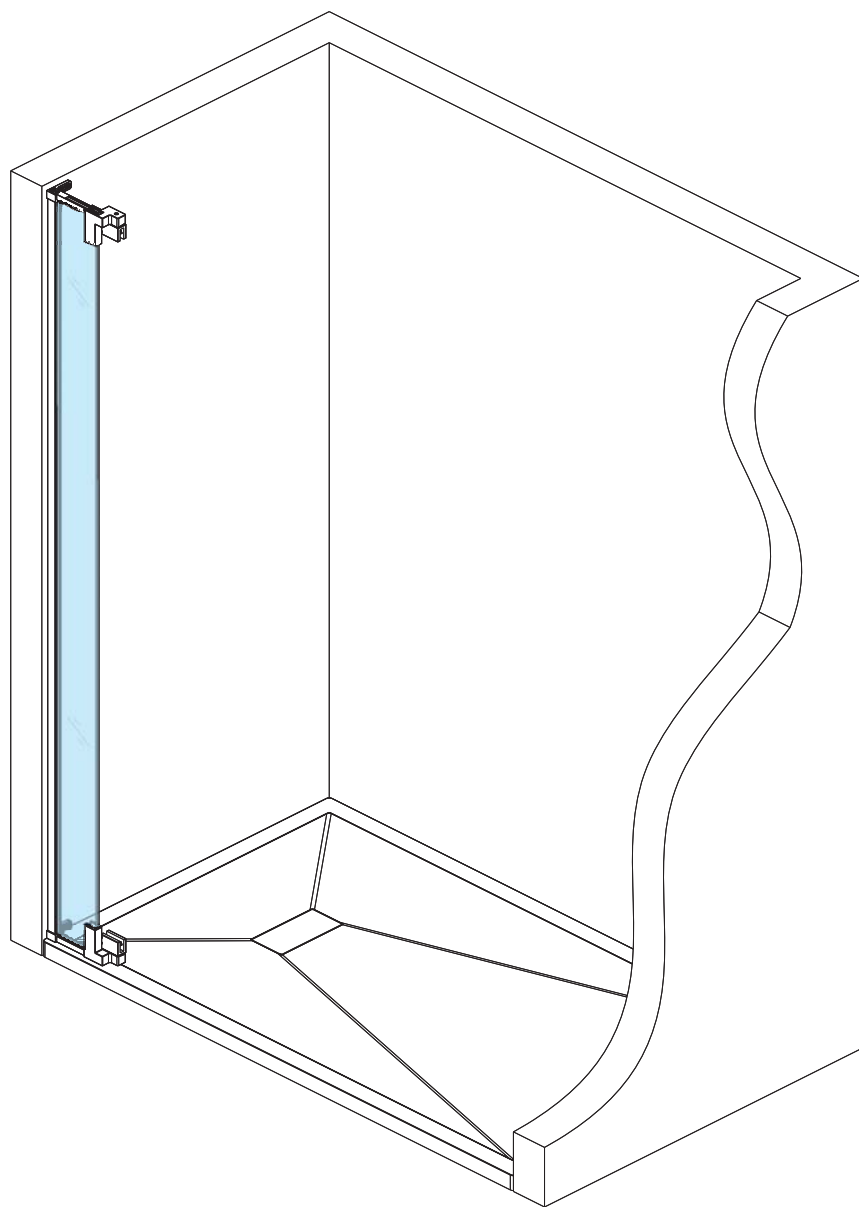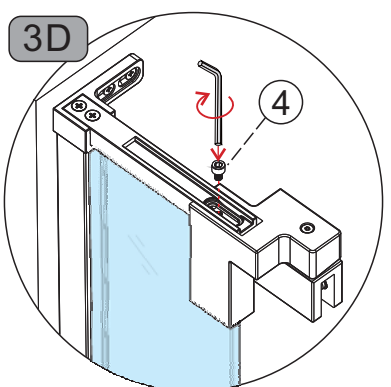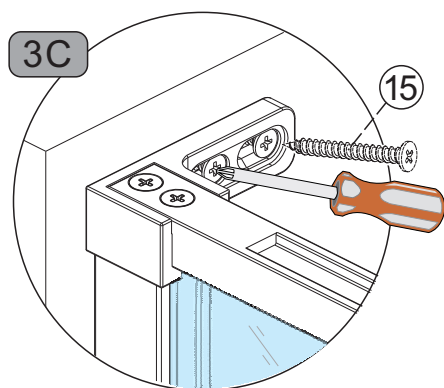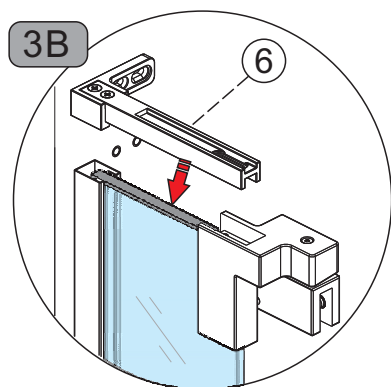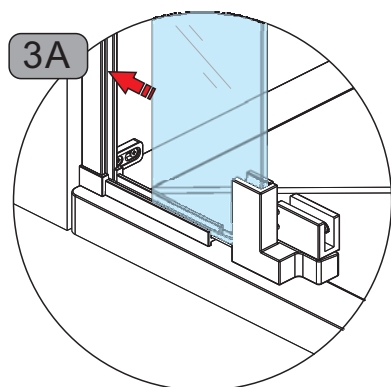




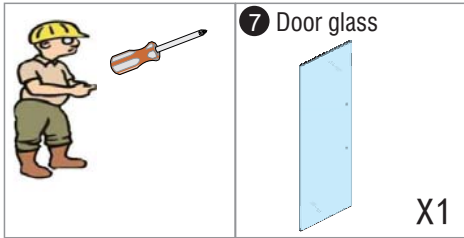



Step 4

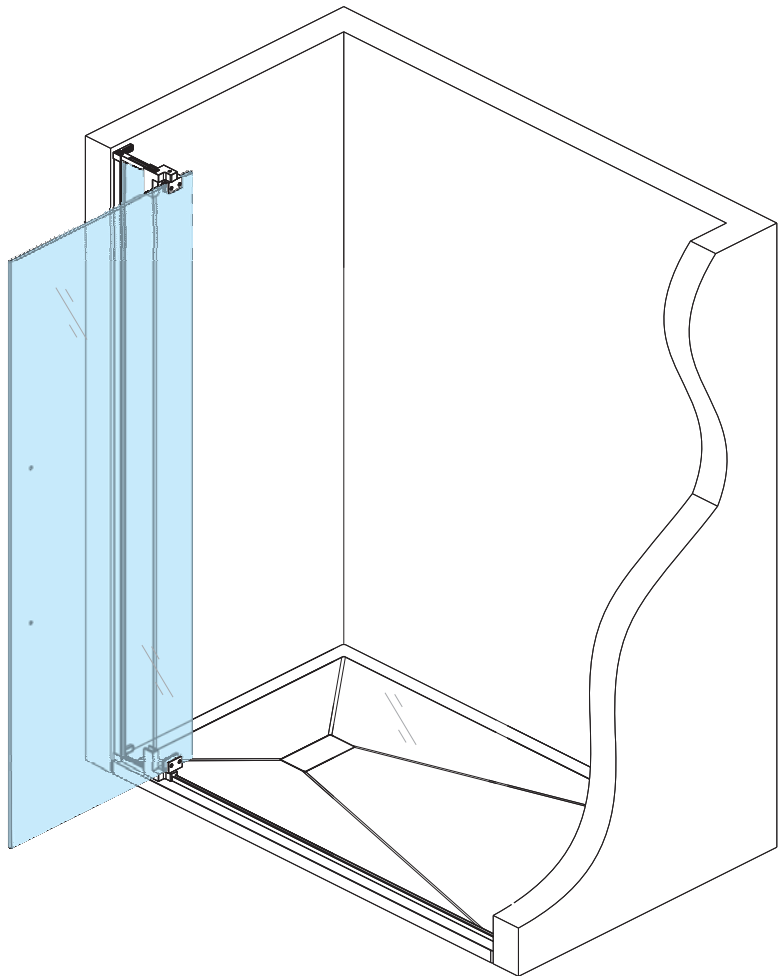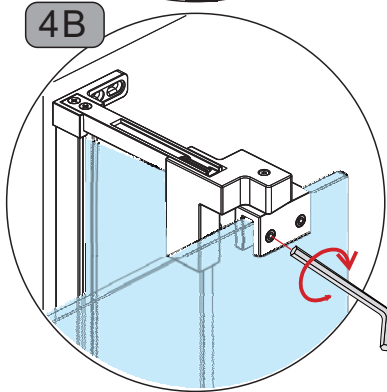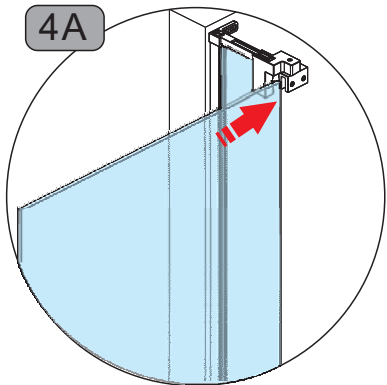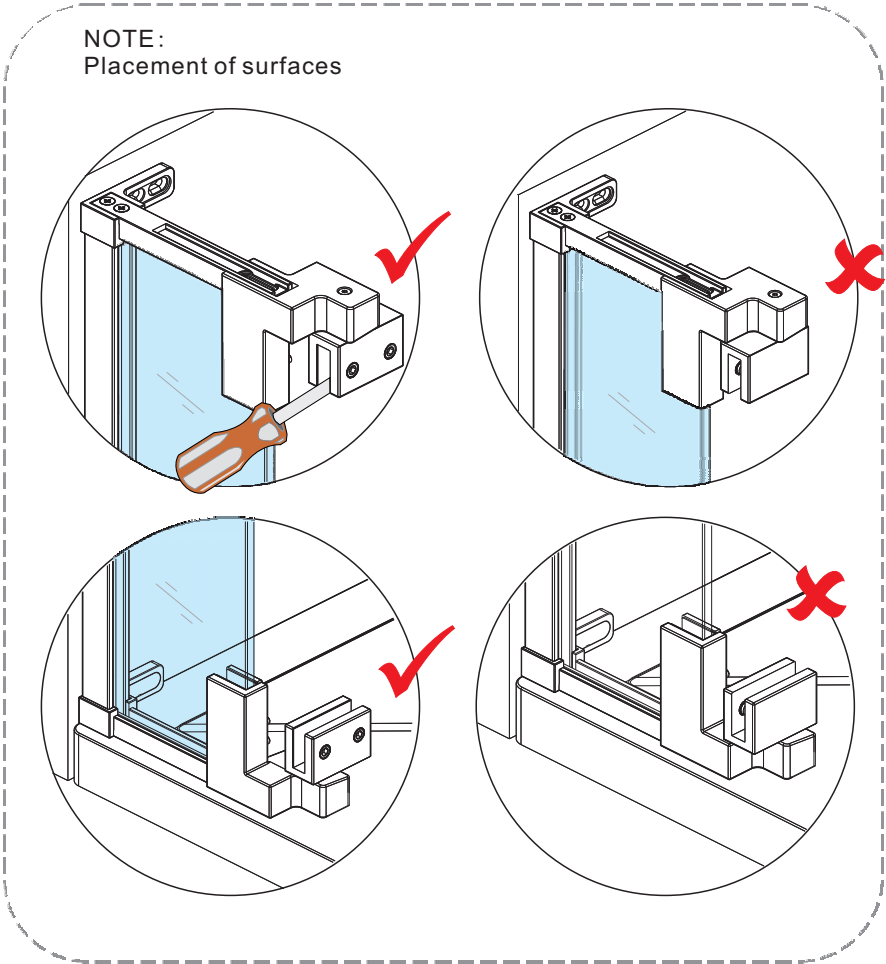





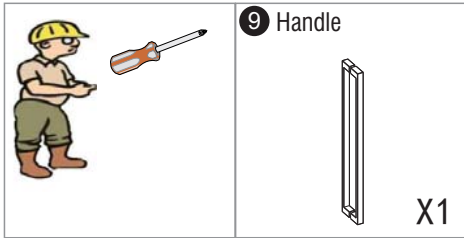



Step 5

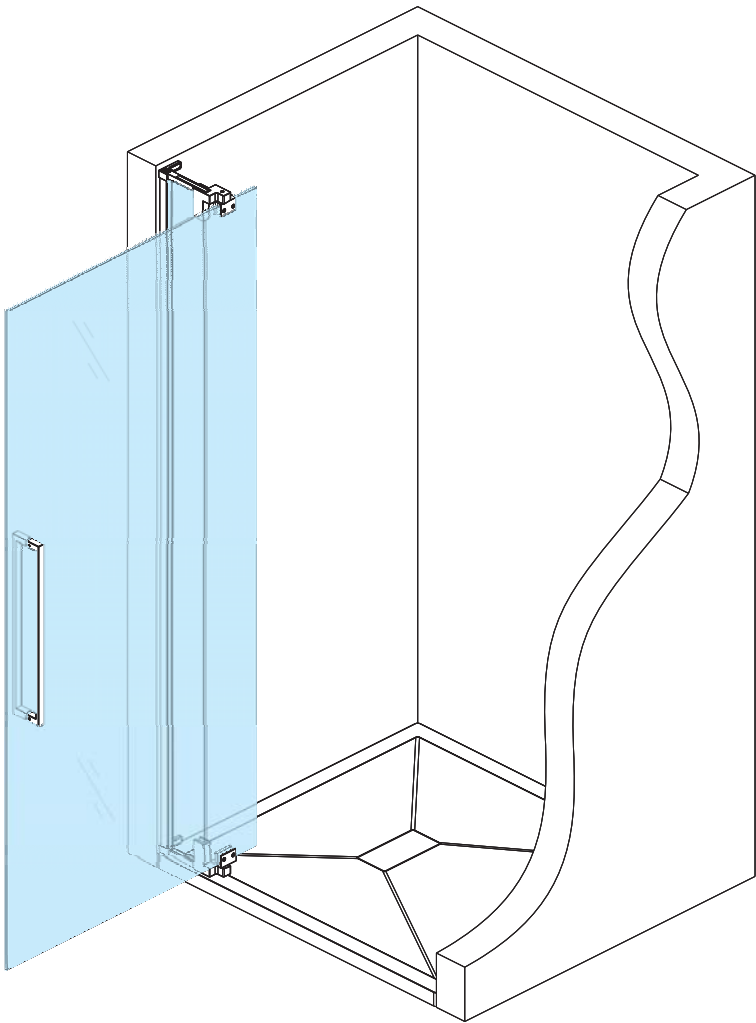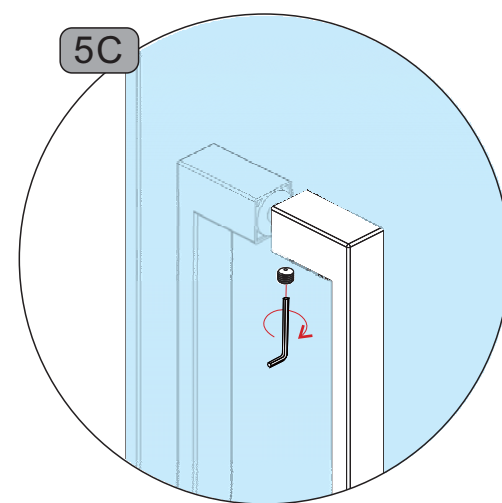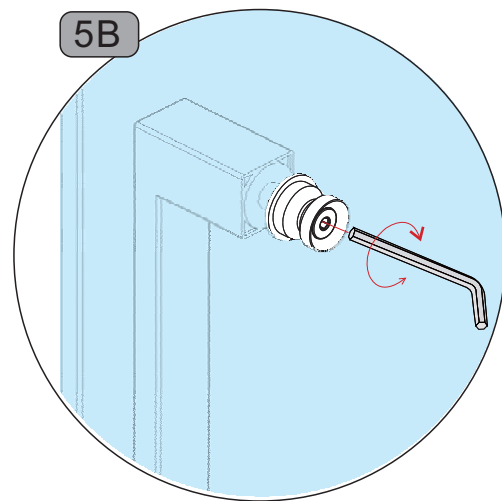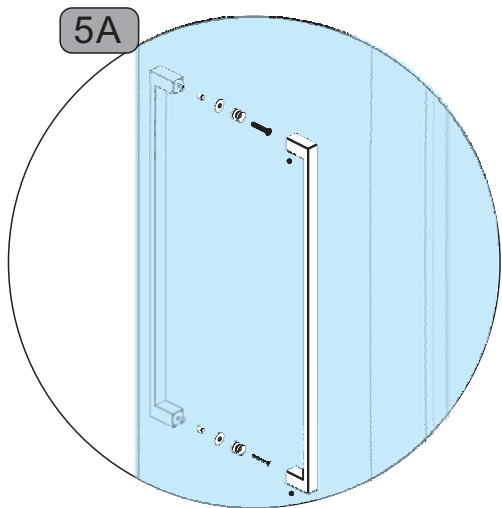

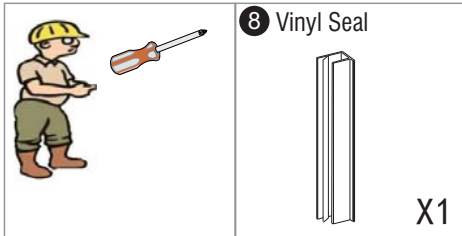

Step 6

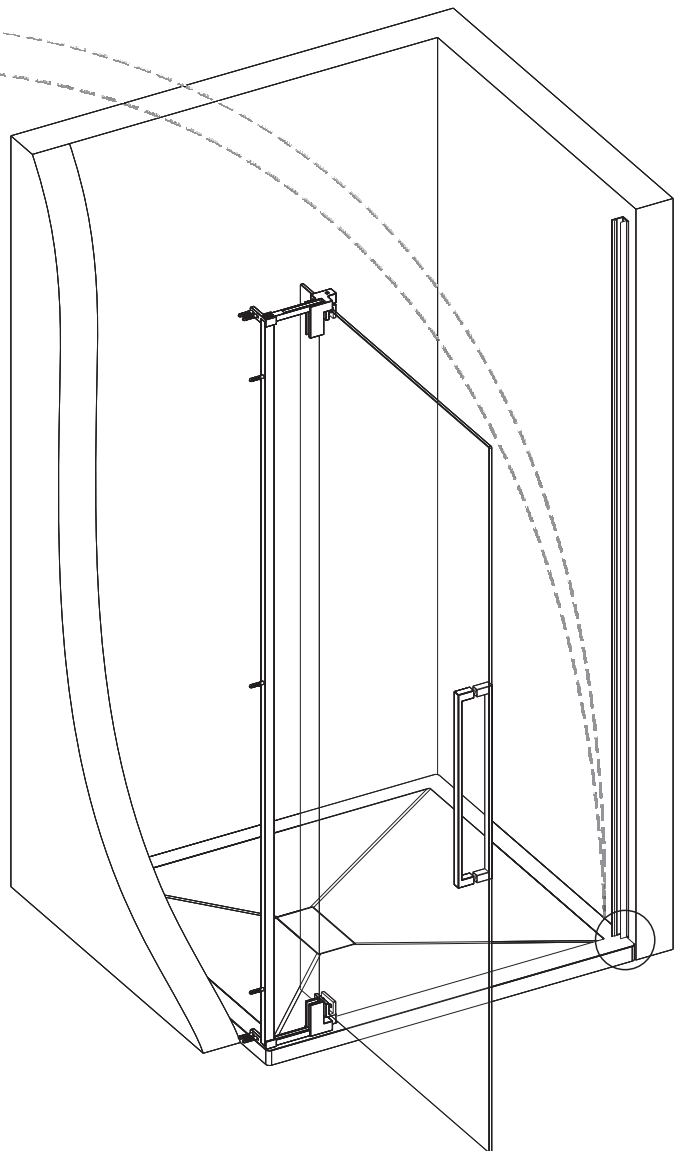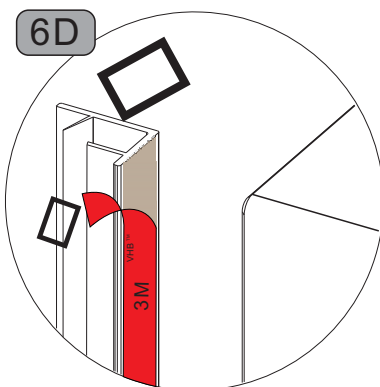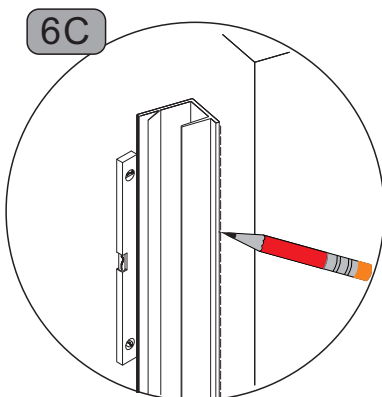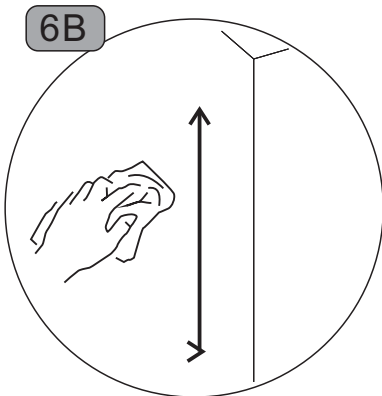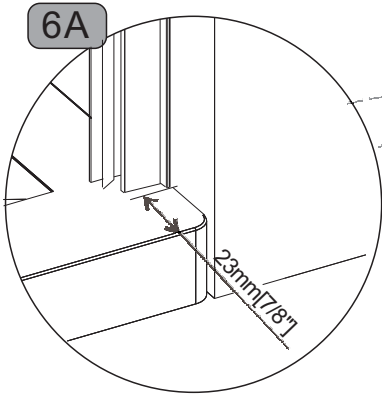


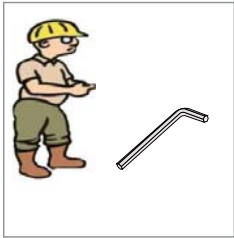

Step 7


7A

Adjustable size 1 can be adjusted by 50mm[2 5/8"]

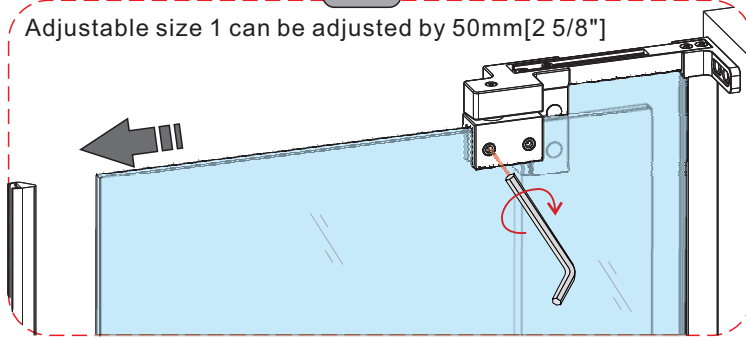


7B

When the adjustment size 1 is not enough, the locking 1,2 can be adjusted by 10mm[3/8"]


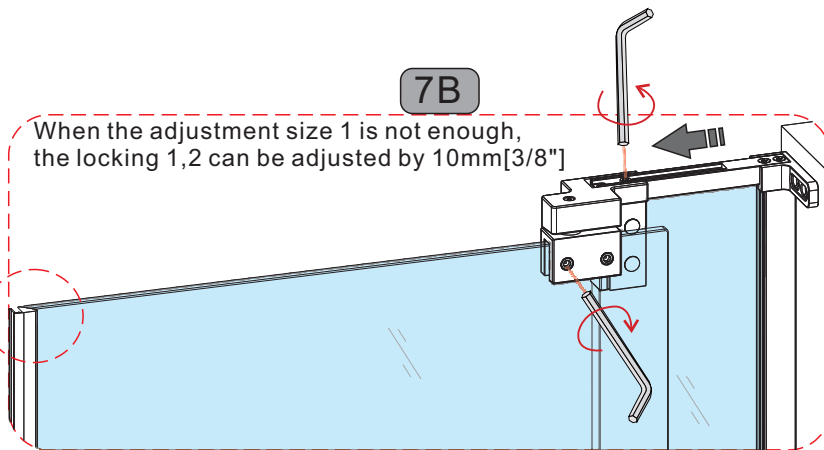







9mm[3/8"]

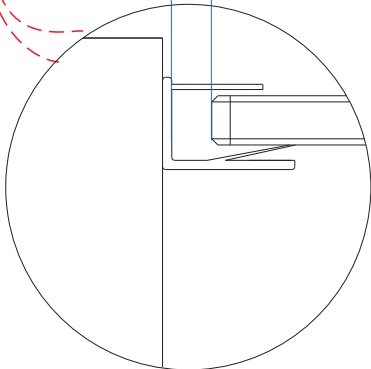







7C


Adjust to seamless locking

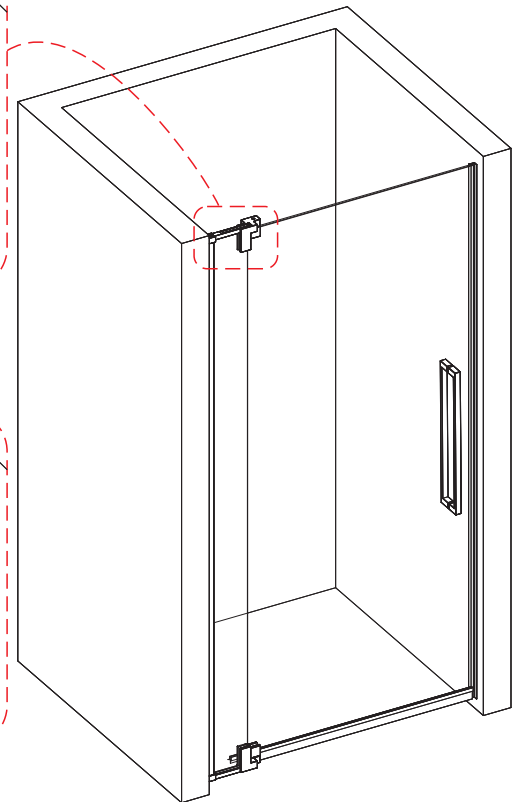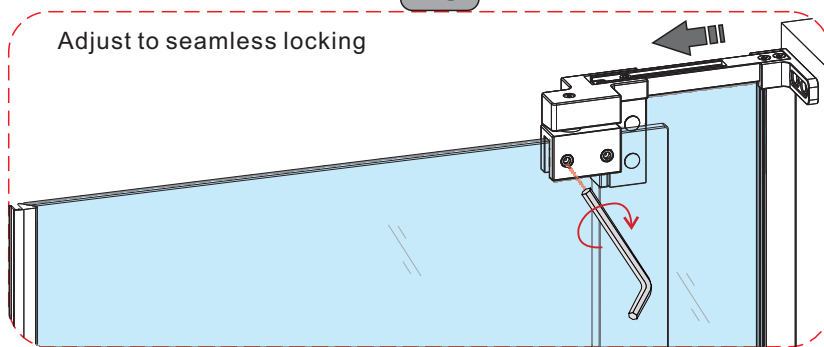

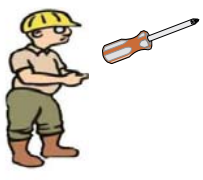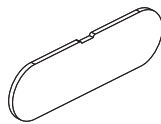
	16 Water dam  X1	15 Bottom sweep  X1	3 Top support bar 14 Bottom support bar  X2	5 Decorative cover  X1
--	--	---	---	--

Step 8

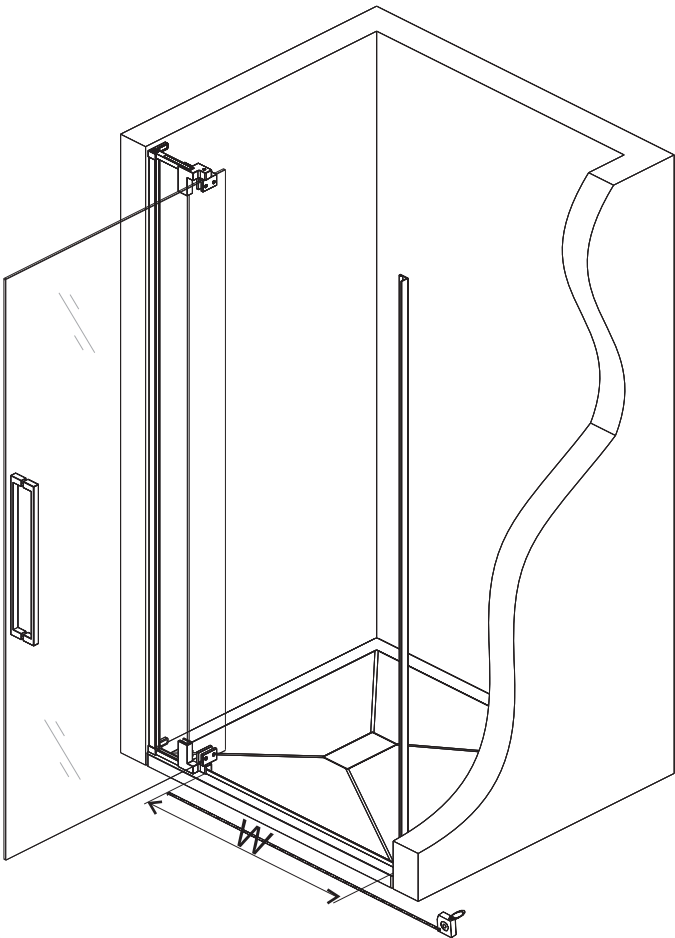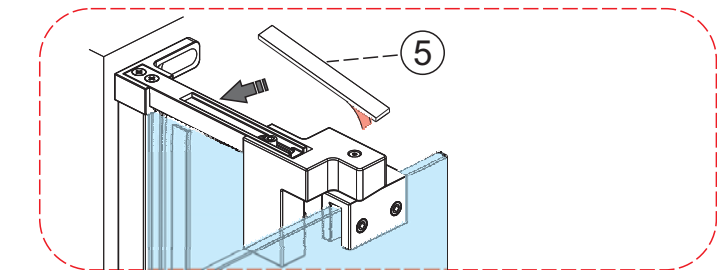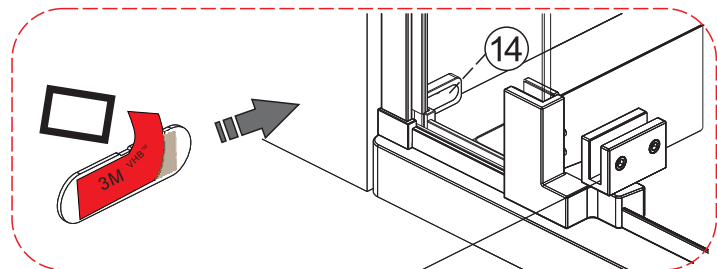
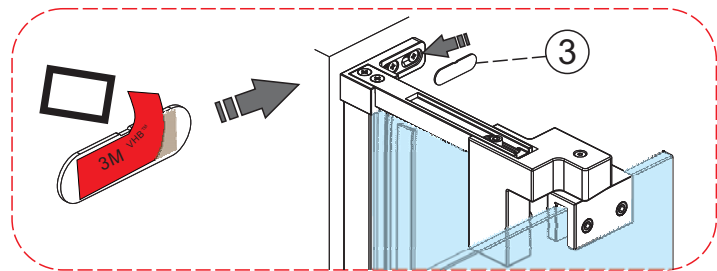
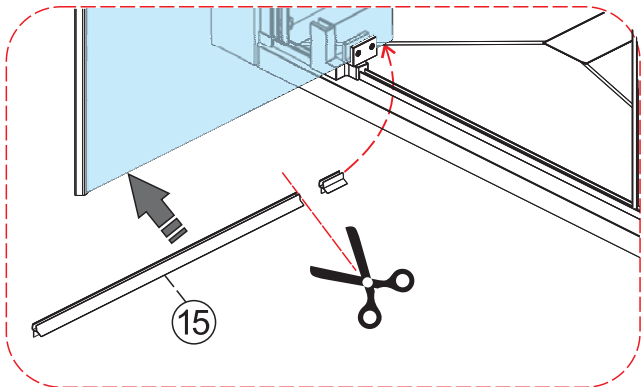
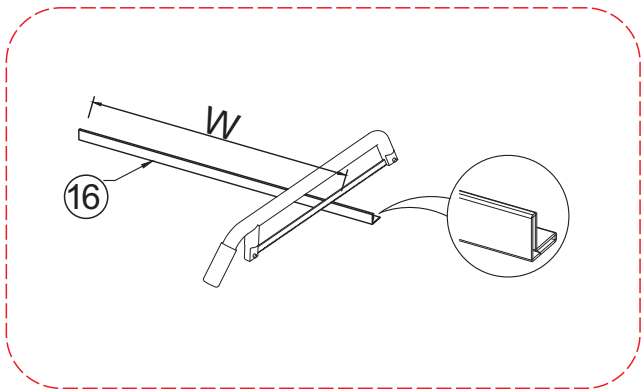


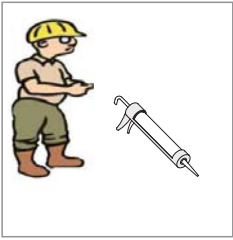

Step 9

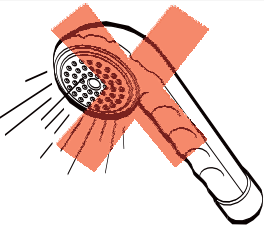


Allow 24 hours to cure fully before using the shower.

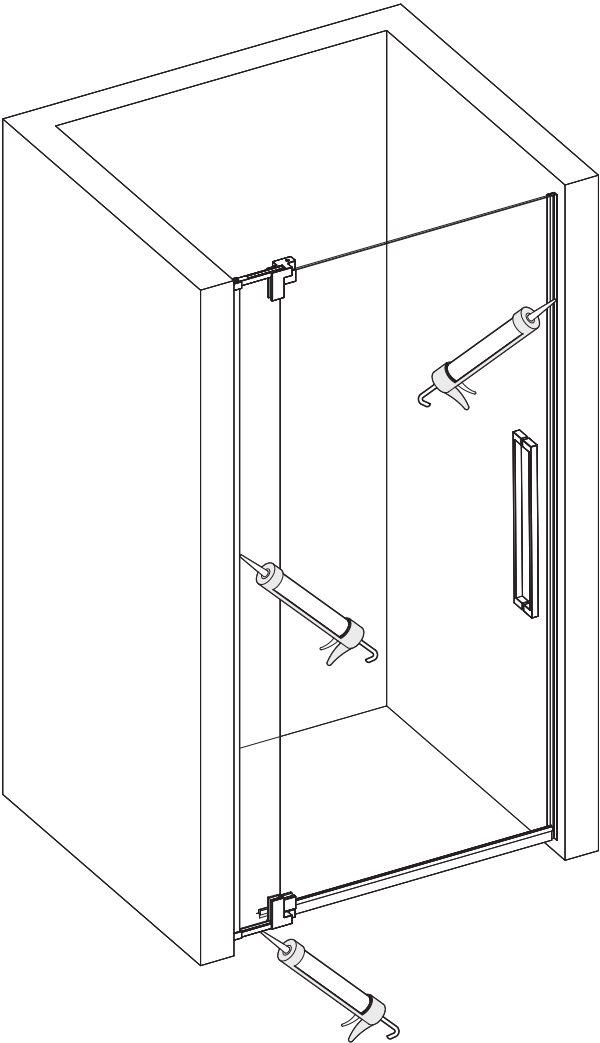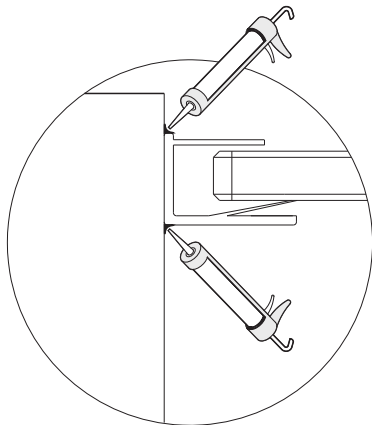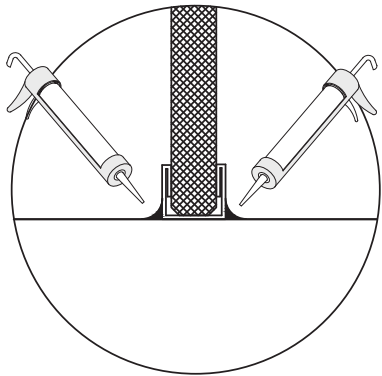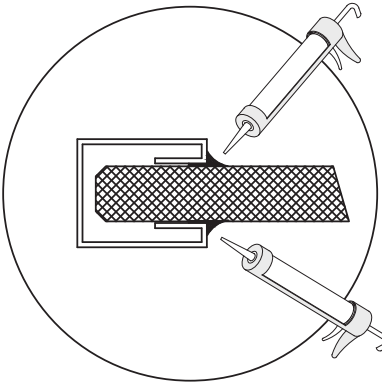

Shower Door

For 3/8 inch(10mm) / 5/16 inch(8mm) Glass

INSTALLATION GUIDE

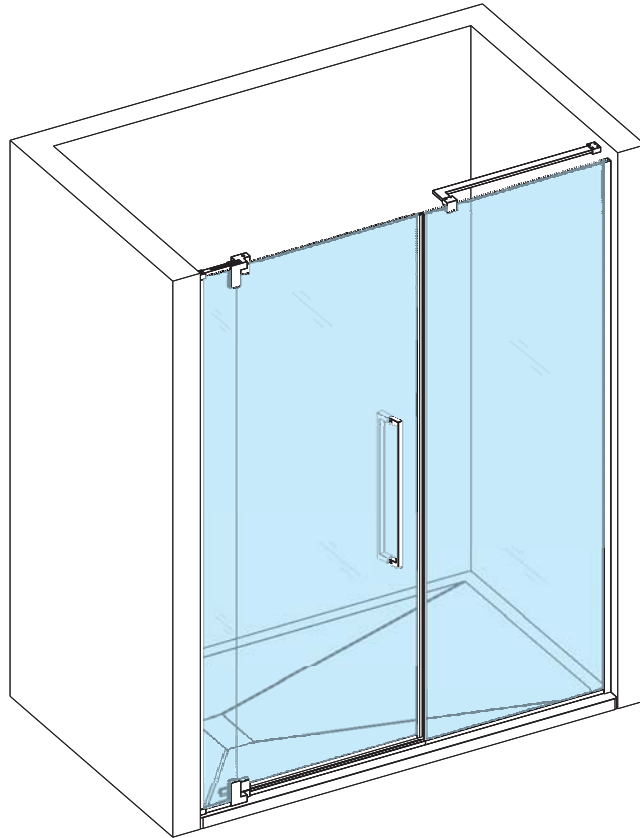

Type B

Left hand door installation shown


CAUTION: To reduce the risk of breakage, keep corner protectors on glass while installing.

Consult your local plumbing codes prior to installation.



















IMPORTANT: To complete an entire door installation, you will need the following:

1. One carton containing Door panel / Inline panel / Hardware kit with door handle
2. One carton containing fixed glass , support bar , wall profile and magnetic seal
3. You may need L Bracket or support bar for particular type and size. See page 24.

PACKAGE CONTENT

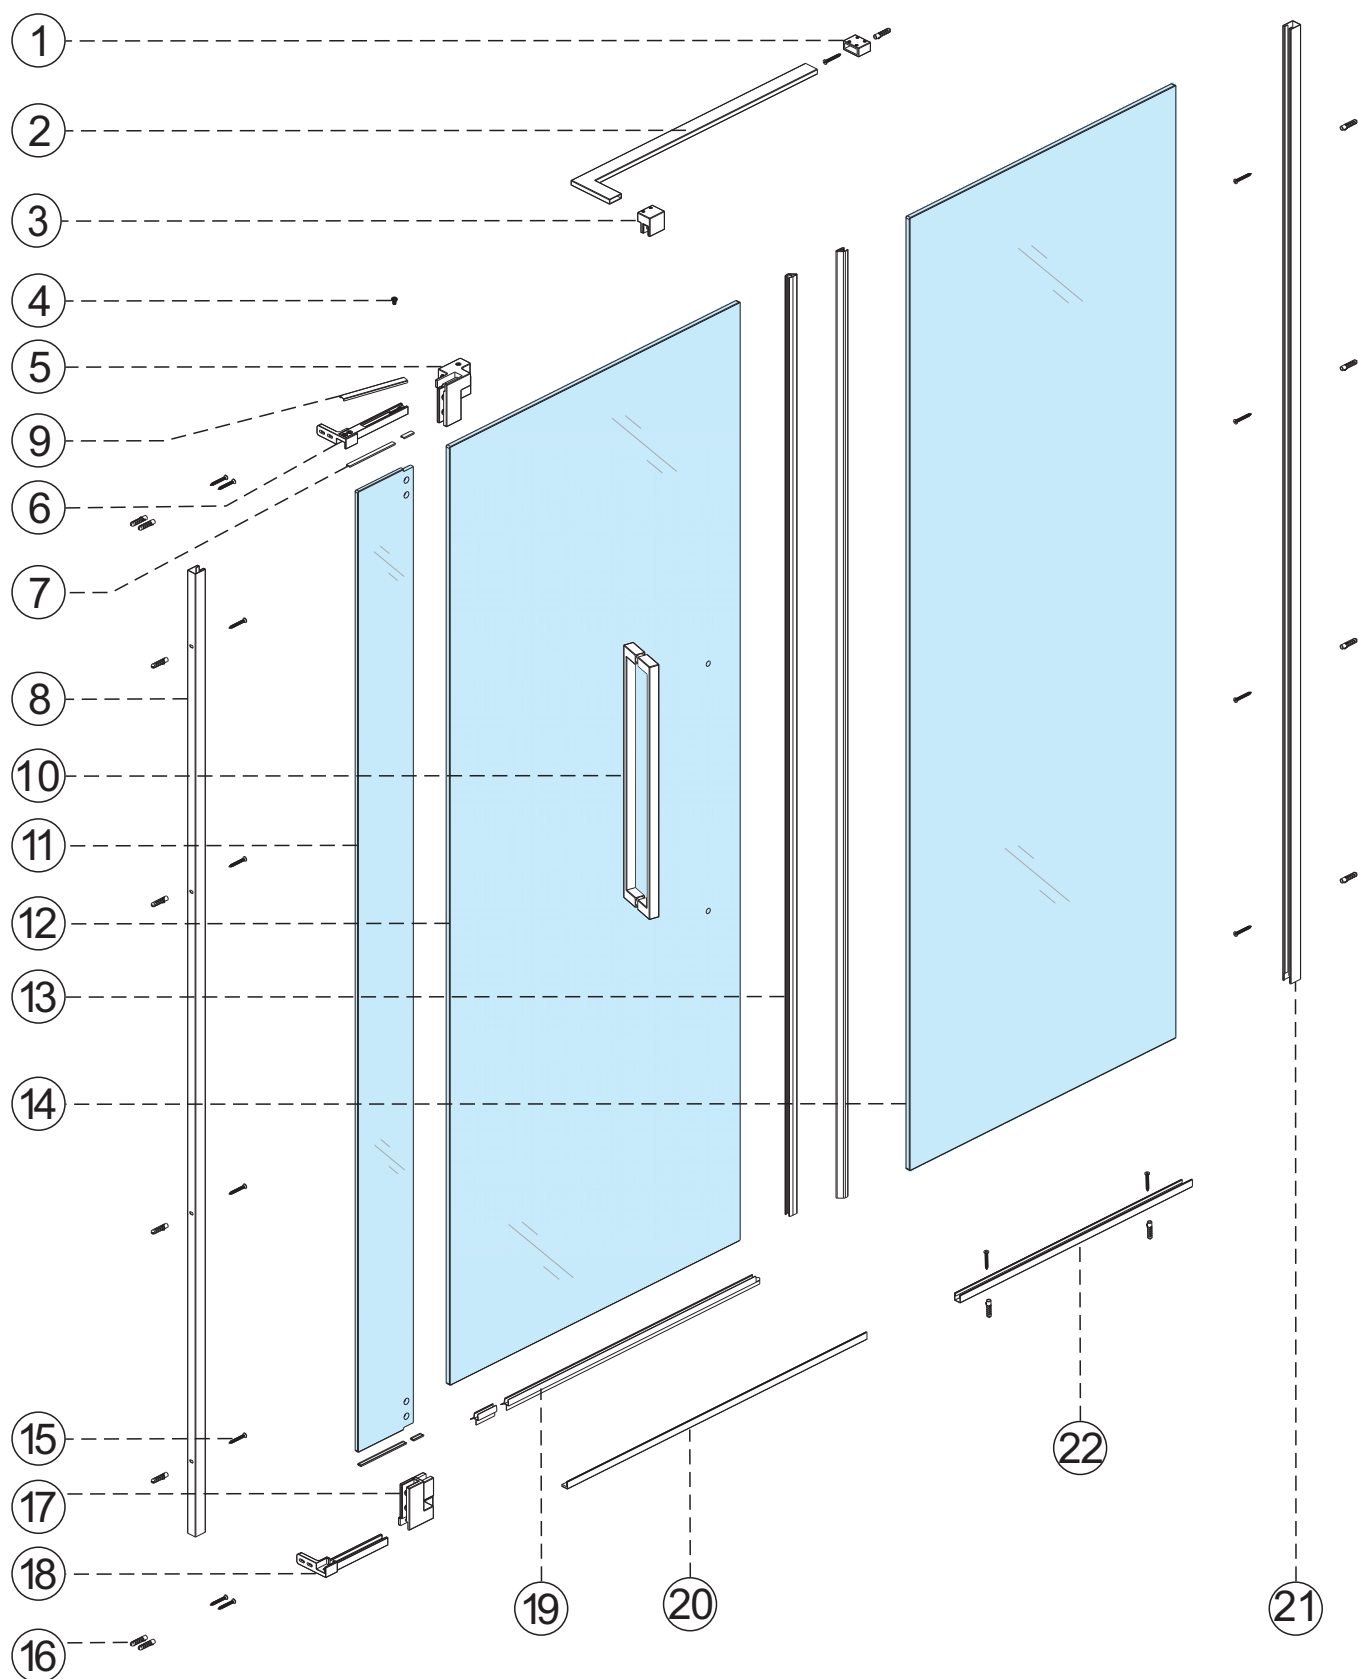

PACKAGE CONTENT

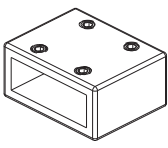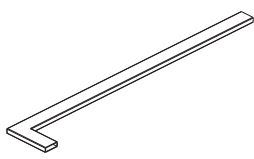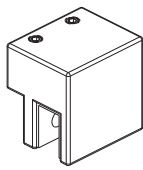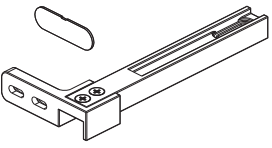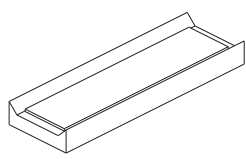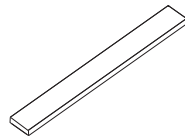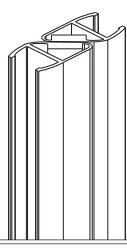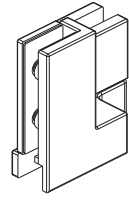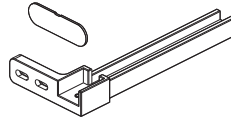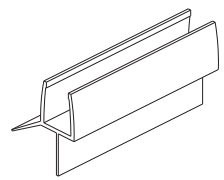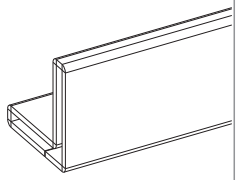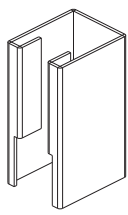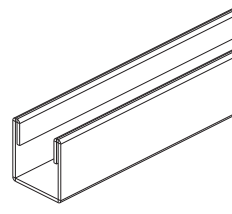 X1	 X1	 X1	 X1	 X1
 X1	 X1	 X1	 X1	 X1
 X1	 X1	 X2	 X1	 X15
 X15	 X1	 X1	 X1	 X1
 X1	 X1			

PART LIST


Part number	Description	Quantity	Code
1	Wall base	1	
2	Support bar	1	
3	Glass clips	1	
4	M5x8 Countersunk Screw	1	
5	Top Hinge	1	
6	7 shape support bar	1	
7	PVC glass spacer	1	
8	Wall profile	1	
9	Stainless steel decorative cover	1	
10	Handle	1	
11	Hinge fixed glass	1	
12	Door Panel	1	
13	Magnetic seal Strips - (1) 8mm & (1) 10mm	2	
14	Fixed glass	1	
15	ST4x35 Countersunk Screw	15	
16	Wall Anchor	15	
17	Bottom hinge	1	
18	7 shape support bar	1	
19	Bottom Sweep Vinyl Seal	1	
20	Water-dam	1	
21	Wall profile	1	
22	Bottom channel	1	

XX indicate hardware finish: PC = Polished Chrome; BS = Brushed Stainless; MB = Matte Black; CB = Champagne Bronze

MODELS TO USE L BRACKET OR SUPPORT BAR


Type	Overall Size	Door Panel	InlinePanel	InlinePanel	L Bracket or Support Bar needed(Y)or not(N)	Reference Graph
B	39"- 42"	27-5/8"-30-5/8"	5-3/8"	6"	N	B1
B	45"- 48"	27-5/8"-30-5/8"	5-3/8"	12"	N	B1
B	51"- 54"	27-5/8"-30-5/8"	5-3/8"	18"	N	B1
B	57"- 60"	27-5/8"-30-5/8"	5-3/8"	24"	Y	B1
B	63"- 66"	27-5/8"-30-5/8"	5-3/8"	30"	Y	B1

Note: All size are nominal size.

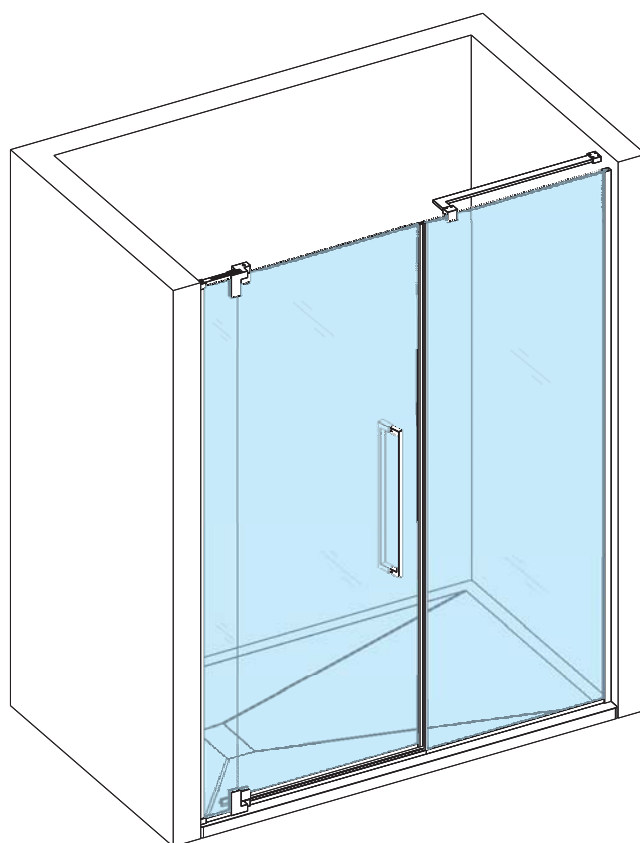

B1


REVERSIBLE DESIGN

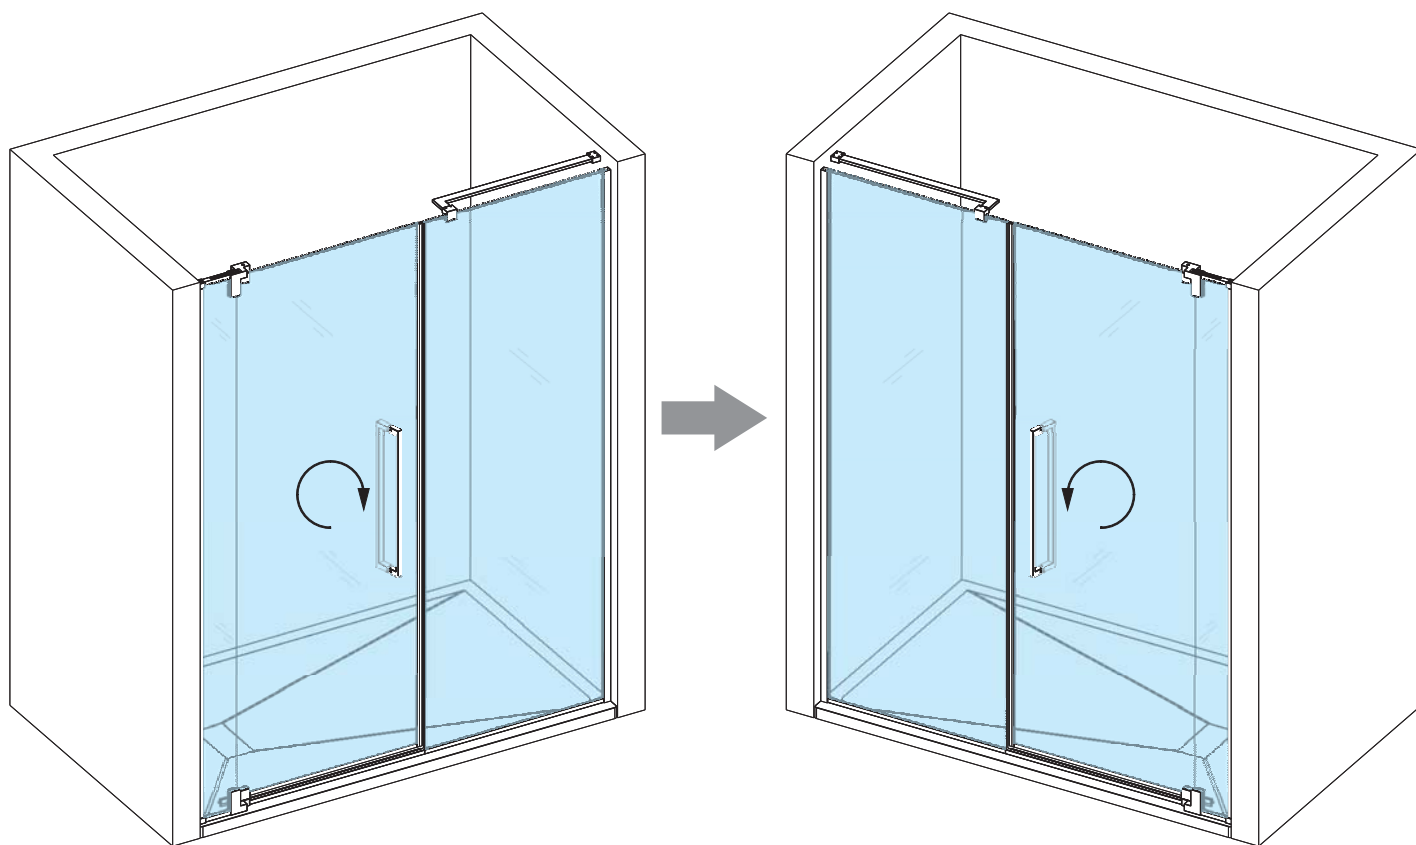

The doors are reversible for left or right-hand door installation. This manual will show the right hand door installation. For a left hand door installation, simply begin on the opposite wall and reverse the orientation of parts as necessary.

INSTALLATION STEPS

1. Measure the finished opening width at the bottom and the model height. Use these dimensions as "**W1**"(**TOP**) and "**W2**"(**bottom**). Compare W1 and W2, use the smaller number as finished opening size. Verify that the model size ordered will fit the finished opening before beginning installation.

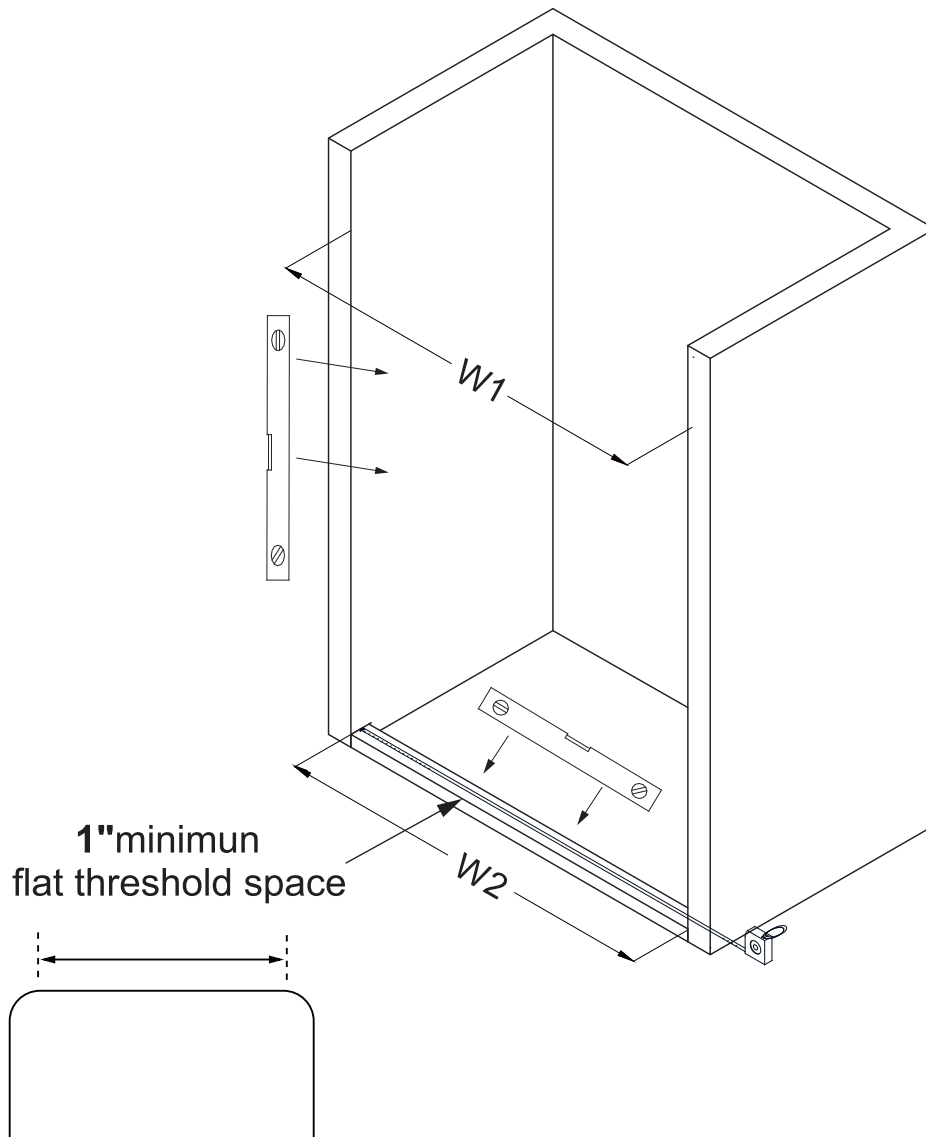

! WARNING!


This door requires a minimum 1" flat threshold space for installation

! WARNING!



Threshold must be level. The door may not function properly if the threshold is out-of-level.

! WARNING!









This door has limited out of plumb adjustment. Each inline panel can be adjusted up to 1/2" for out of plumb. Out of plumb adjustments greater than 1/2" may cause the door not to function properly.

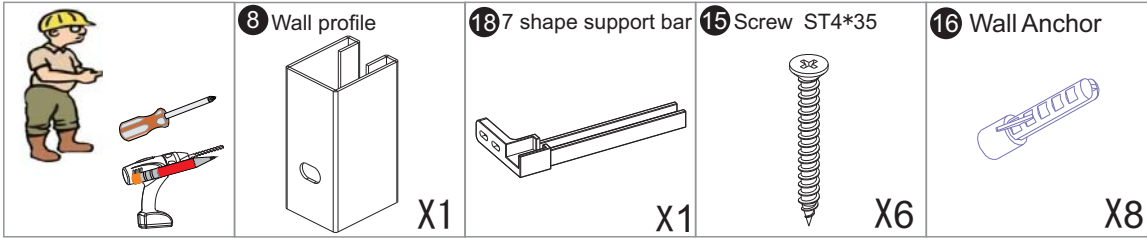




NOTE:
Placement of surfaces

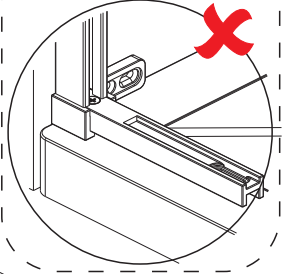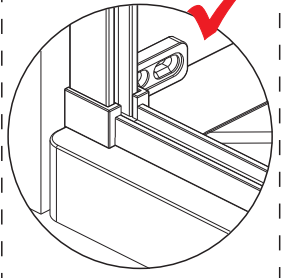


Step 1

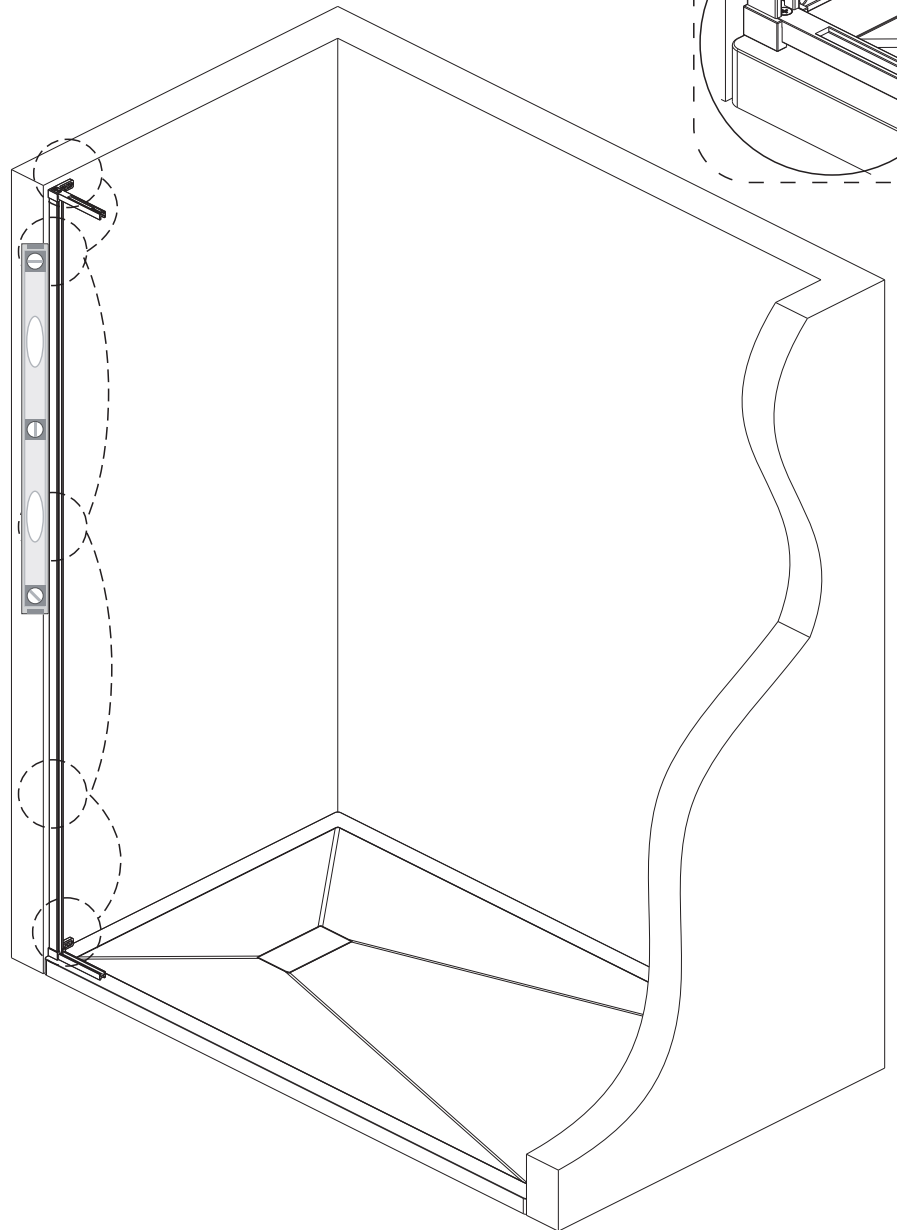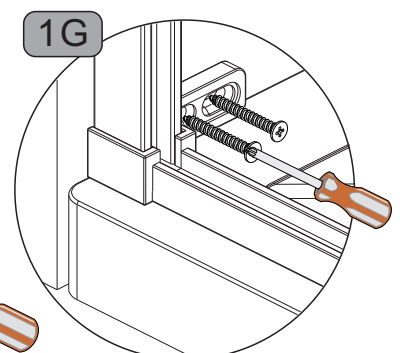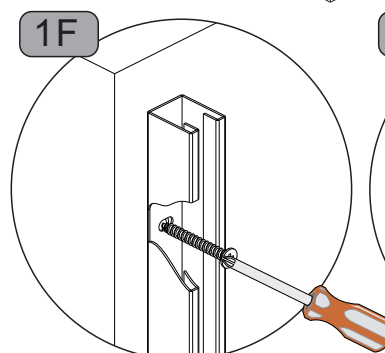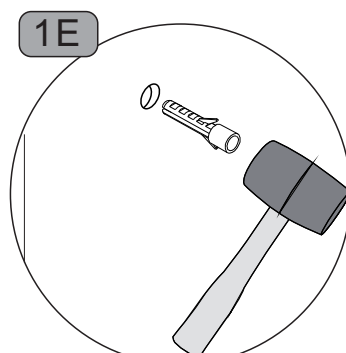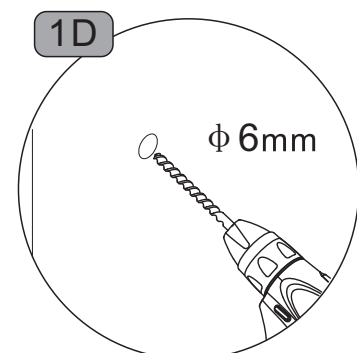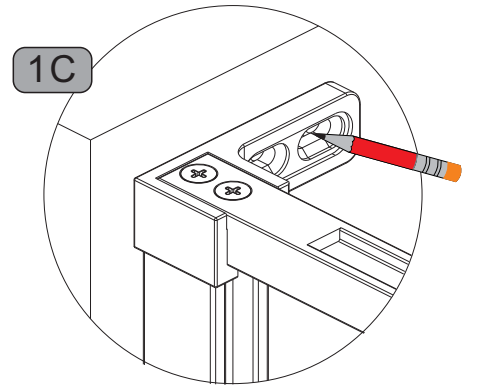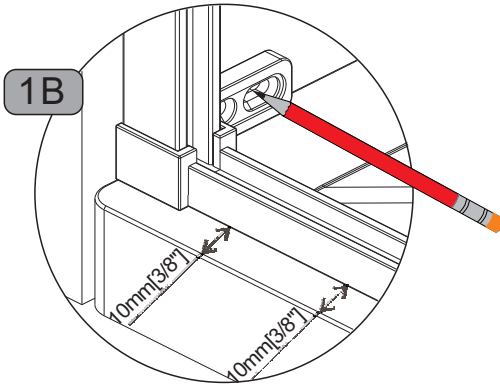
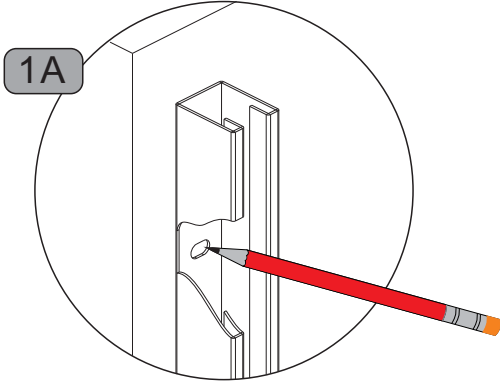


◆ Installation Steps


	5 Top hinge  X1	11 Hinge fixed glass  X1	17 Bottom hinge  X1	7 PVC glass spacer  X1
---	---	--	---	--


Step 2

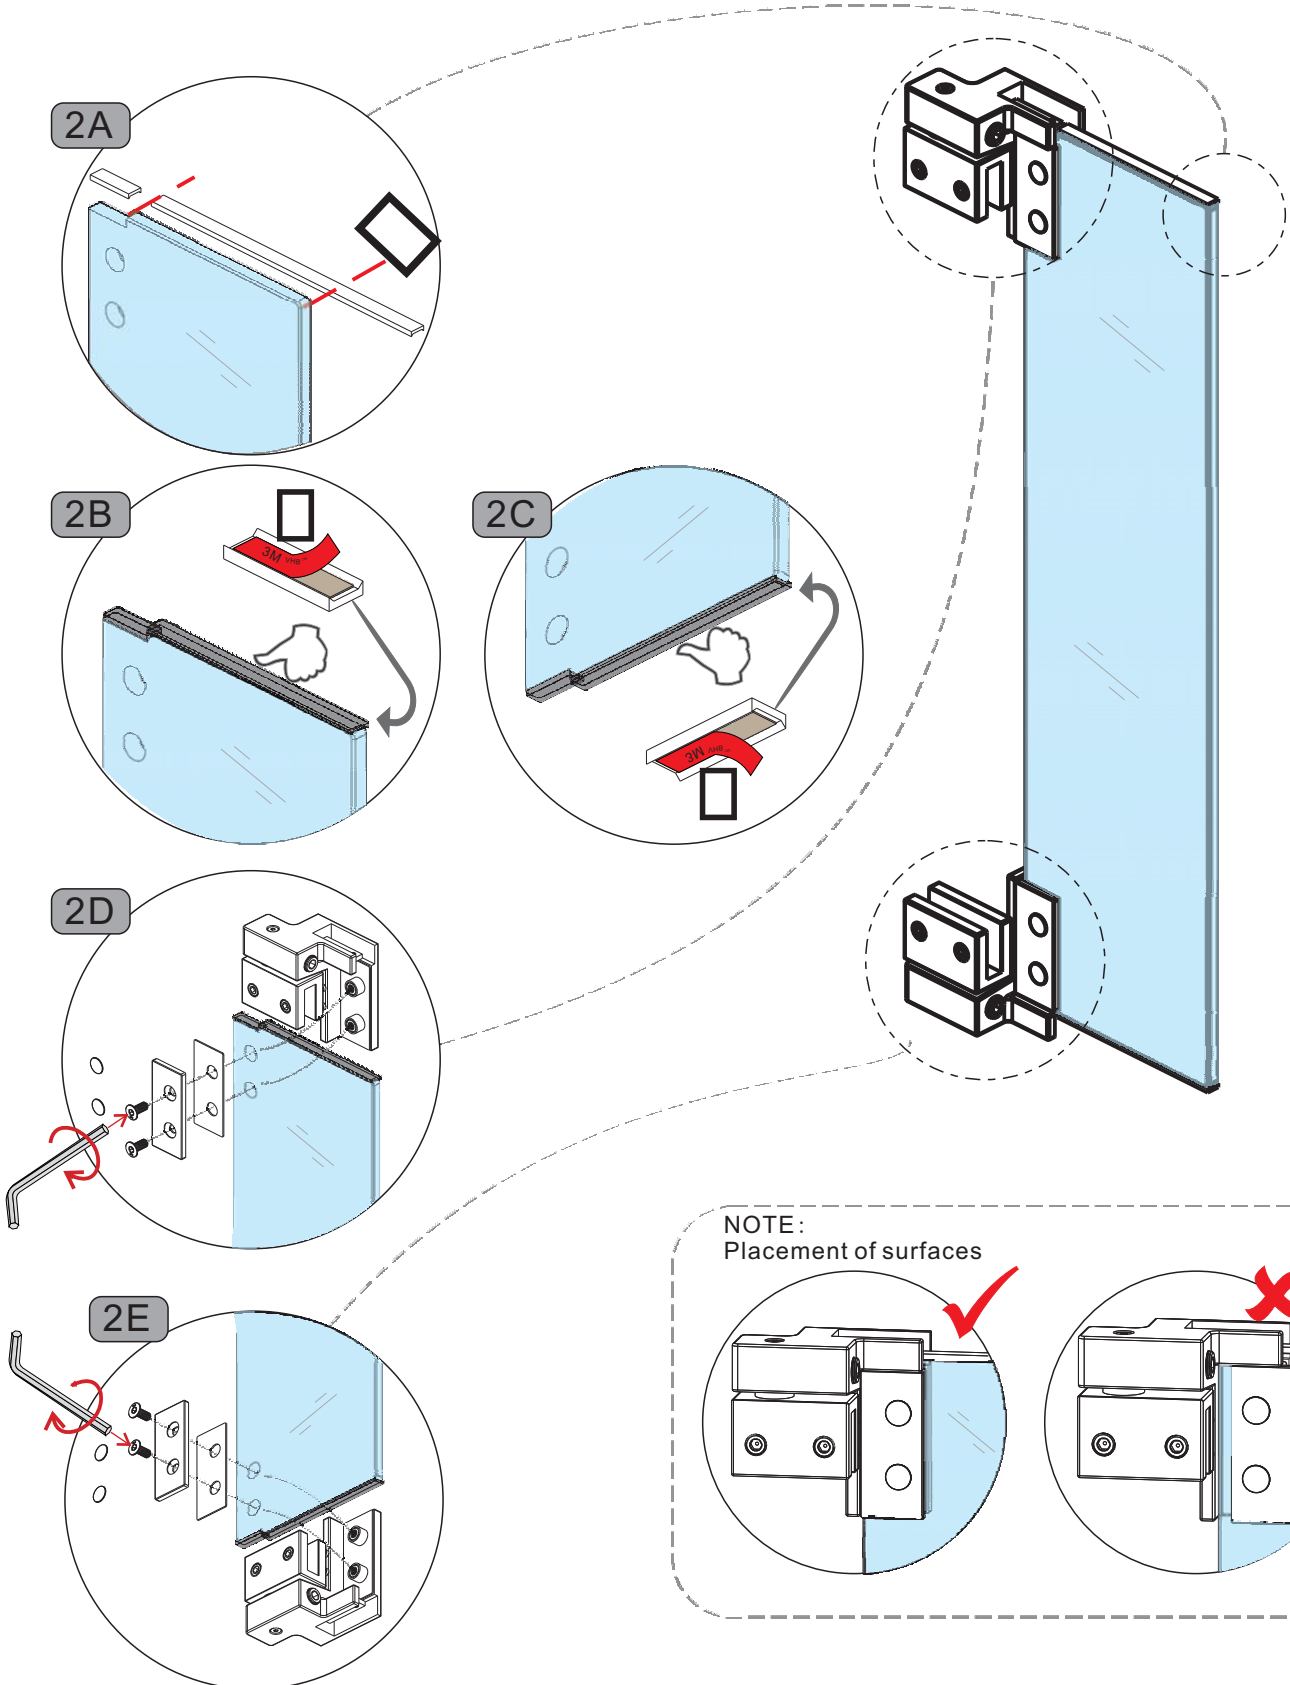






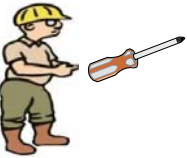

	6 7 shape support bar  X1	15 Screw ST4*35  X2	4 Screw M5X8  X1
---	---	---	--


Step 3

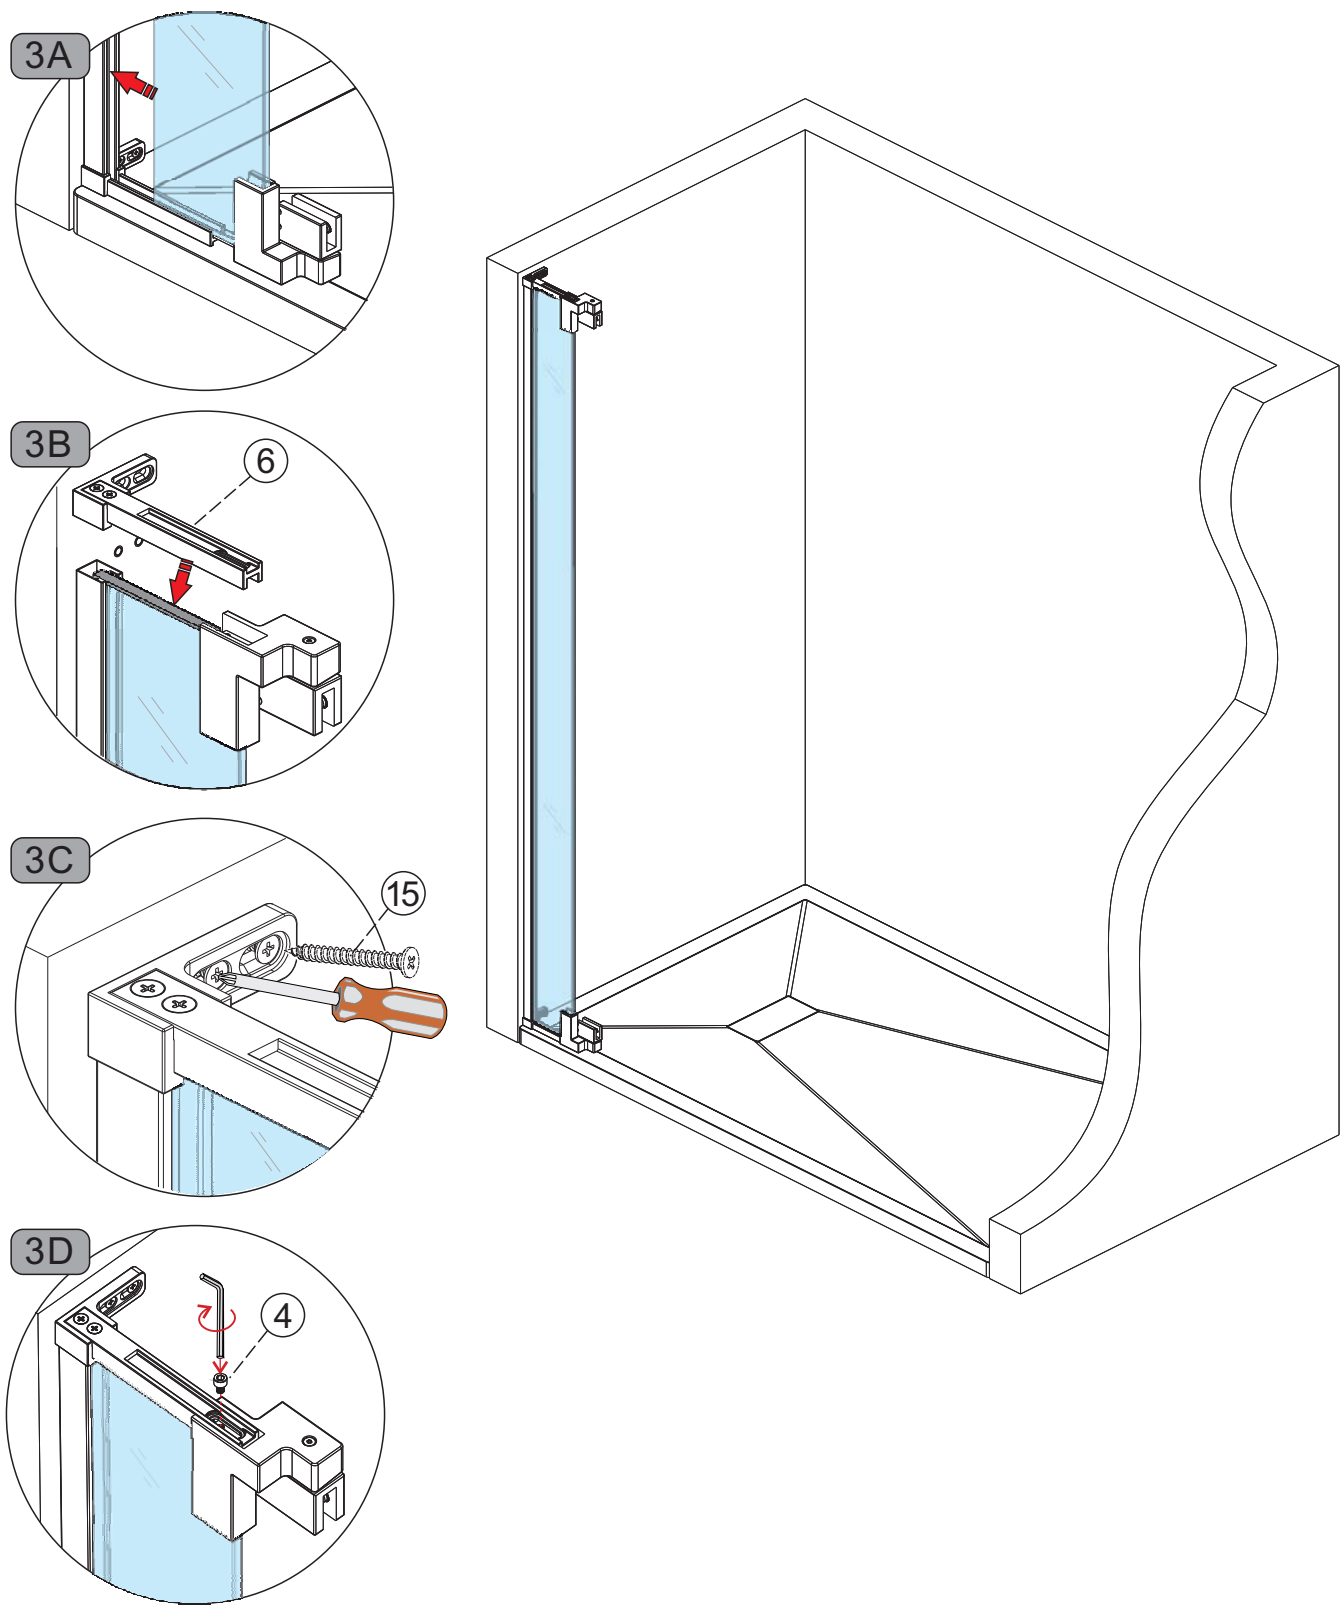

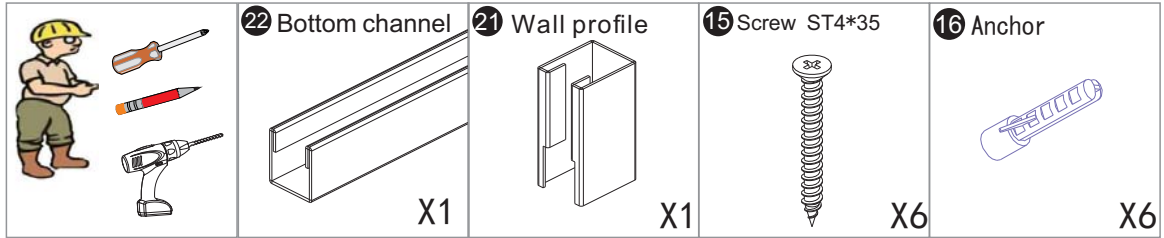



Step 4

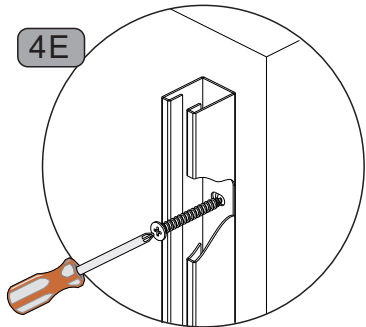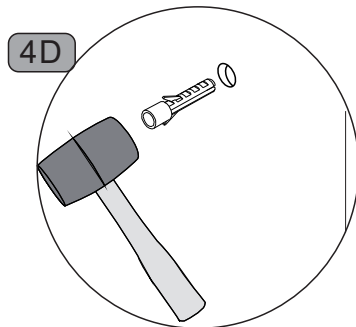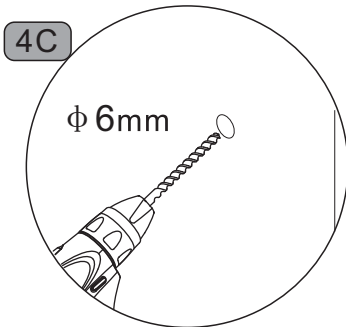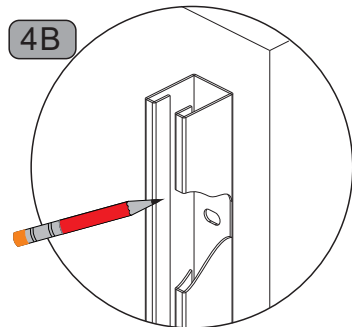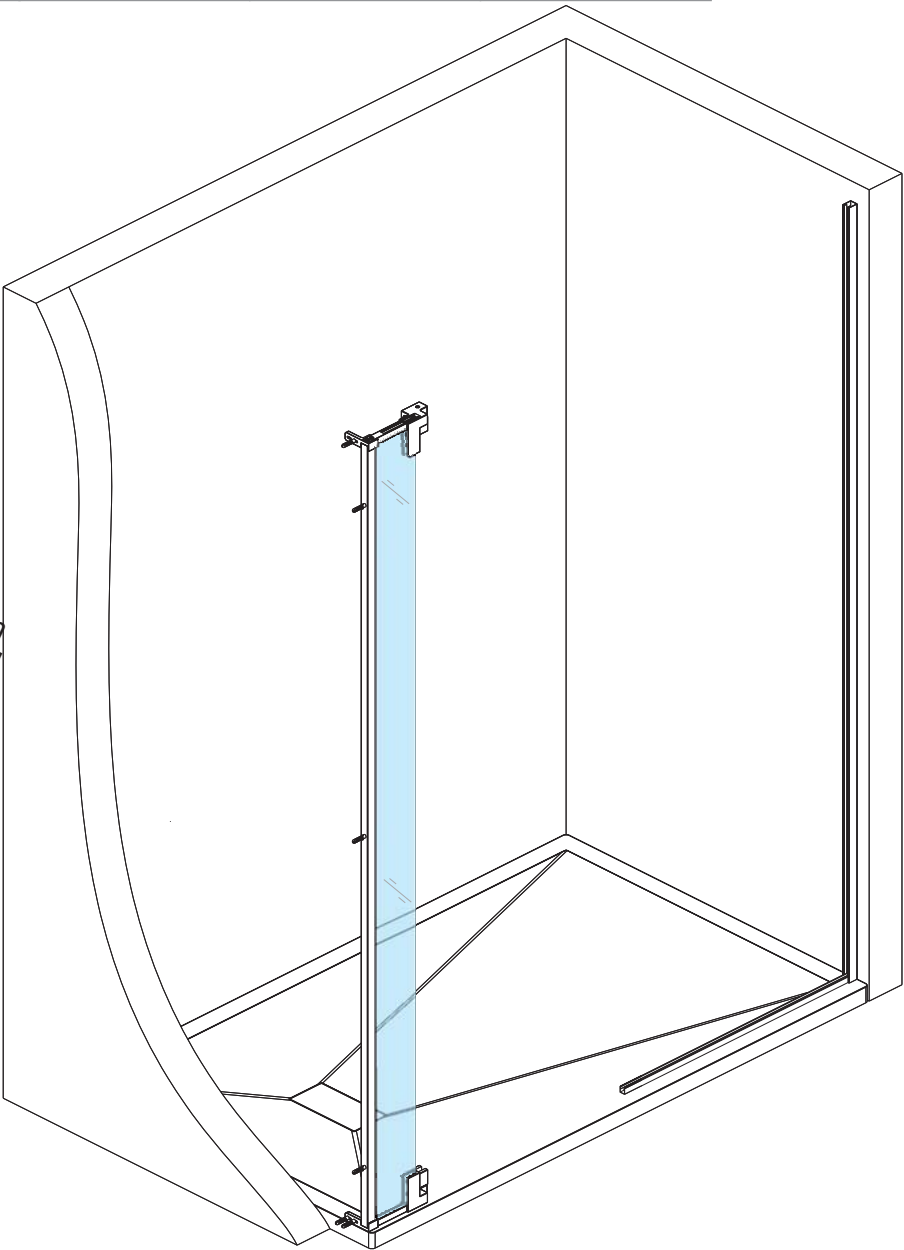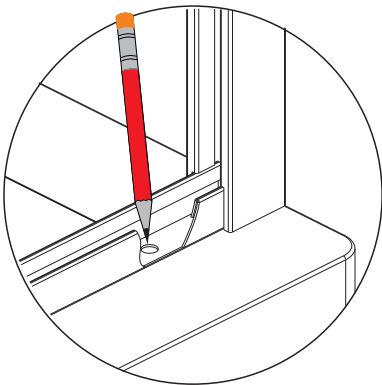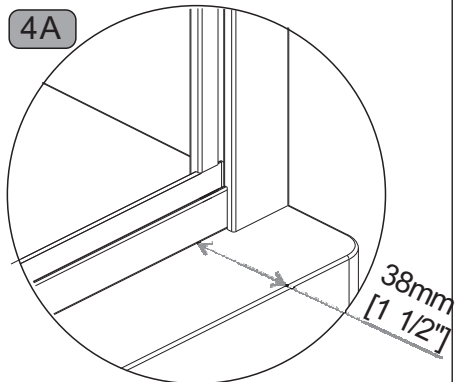




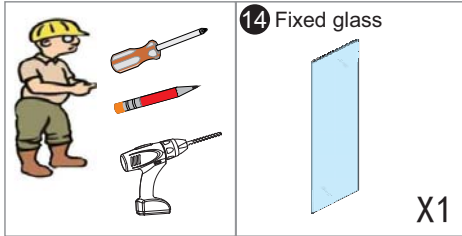



Step 5

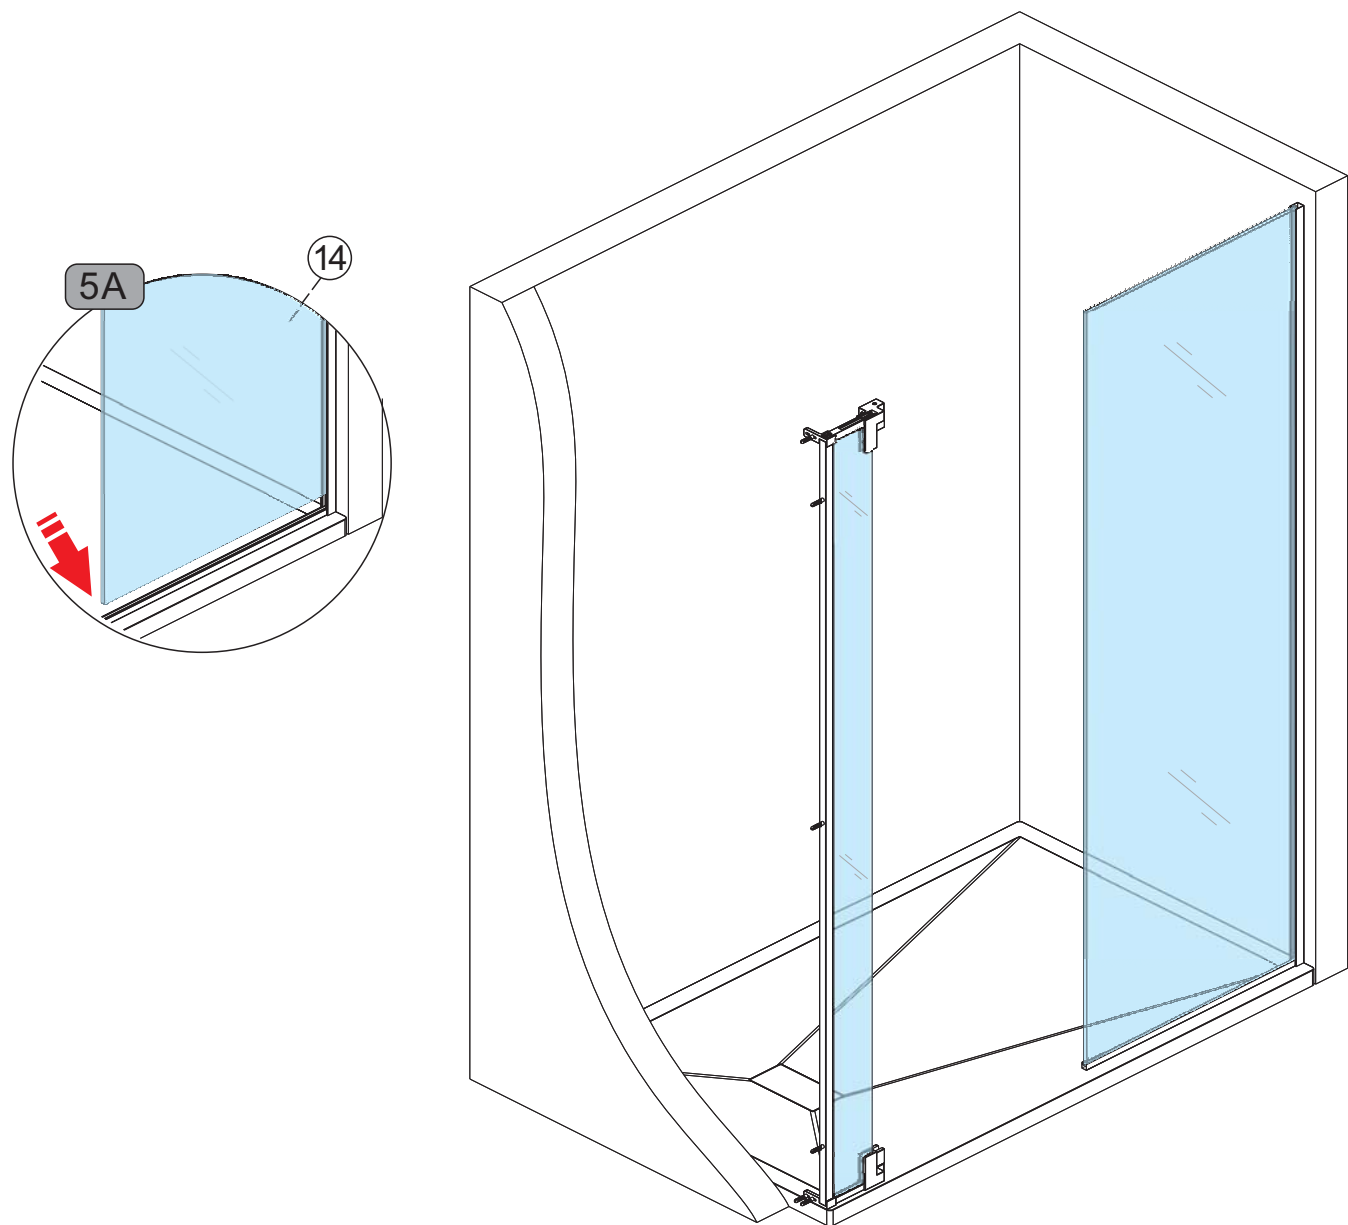

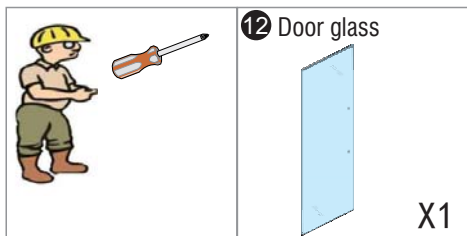


NOTE:
Placement of surfaces

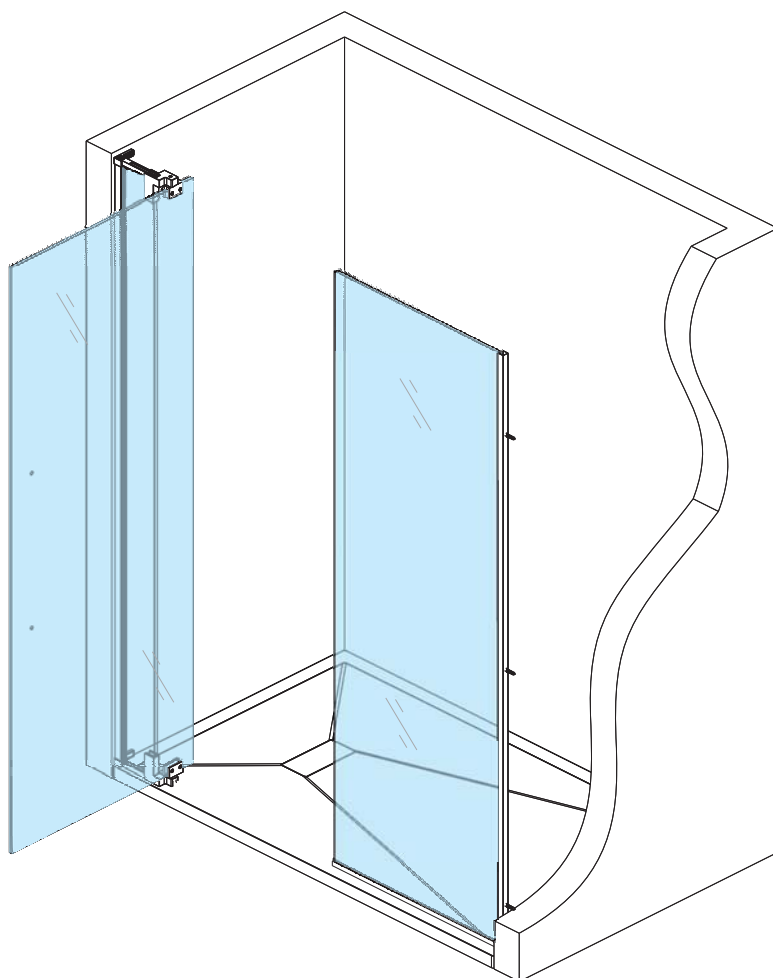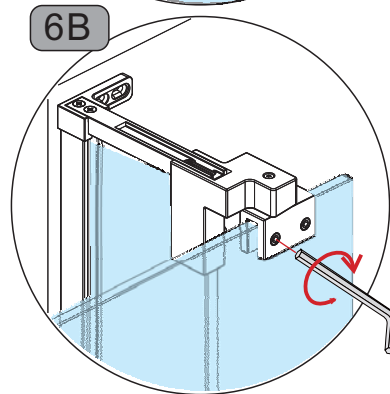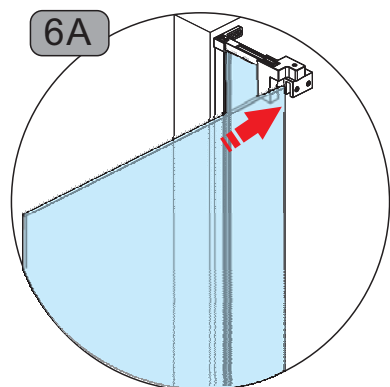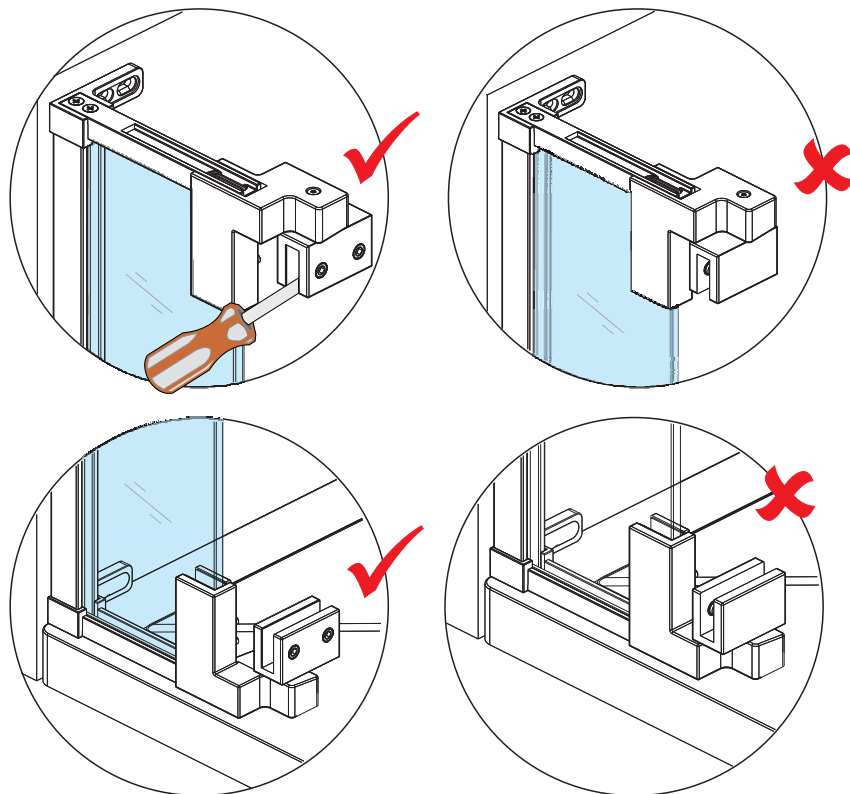


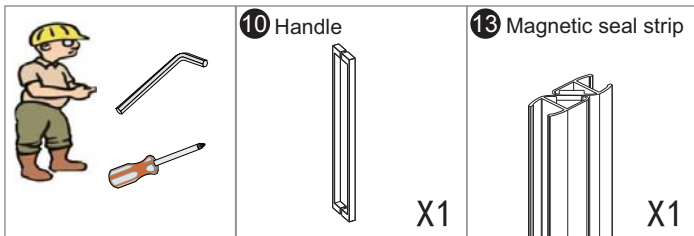

Note: Must pair an 8mm magnetic seal strip with a 10mm magnetic seal strip. Attach the 8mm strip to the door and the 10mm strip to the fixed panel.

Step 7

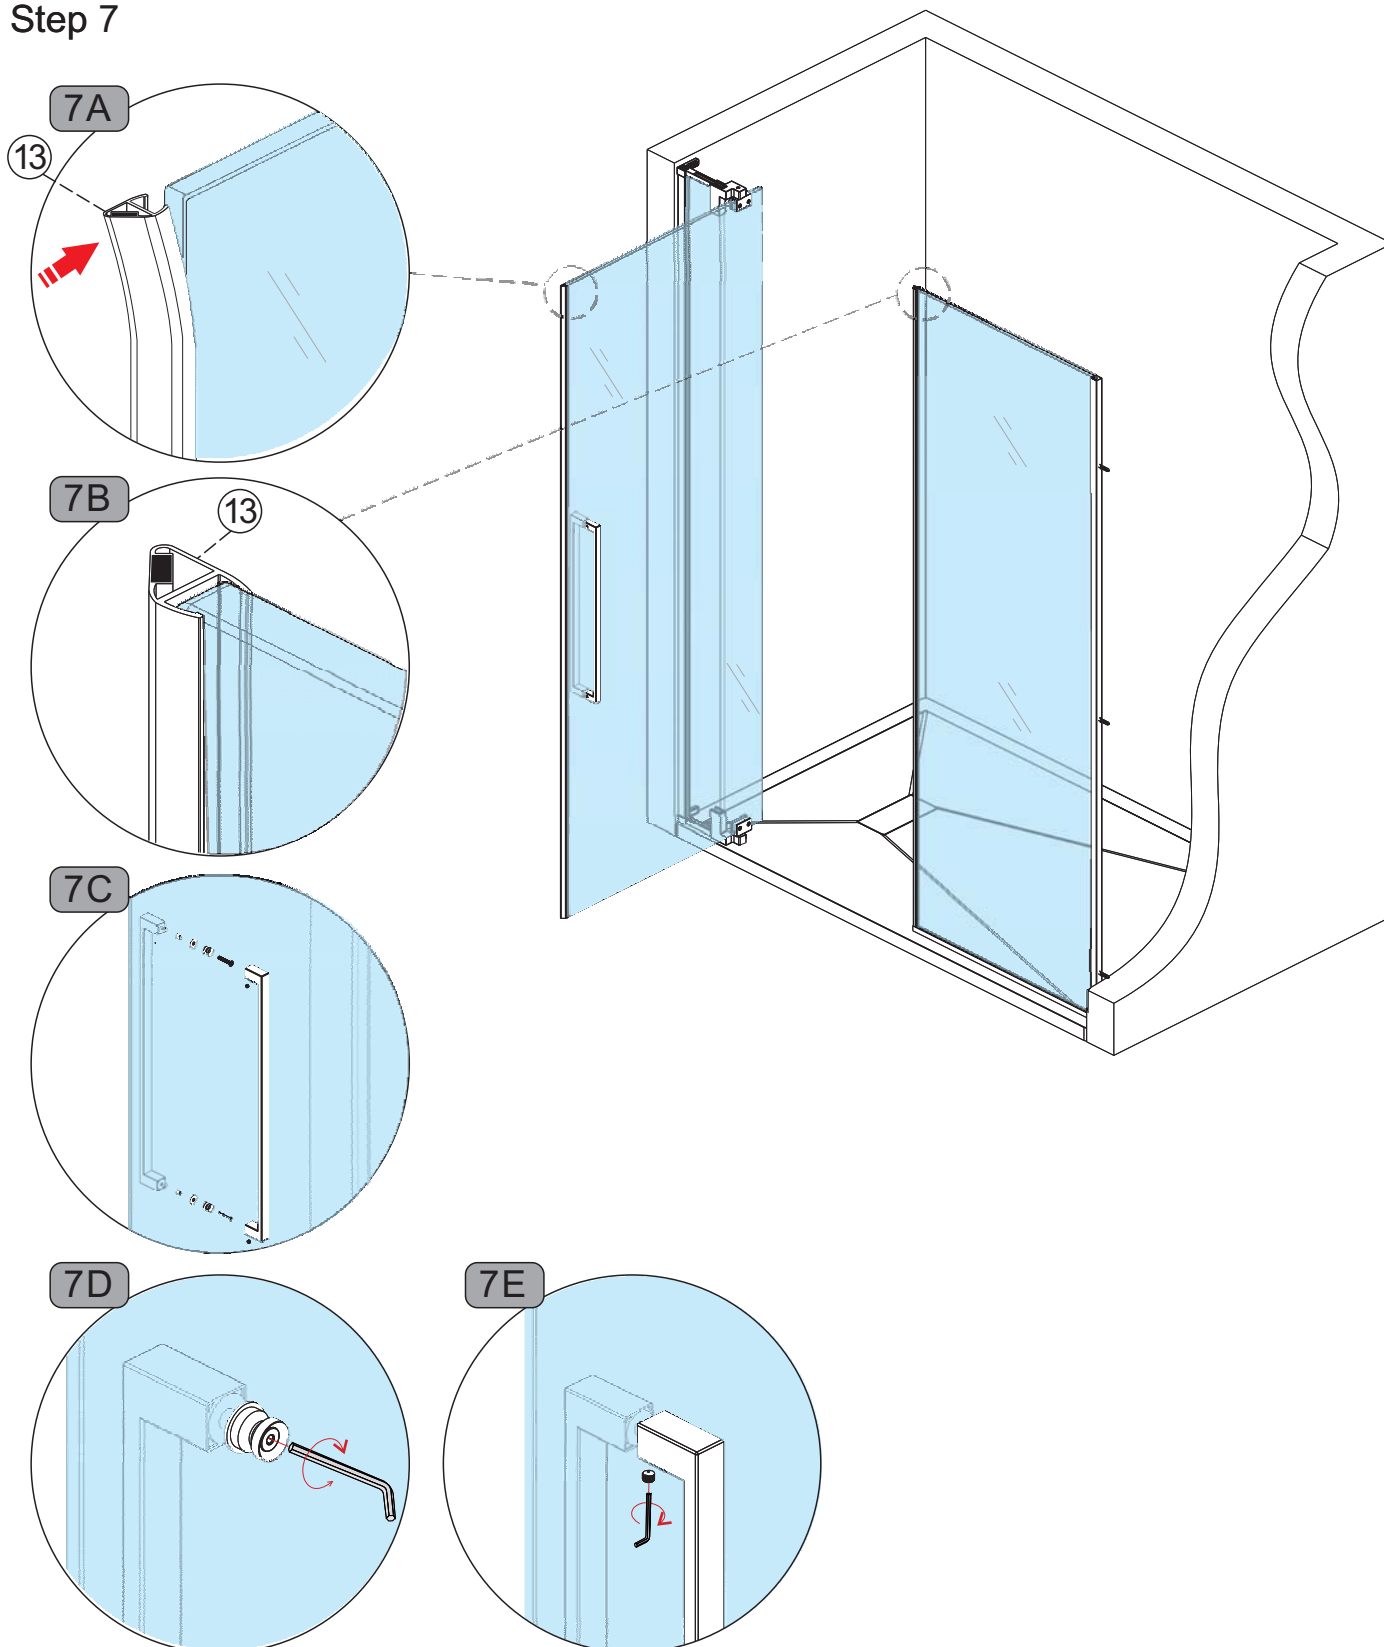


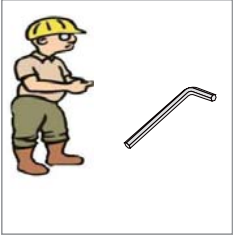

Step 8


8A

Adjustable size 1 can be adjusted by 66mm[2 5/8"]

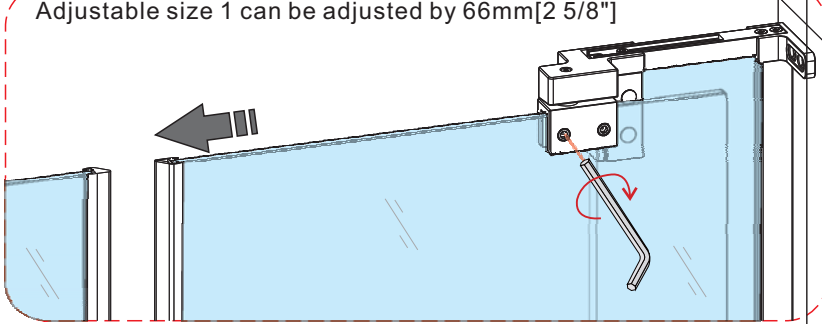


8B

When the adjustment size 1 is not enough, the locking 1,2 can be adjusted by 10mm[3/8"]

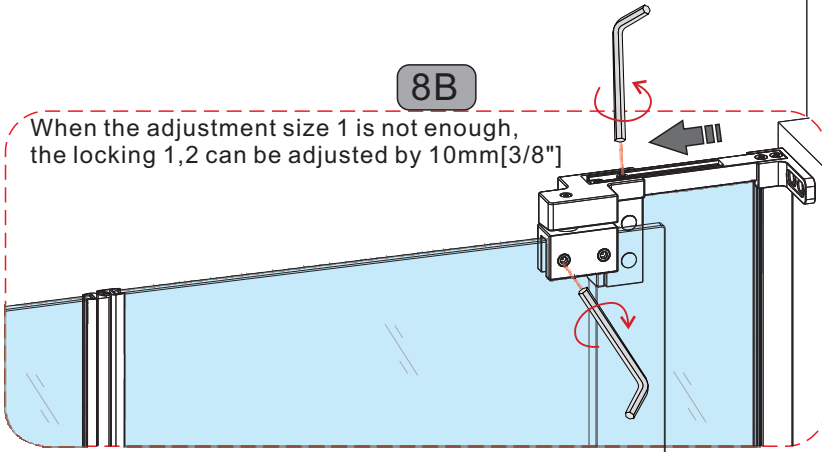



8C







3. Adjust 10mm[3/8"]

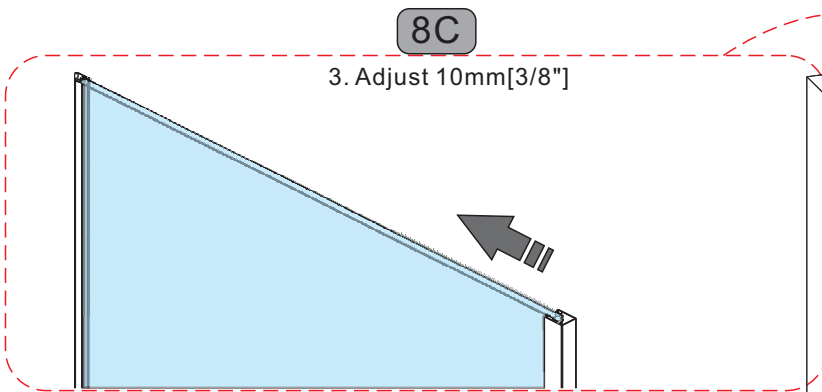


8D


Adjust to seamless locking

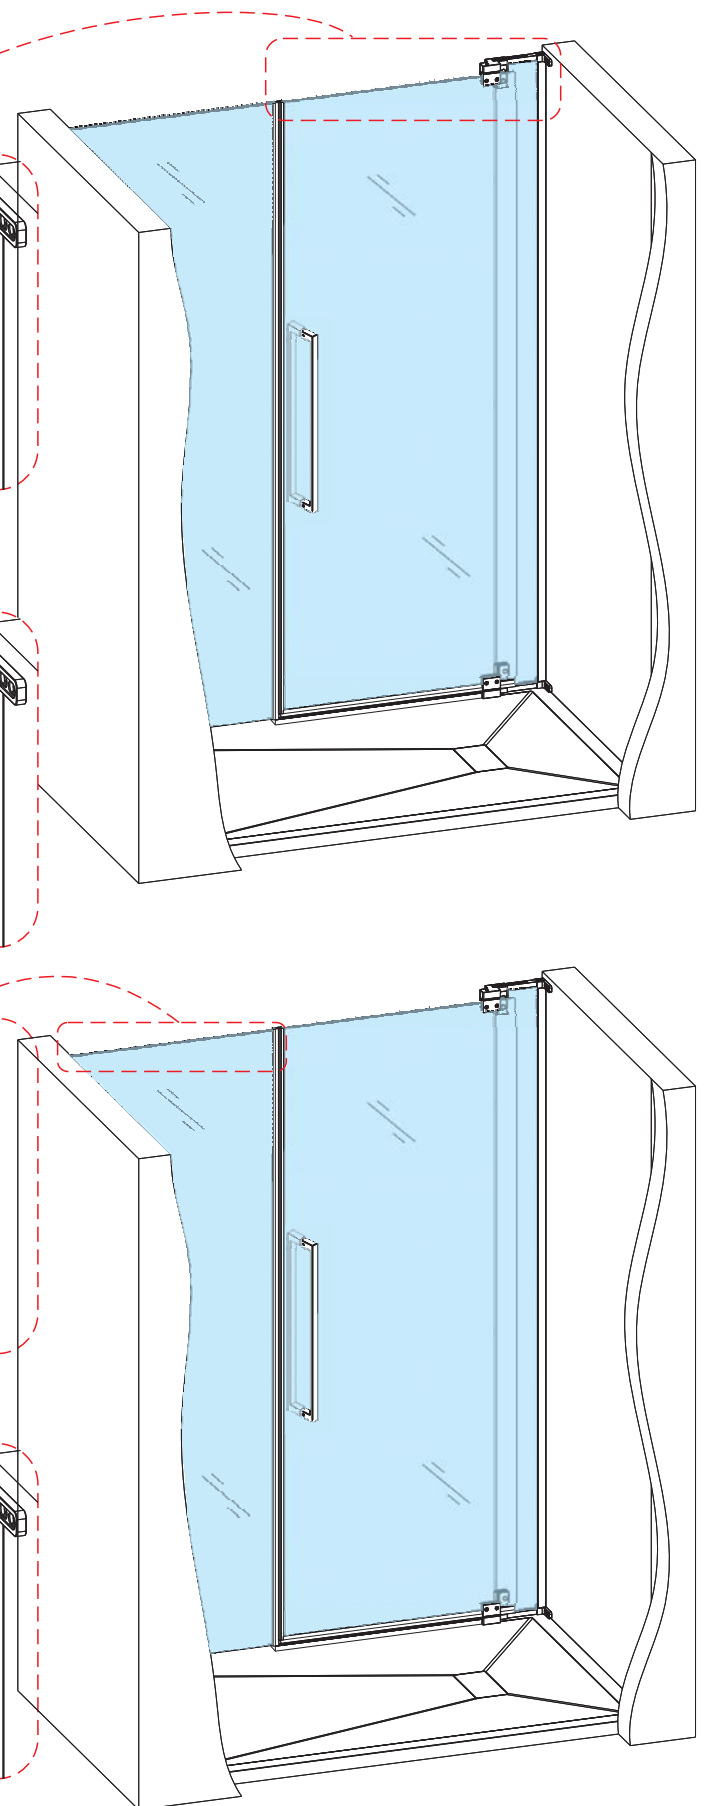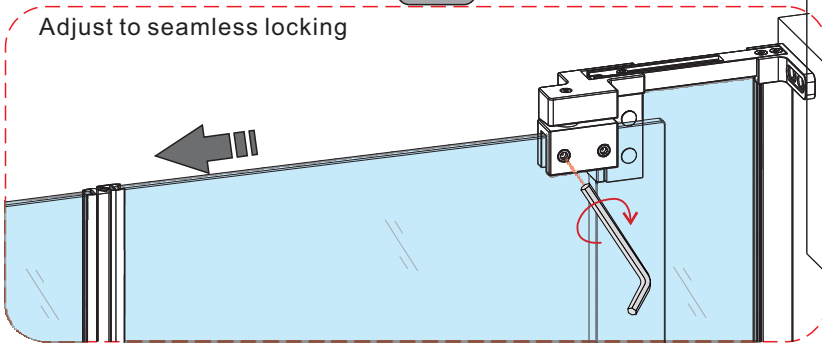

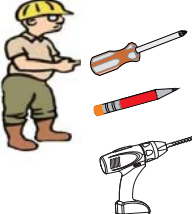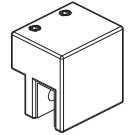	1 Wall base  X1	2 Support bar  X1	3 Glass clips  X1	15 Screw ST4*35  X1	16 Anchor  X1
---	---	---	---	---	---


Step 9

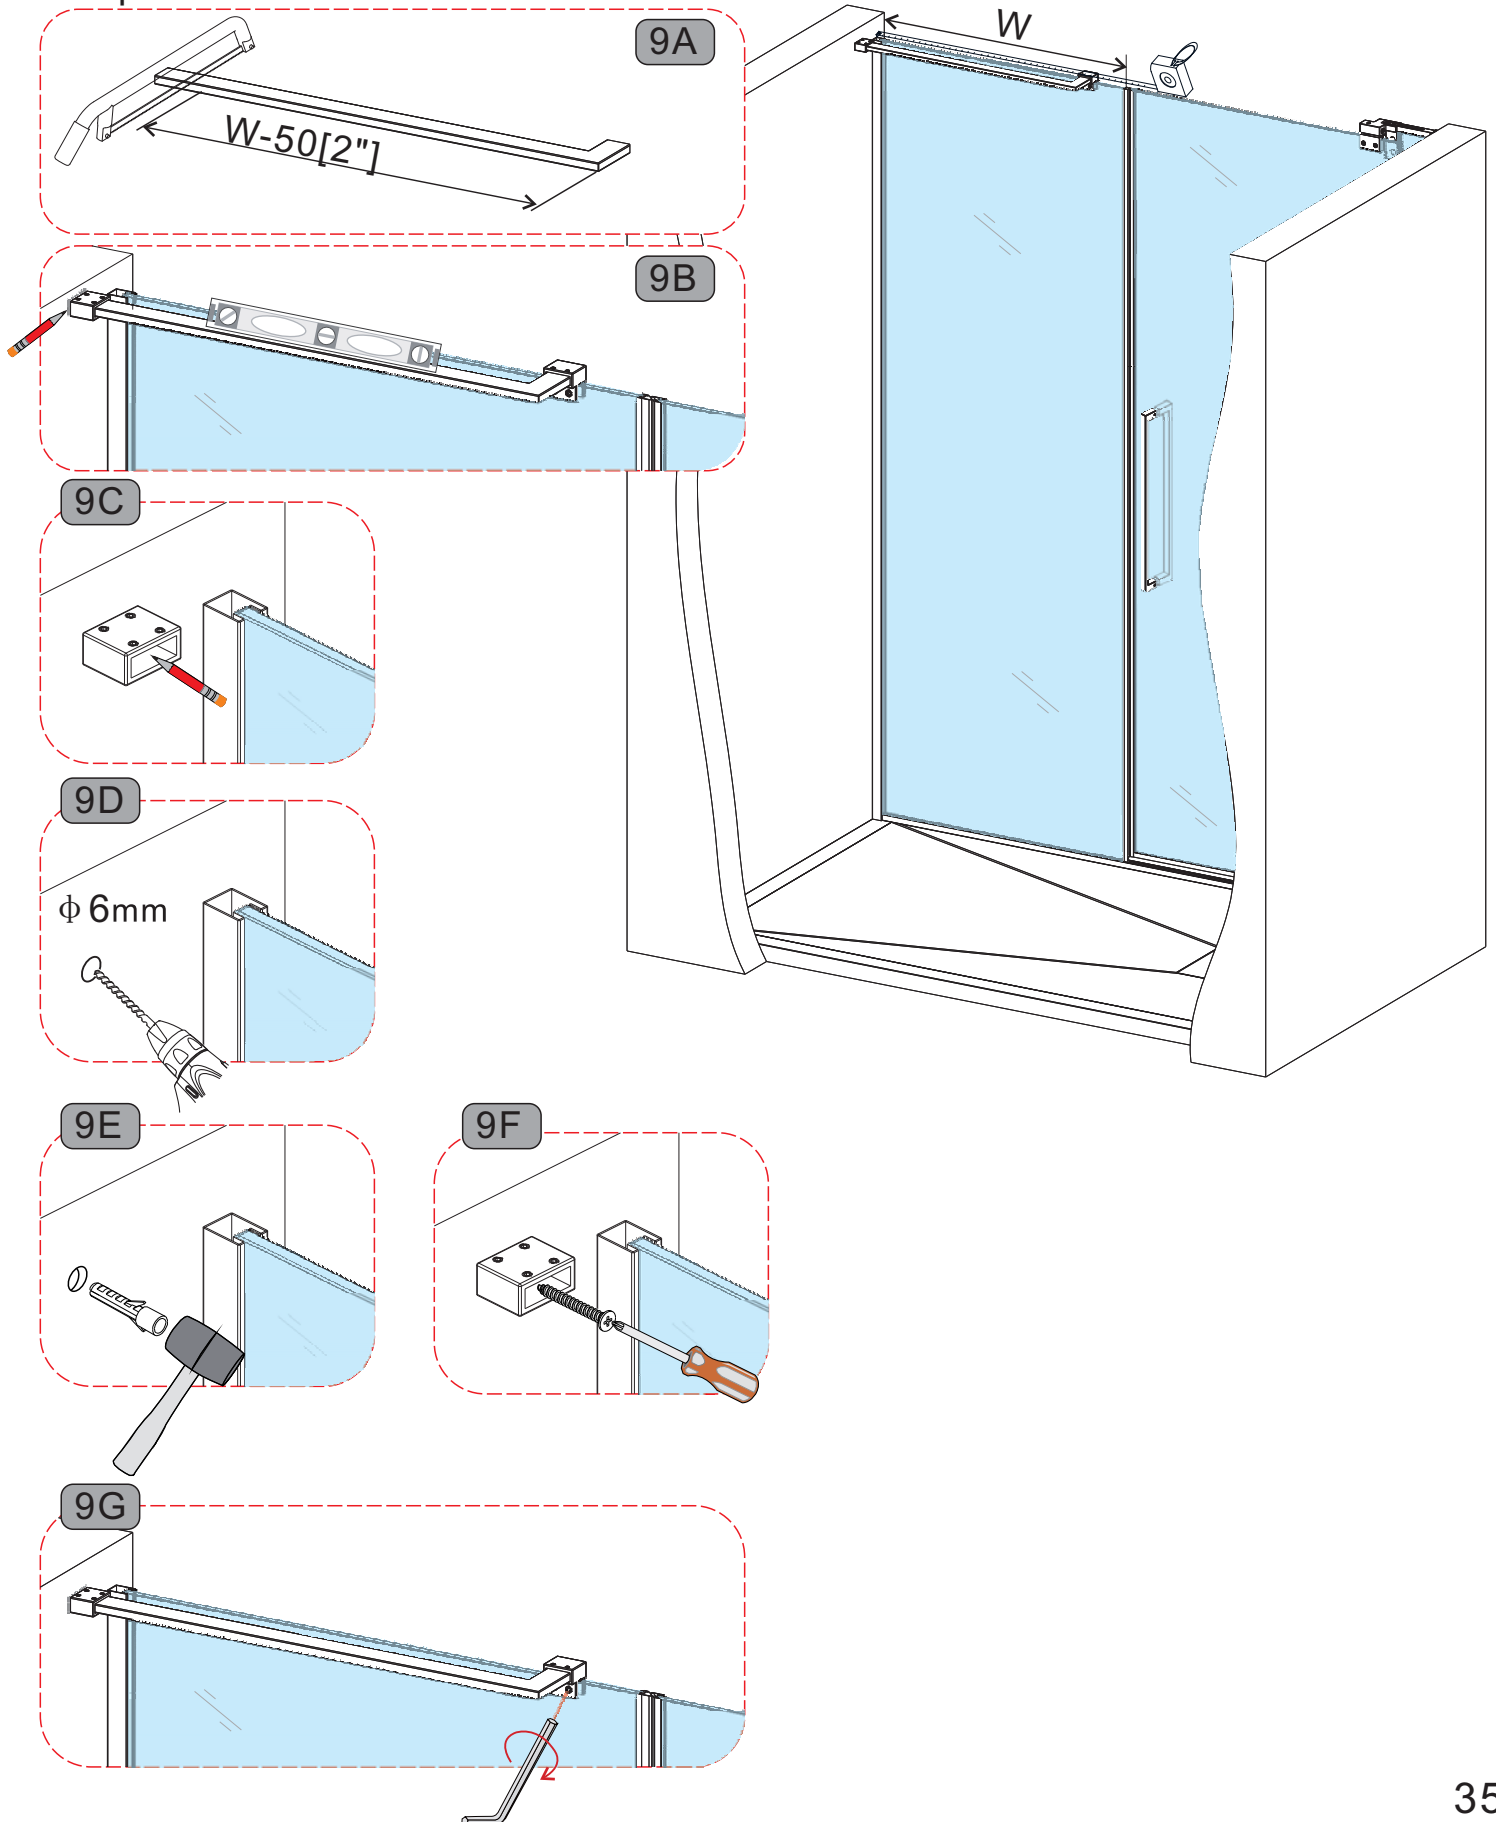

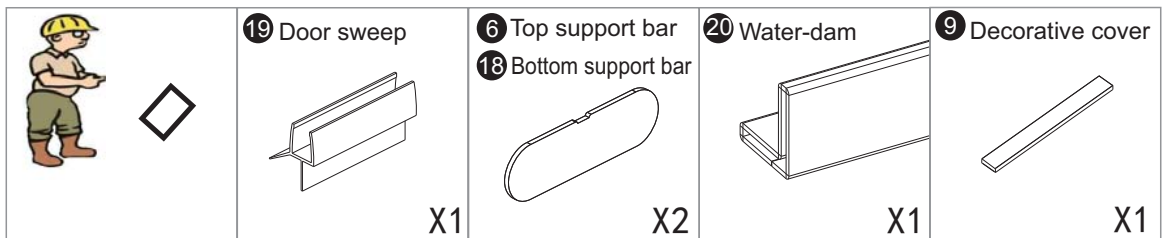


Step 10


10A

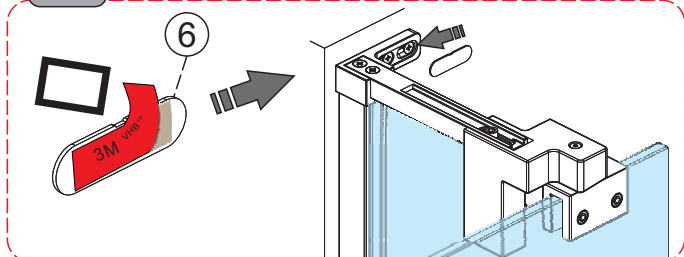



10B


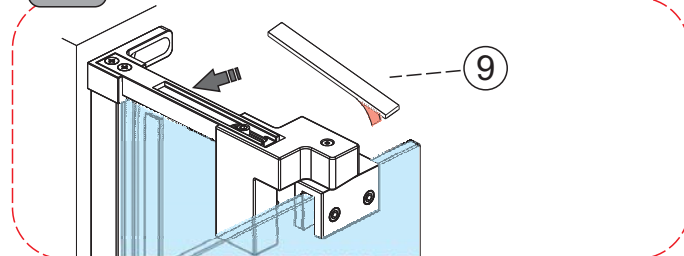


10C

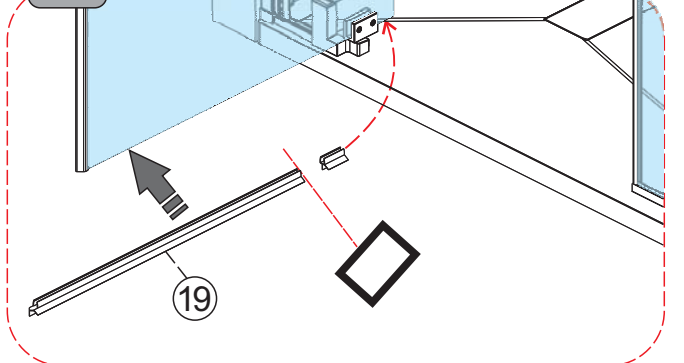

10D

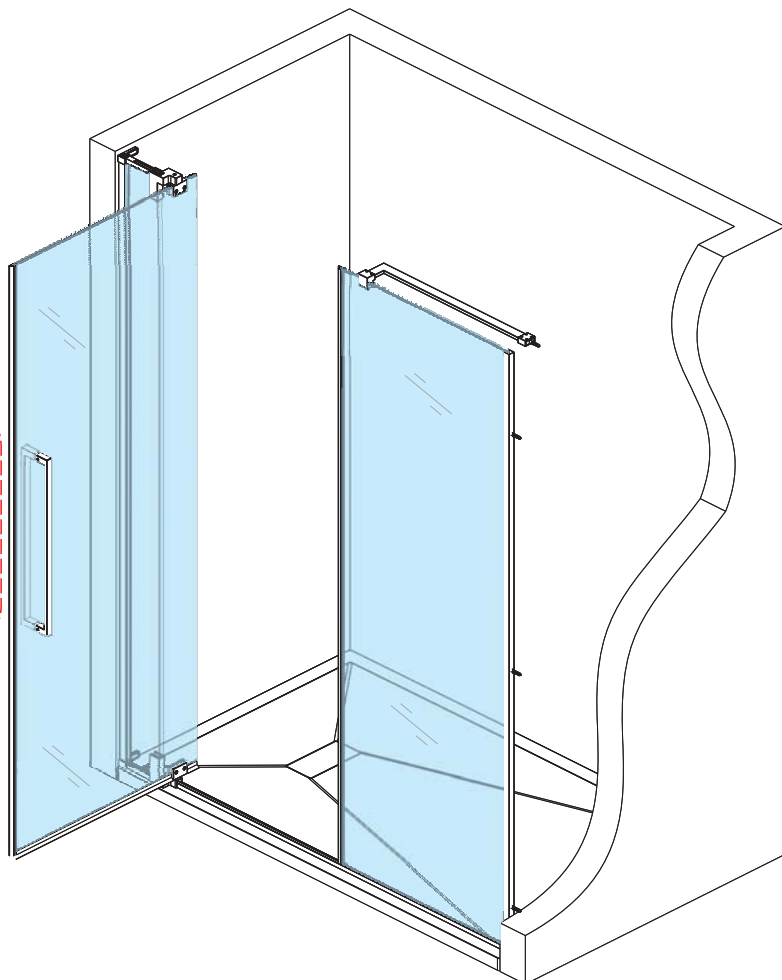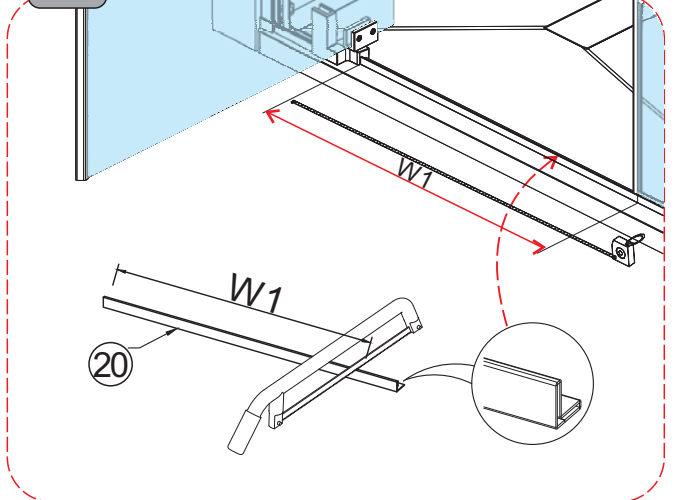

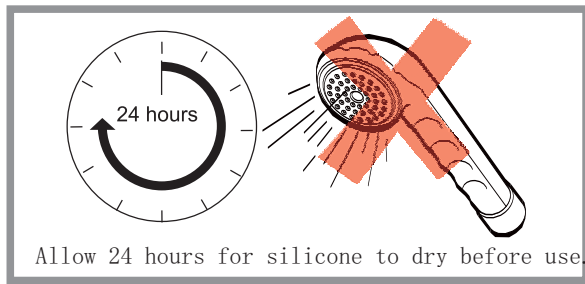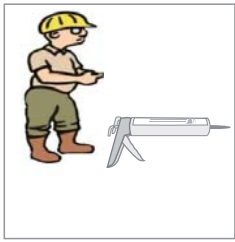

Step 11

